

EUROMATIC



50cm High Velocity Metal Floor Fan

INSTRUCTION MANUAL

Model Number FF5-Z

AFTER SALES SUPPORT
(AU) 1300 886 649 (NZ) 0800 836 761



Contents

Important Safety Instructions	3
Product Overview	5
Getting Started	6
Instructions	7
Other Useful Information	8

Important Safety Instructions

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Make sure you understand all instructions and warnings. Keep the manual in a safe place for future reference, along with any warranty information, your purchase receipt and the original packaging. **Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:**

- **Voltage:** Ensure your outlet voltage and circuit frequency correspond to the voltage stated on the rating label. If this is not the case, do not use the fan.
- **Water:** To protect against fire and electric shock, do not immerse the cord, plug or fan in water or other liquid, or expose the electrical connections to water. Ensure your hands are dry before handling the plug or switching on the fan. Do not use the fan outdoors or on wet surfaces. Protect it from liquid spills.
- **Damage:** Check the power cord regularly for visible damage. If the cord is damaged, it must be replaced by the manufacturer, its authorised service centres or appropriately qualified personnel in order to avoid any hazards.
WARNING! Do not pick up or operate the fan if the supply cord, plug or housing is damaged, or after it malfunctions or has been dropped or damaged in any manner. If damaged, contact our after sales support centre for advice.
- **Protect the power cord:**
 - Do not operate the fan with the cord coiled up; always fully unwind.
 - Do not twist or kink the cord or let it touch heated surfaces.
 - Do not put any stress on the cord where it connects to the product.
 - Never carry the fan by the cord.
 - Arrange the cord away from any traffic area so no one will trip over it.
 - Do not run the cord under carpeting or cover it with rugs or runners.
- **WARNING! No extension cord, no timer:** Do not use this fan with an extension cord, plug adaptor, external timer or separate speed control device.
- **Connection:** To insert the plug, grip it firmly and guide it into the outlet. Do not use more than one electrical appliance at the same time on the same outlet.
- **Disconnection:** Do not use the power button as the sole means for disconnecting power. Always unplug the fan from the power outlet when it is not in use and before cleaning, servicing, moving or storing the appliance. Grasp the plug and remove it from the outlet, do not pull the cord when disconnecting.
- **Guard removal:** Ensure the fan is disconnected from the power supply before removing a front or rear guard (grille).
- **Attachments:** The use of accessory attachments not recommended in this manual may cause injury or hazards.

Important Safety Instructions (Cont.)

- **RCD:** Unless your home is already fitted with a residual current device (safety switch), we recommend installing an RCD with a rated residual operating current not exceeding 30mA to provide additional safety protection when using electrical appliances. See your electrician for professional advice.
- **Domestic use only:** This appliance is intended for indoor household use only. It is not suitable for commercial, industrial or outdoor use. Do not use it for anything other than its intended purpose, such as for drying clothes. Only use it as described in this manual. Any other use may cause fire, electric shock or injury.
- **Usage restriction:** This fan is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Children:** This fan is not a toy. Supervise children to ensure they do not play with it. Close supervision is necessary when any appliance is used by or near children.
- **WARNING! Do not leave unattended during use!** Always switch it off and unplug when not in use, if left unattended and before cleaning and storing.
- **Location:** Place the fan on a dry, flat, stable surface to avoid overturning.
- **Keep the top clear:** Do not place anything on top of fan.
- **Proper assembly:** Do not operate the fan until fully assembled with all parts; the fan must stand upright for operation. Do not use the appliance without the protective grilles (rear and front guards). Do not attempt to force the grille in order to stop or start the fan.
- **WARNING! DO NOT use the fan in the following areas:**
 - * near an open flame, a hot burner, oven or other source of high heat
 - * on a soft surface (such as carpet) or where it may tip over during use
 - * outdoors or in areas of high humidity without suitable ventilation (such as in a bathroom, laundry area, near a sink, washer, pool or any source of water)
 - * near curtains, plants, window furnishings or where objects can become caught in the blades
 - * near a window, where rain may create an electrical hazard
 - * in areas where paint, petrol, etc. is stored and there is a risk of explosion or fire from flammable gases, or in areas where substances are being sprayed.
- **CAUTION! Personal safety:** Avoid contact with moving parts. Never insert fingers, pencils or any other objects through the grilles/housing when the fan is running. Keep hair and loose clothing well away from the fan when it is in use.
- **Free airflow:** Ensure nothing is blocking the air outlet and intake. Do not insert objects into any opening as this may cause electric shock and/or a fire hazard.
- **Misuse:** We accept no liability for any damages or personal injury caused by misuse of the product and/or failure to follow these instructions.

Product Overview

Parts list

- 1 Front rear safety grilles (guards)
- 2 Fan blade
- 3 Motor with speed control (at the back)
- 4 Vertical tilt-adjustment bolt
- 5 V-shaped stand (with protective rubber feet)



NOTE: Due to continued product improvement, images and illustrations in this manual may vary slightly from the product purchased. All images in this manual are for reference purposes only. Parts are not necessarily pictured to scale.

Getting Started

Unpacking

- This product has been packaged to protect it against transportation damage. Unpack the appliance parts and keep the original packaging carton and materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the appliance when it is not in use. In the event that the packaging is to be disposed of, please recycle it where possible.
- Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.
- Unwind the cord and inspect it for damage. Do not use the appliance if the appliance or cord has been damaged or is not working properly.
- Make sure you have read and understood all instructions and warnings in this manual. Refer to the pictures and illustrations to familiarise yourself with the product and identify all parts. Pay particular attention to the safety instructions on the previous pages.
- Your new fan has been shipped partially assembled to reduce wastage of packaging material, paper cartons and weight. The fan head has to be attached to the stand; instructions are provided below.

Stand assembly

1. Position the V-shaped fan stand on the floor.
2. Slide the tubes extending from the fan assembly into the fan stand. Push the tubes down until the spring-loaded button protrudes through the holes, locking the parts into place (Fig. 1).
3. Ensure that the fan assembly is orientated on the V-shaped stand as shown in Fig. 1.

Fig. 1



Instructions

Using the fan

This fan is equipped with three speeds and the fan head can be tilted up/down. To use the fan, follow the simple instructions below.

Place the fan on a dry, level surface where it will not overturn during use. It is designed for floor use.

Make sure the speed control knob at the back of the fan is pointing to the OFF [0] position, then insert the power plug into an appropriate electrical outlet.

Switching on and speed selection

Rotate the speed control knob at the back of the fan to the desired fan speed. The fan will start straight away at the set speed: [1] Low, [2] Medium, [3] High. Rotate the speed control knob to the OFF [0] position to switch the fan off.



Tilt adjustment

This high velocity fan can be used alone or in conjunction with air conditioning. Rotating the fan head upward serves to pull air from the floor and circulate it throughout the entire room (Fig. 3).

Simply move the fan head gently up or down to the desired position. Ensure the screws at the sides of the fan head are tightened securely.

CAUTION: Do not tilt the fan head further than it is intended to go to avoid damaging the unit.

Fig. 3



Other Useful Information

WARNING!

- Before cleaning, maintenance or moving the fan, and before removing a front or rear grille, switch off the fan and unplug it from the wall outlet.
- Do not immerse the fan in water or other liquids. Do not spray it with liquids. Do not allow water to drip on or into the fan motor housing.
- Never use petrol, solvents, harsh detergents, or abrasive or alkaline cleaners on the fan.

Cleaning and maintenance

Dusting: Clean your fan periodically by lightly running a vacuum cleaner nozzle (soft brush) over the front and rear grilles to remove any dust or dirt that may have accumulated inside or on the unit. Alternatively, use a soft, dry cloth for dusting.

Stubborn stains: Use a slightly damp, soapy cloth for stubborn stains but be sure the cloth is not too wet. Use caution around the motor housing area. Do not allow the motor or other electrical components to be exposed to water.

Thorough cleaning: To remove stains from the blades, or for thorough cleaning before storage, you need to disassemble the fan head.

- First remove the front grille from the rear grille. The front grille does not remove easily for safety reasons. It is held in place by safety screws and nuts. Remove the screws and nuts from the rim that connects the front to the rear grille. Then remove the front grille.
- Undo the screw that holds the fan blade onto the motor shaft. Carefully remove fan blade from motor shaft.
- Wipe the grilles and fan blade with a clean and slightly damp sponge and wipe dry with a dry cloth.
- Reassemble the fan head following the above disassembly instructions in reverse.

Storage

When storing your fan in the off season, make sure to keep it in a safe, dry location, protected from dust.

We recommend using the original carton for storage. Alternatively, place a large plastic bag or piece of material over the cleaned appliance for dust protection.

Other Useful Information (Cont.)

Service/repair

The appliance requires no maintenance and contains no user-serviceable parts. Do not take the motor part apart; do not attempt to repair or modify the fan. Do not operate the fan if its power cord or plug is damaged, or when it is working abnormally.

In case of damage or malfunction, or if the cord is damaged, have the unit repaired by trained personnel only, or contact our after sales support centre for advice on repair or replacement. Before phoning for a service, please ensure that your fan is properly assembled and connected to your power supply.

Technical specifications

Power	200W, 220-240V ~, 50Hz
Fan speeds	3 (Low - Medium - High)
Dimensions (mm)	555 x 585 x 310 (approx.)
Weight	5.76kg (approx.)

Compliance

This appliance has been fully tested and meets all requirements as set out by standards AS/NZS 60335.1 and AS/NZS 60335.2.80.



The RCM Mark (Regulatory Compliance Mark) indicates that the product complies with the relevant guidelines of the ACMA as well as corresponding government requirements for the safety of electrical devices.

Responsible disposal

- At the end of its working life, make the appliance unserviceable by unplugging it from the power outlet and cutting the power cord.
- Do not throw this appliance out with your household rubbish. Electrical and electronic products contain substances which can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

This page has been left blank intentionally.

This page has been left blank intentionally.

Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, make sure to contact our After Sales Support Centre on (AU) 1300 886 649 or (NZ) 0800 836 761 for advice.

Distributed by Tempo (Aust) Pty Ltd ABN 70 106 100 252

PO BOX 6056 Frenchs Forest, Australia NSW 2086

Customer Helpline:

(AU) 1300 886 649 (NZ) 0800 836 761

Email: info@tempo.org

For an electronic copy of this manual, please contact our after sales support centre.

IM Version No: V1.0

Issue Date: May 2020

After Sales Support

☎ (AU) 1300 886 649 (NZ) 0800 836 761 | ✉ info@tempo.org