

POOL SAFE GATE LATCH **EASY INSTALLATION GUIDE**


Before installing a pool gate, check with your local Council regarding specific pool fence requirements.

Note: Images may differ slightly from actual product

LATCH

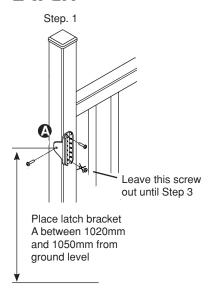


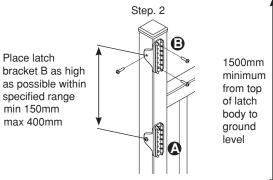


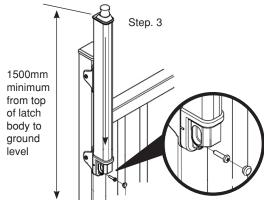

- 1. Position latch bracket A (lower bracket) between 1020mm & 1050mm from ground level. Fix to post with two screws, leaving the bottom screw out until later (Step. 3).
- 2. Place latch bracket B (upper bracket) as high as possible within specified range from bracket A - min. 150mm, max 400mm.
- 3. Starting at the top slide latch body fully down onto brackets, then screw to lower bracket. Top of latch body must be a minimum of 1500mm from ground level.

STRIKER

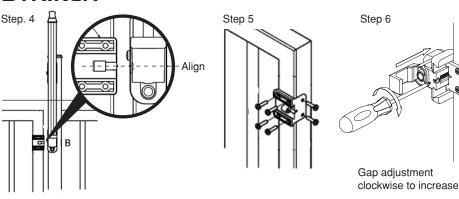

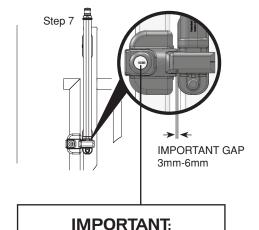

ALWAYS REMOVE KEY

WHEN NOT IN USE

- 4. Align Striker bracket with latch using the alignment notches (Step 4).
- 5. Attach Striker bracket to the gate frame using the screws provided (Step 5). A minimum of 4 screw points for standard width frame or 6 screw points for wider frames.
- 6. Slide Striker onto bracket, fix using adjuster screw (Step 6.)
- 7. Adjust striker clearance 3mm-6mm turning the adjuster screw clockwise to increase (Step 7).

HANDLE

Optional handle can be fixed to gate if required. Do not install below striker bracket.



