
## Wedgeless Deluxe Window Handle

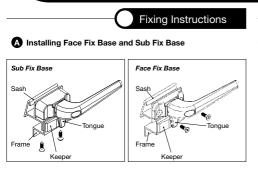

**Yale**®

- Remove existing handle by unscrewing fixing screws or drilling out the head of the rivets if used
- Fitting face fix and sub fix handles. If the handle base has exactly the same hole centres, simply re-fit the new handle with screws provided. For sub fix base, refer to handy hints Note: Rivets can be used if prefered
- Test operation of handle and ensure that the tongue holds the window sash firmly against frame. This will ensure that the window is sealed


## Installation Notes

 - Ensure the location of the holes in the handle base matches your existing handle
- Before drilling any new holes check the OFFSET\* to ensure correct replacement handle selection
- Replacement keepers are available in different thicknesses through your locksmith or hardware retailer
- The "marking gauge" should not be used as a drilling guide as plastic material will allow the drill to wander



Window

- B Replacing Vertical Fix Handle Using Sub Fix Base
- Remove plastic screw cover to expose existing fixing screws and remove handle





Vertical Fix Base

**Note:** If the conical points of the "marking gauge" do not align with the existing screw holes, check the offset before drilling to determine correct hole centres

Fit vertical fix packer to back of the sub fix handle base cavity. Fit new handle with screws provided, refer to handy hints

drilling using a 3.5mm drill




Test operation of handle and ensure that the tongue holds the window sash firmly against the frame. This will ensure that the window is sealed

## Handy Hints

 The screw holes in sub fix handle mounting plates are not pre threaded and the screws provided are "thread cutting". To make installation easier, place the handle on a soft surface and apply a drop of oil or lubricant to the screw thread and drive the screw in and out to pre-cut the thread prior to installation.



The warranty covers manufacturing defects, standard finishes but excludes plated finishes or finishes exposed to a corrosive environment. The warranty excludes damage caused by installation contrary to written instructions and incidental or consequential damage. We recommend regular cleaning with mild detergent.



## ASSA ABLOY