

jumbuck®



Portable Gas BBQ Trolley

Gas cylinder mounting base

- Folding design
- Solid steel construction
- Mounting base to hold gas cylinder (cylinder not included)
- Large 20cm diameter wheels for portability
- BBQ tool hooks
- BBQ mounting points
- Suits Jumbuck Portable Gas BBQs (items 0173342 and 0173343)
- Dimensions: 890L x 540W x 680Hmm



Important: Please retain these instructions for future use

ASSEMBLY INSTRUCTIONS

This trolley has been approved for use with the below BBQ models only

Model no. JBPB19. Fineline. 0173342

Model no. JBPB219. Fineline. 0173343


DO NOT use this trolley if you have purchased a BBQ that is not listed above



Keep your purchase receipt, this will be required to make any claims under the 12 month warranty.


jumbuck

PARTS VIEW


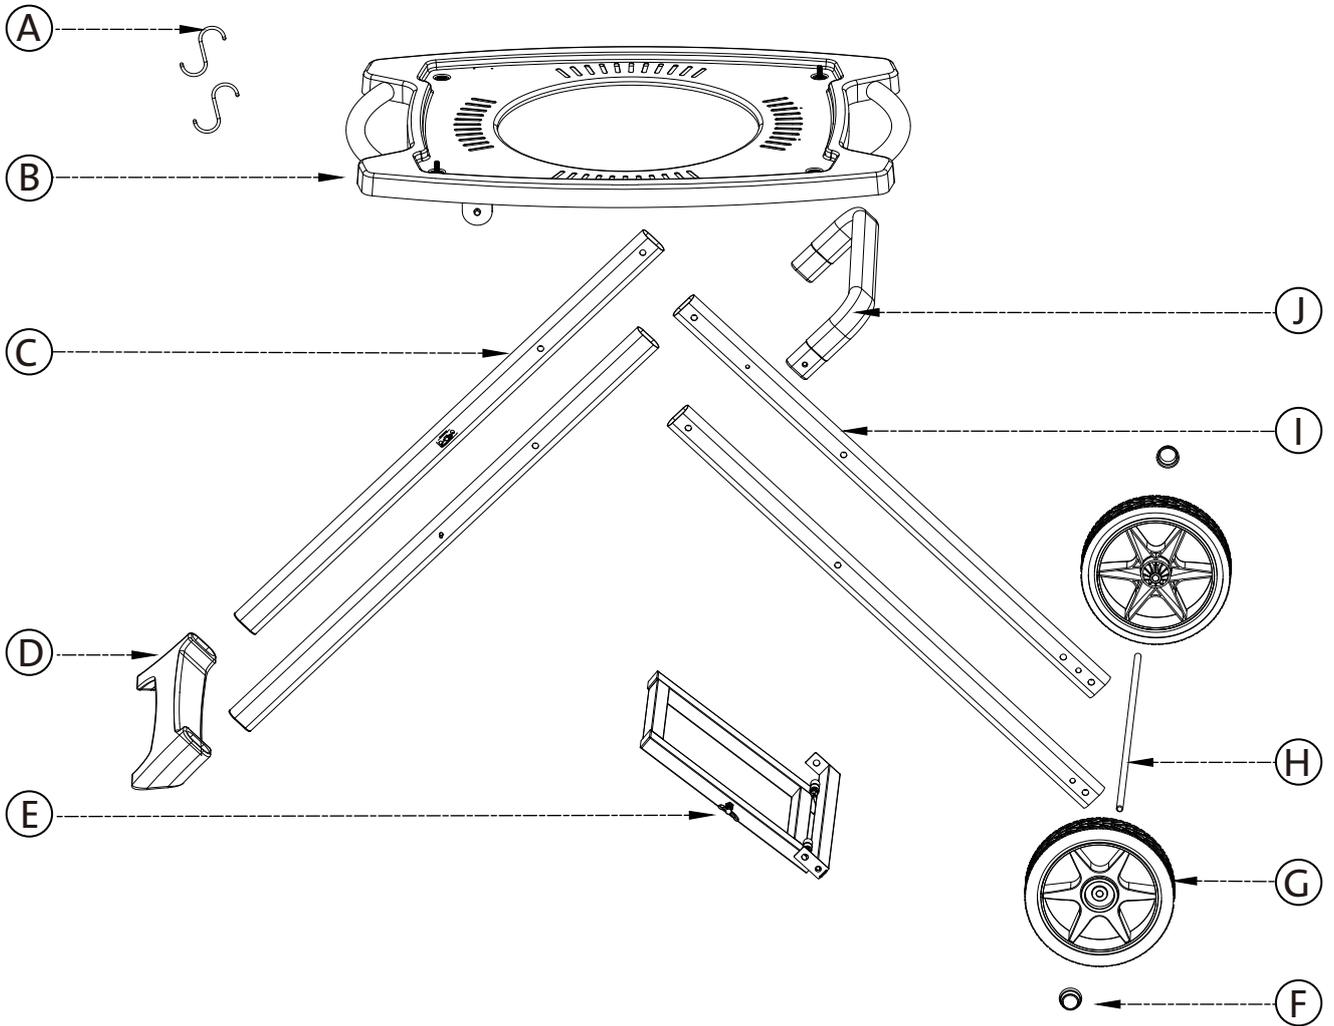


CARTON CONTENTS

 Part list

Part Number	Description	Illustration	Quantity
A	Hook		2
B	Upper panel		1
C	Left long leg		2
D	Leg base		1
E	Gas cylinder mounting base		1
F	Wheel cover		2
G	Wheel		2
H	Wheel axle		1
I	Right leg		2
J	Upper leg support		1

  
Hardware

Part Number	Description	Illustration	Quantity
AA	M6x12		6
BB	Short bolt		2
CC	Long bolt		2
DD	Washer		2
EE	R Pin		4
FF	M6x30		2

ASSEMBLY INSTRUCTIONS


Step 1

Insert the 2 left long leg sections (C) over either side of the upper leg support (J), ensuring the ring side of the spring pin is facing inwards. Use a phillips head screwdriver to secure with 2 x M6x12 screws (AA).

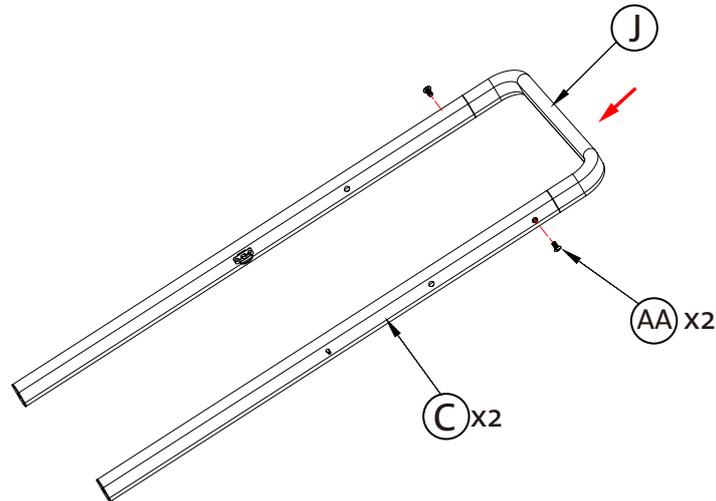

Step 2

Attach the gas cylinder mounting base (E) to the 2 right leg sections (I) by aligning the mounting holes on part E with the mounting holes on parts I. Use a phillips head screwdriver to secure with 2 x M6x12 screws (AA) through the metal nutserts on the inside face of the legs, and 2 x M6x30 screws (FF) through the holes from the outside.

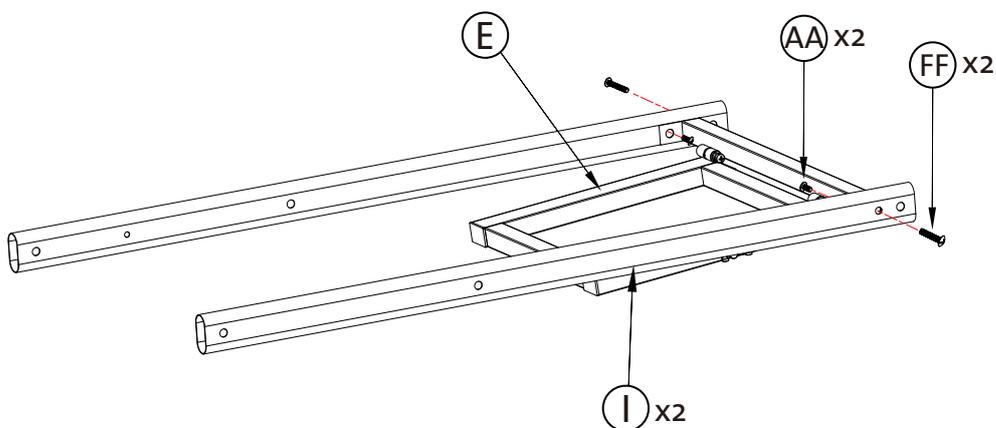


ASSEMBLY INSTRUCTIONS

Step 3

Join the left leg assembly (C&J) together with the right leg assembly (I) by aligning the middle hole on part I with the middle hole on part C as shown below. Secure using the washer (DD) and long bolt (CC).


Insert an R pin through the hole on the end of each bolt to lock into place.

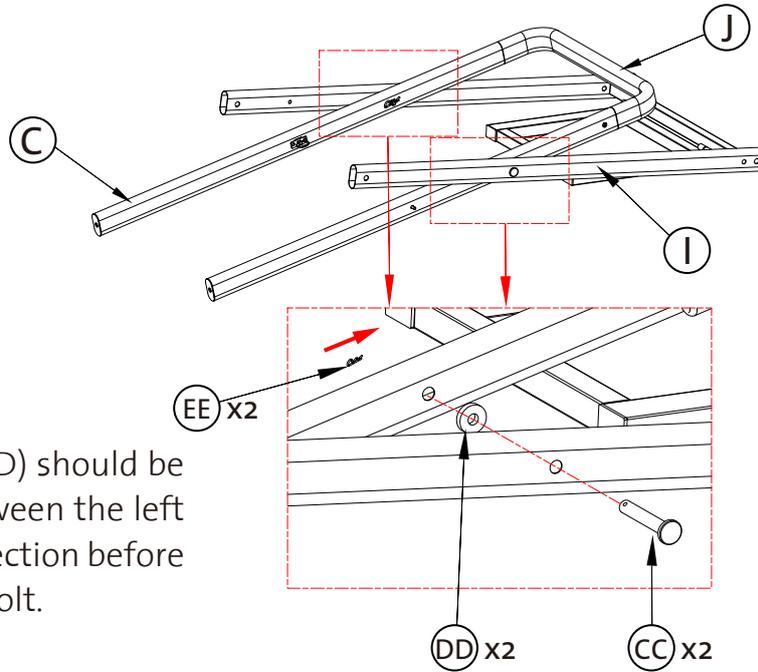

The washer (DD) should be located in between the left and right leg section before inserting the bolt.

Step 4


Insert the bottom of the leg assembly (C&J) into the leg base (D). Use a phillips head screwdriver to secure with 2 x M6x12 screws (AA).

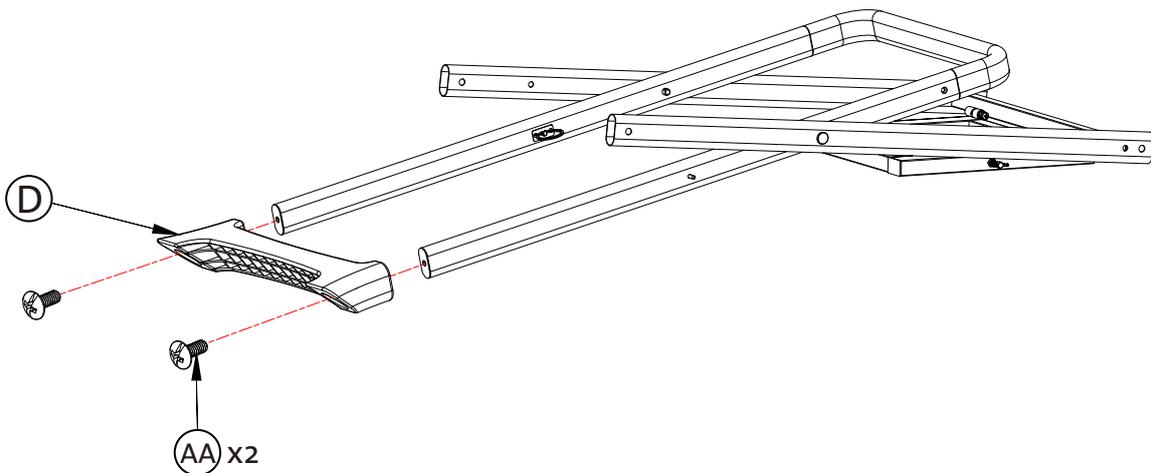

ASSEMBLY INSTRUCTIONS

Step 5


Insert the wheel axel (H) into the hole at the end of the right leg sections (I), near the cylinder mounting base (E). Attach a wheel (G) to either side of the axle. Ensure wheels are secured correctly and are moving smoothly before securing with a wheel cover (F). Use a hammer and gently tap the wheel covers to lock the wheels in place.

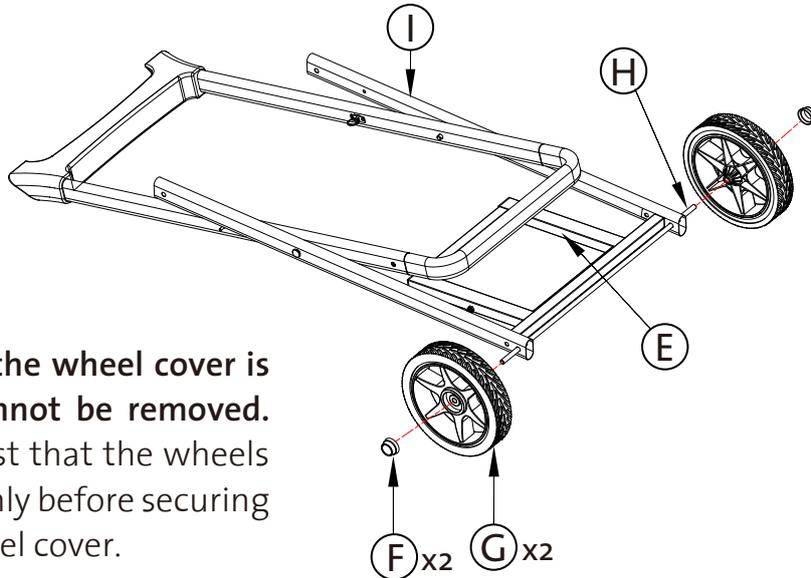

NOTE: Once the wheel cover is secure, it cannot be removed. Be sure to test that the wheels move smoothly before securing with the wheel cover.

Step 6


Assemble right leg frame (I) to the upper panel (B), and lock by 2pcs short bolt (BB) and 2pcs R pin (EE). Ensure upper panel is facing flat side down and leg frame is positioned with the wheels and cylinder mounting base facing up.

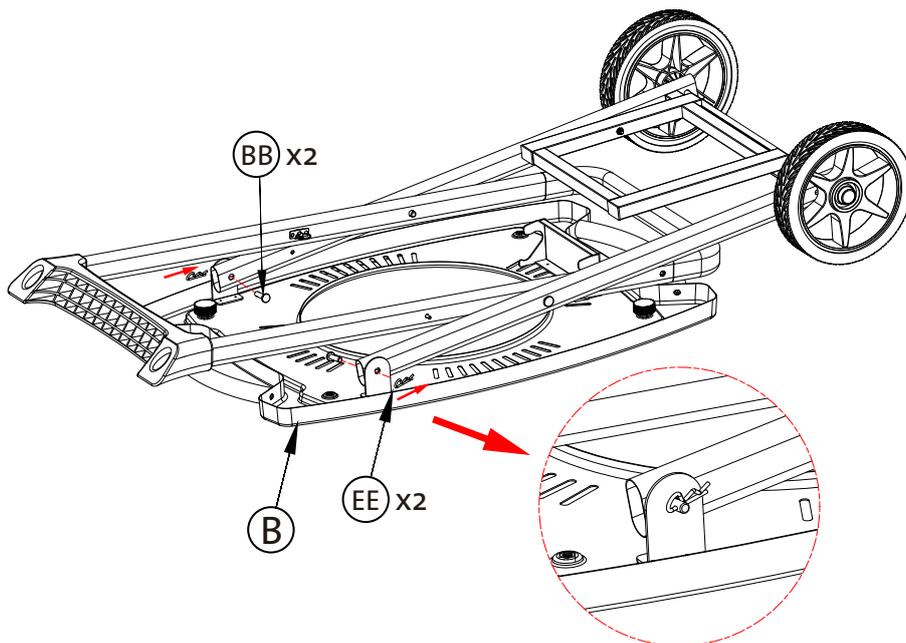

ASSEMBLY INSTRUCTIONS


Step 7

Slowly lift up the trolley and hook the underside of the upper panel over and around the upper leg support pole.

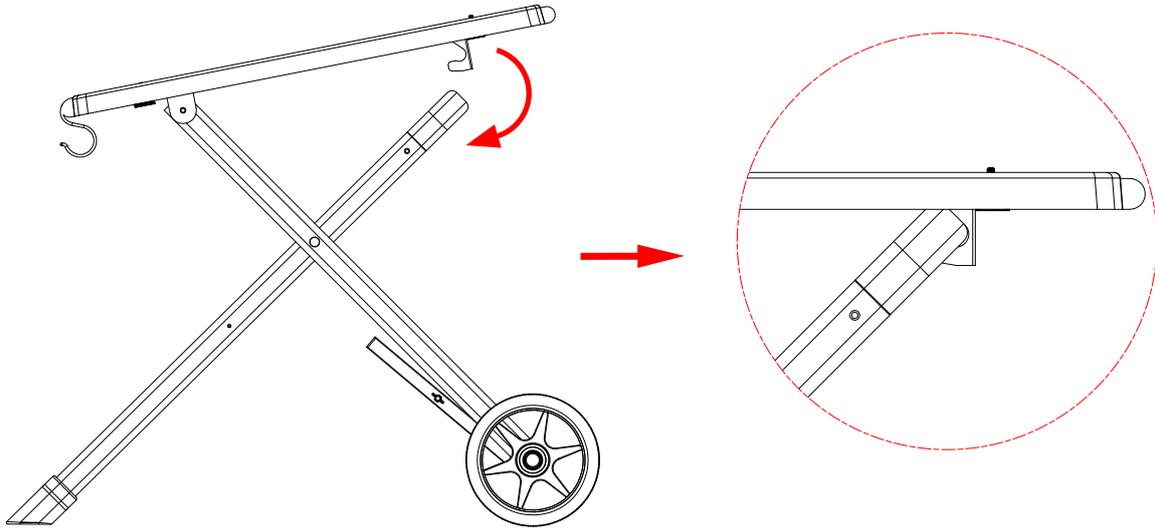

Step 8


Optional step. Place the hooks (A) over the left side handle as shown below to hang your BBQ tools.

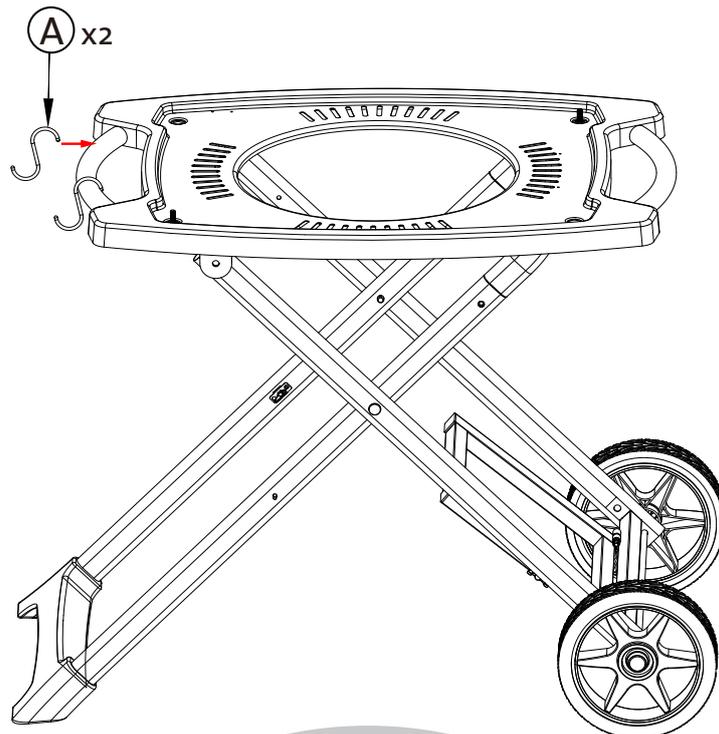


ASSEMBLY INSTRUCTIONS

Step 9

To fold down the gas cylinder mounting base (E), push the right side of the frame over to the left and fold down.

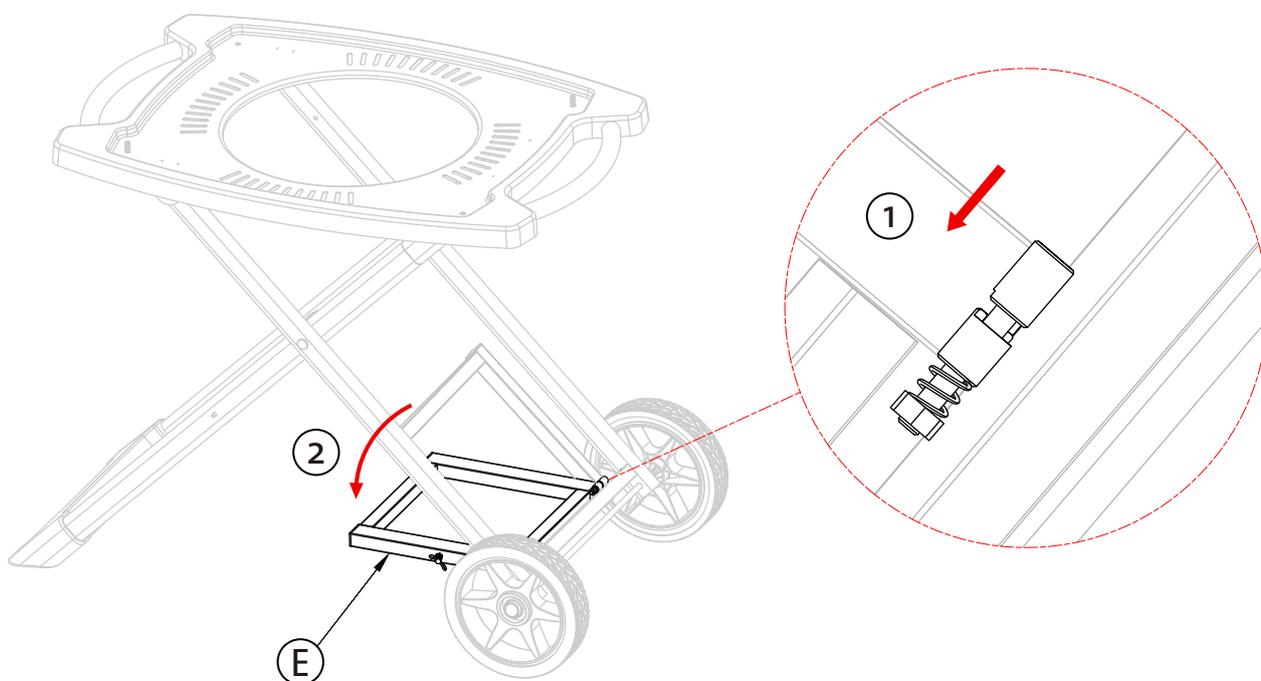


To fold up the gas cylinder mounting base (E), simply lift it up as shown below.
Note: always fold up the gas cylinder mounting base before folding the trolley.

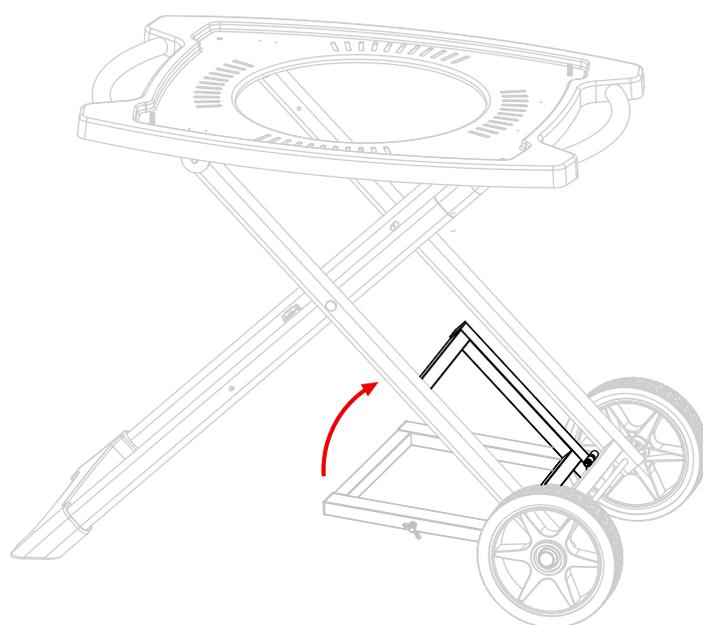

FIX THE BBQ TO THE TROLLEY


IMPORTANT:

- Ensure trolley is assembled and locked into place correctly by following all assembly instructions in this manual.
- Attach the BBQ to the trolley in the upright position only.
- Do not fold the trolley while in use with the BBQ and always remove the BBQ before folding the trolley.
- Do not attach the hose and regulator to the gas cylinder until you have fixed the BBQ and cylinder to the trolley securely.
- Do not move the trolley while the BBQ is on and during cooking.
- This trolley has been approved for use with the below BBQ models only:
 - Model no. JBPB19. Fineline. 0173342
 - Model no. JBPB219. Fineline. 0173343
- The trolley has 2 mounting points to secure the BBQs in place. Position the BBQ on top of the trolley upper panel, aligning the 2 mounting holes with the hole in the centre of the leg base.
- Secure the BBQ using the bolts located on the underside of the trolley.

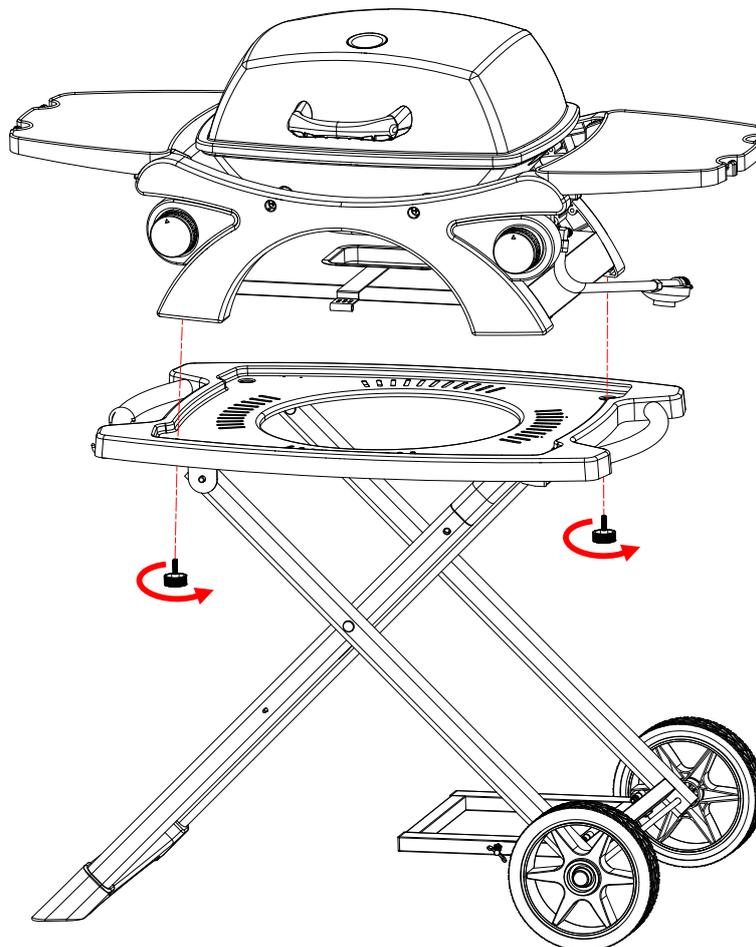


SECURE THE GAS CYLINDER TO TROLLEY

Install a 4kg or 9kg gas cylinder onto the cylinder mounting base ensuring it is standing upright and stable.

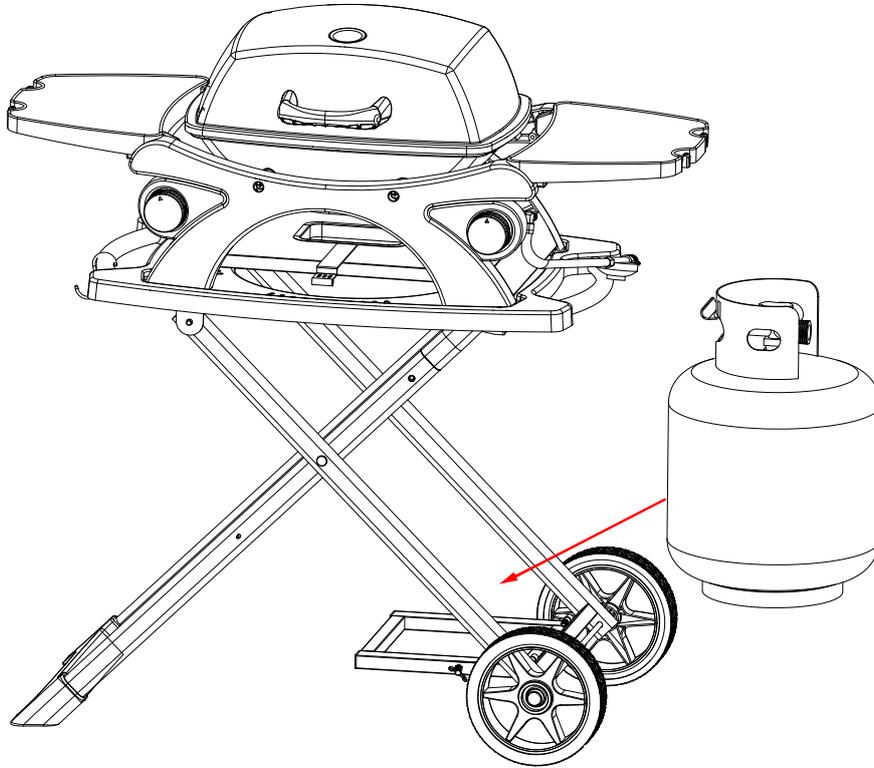

Use the wing nut on the side of the mounting base to tighten and secure the cylinder in place.

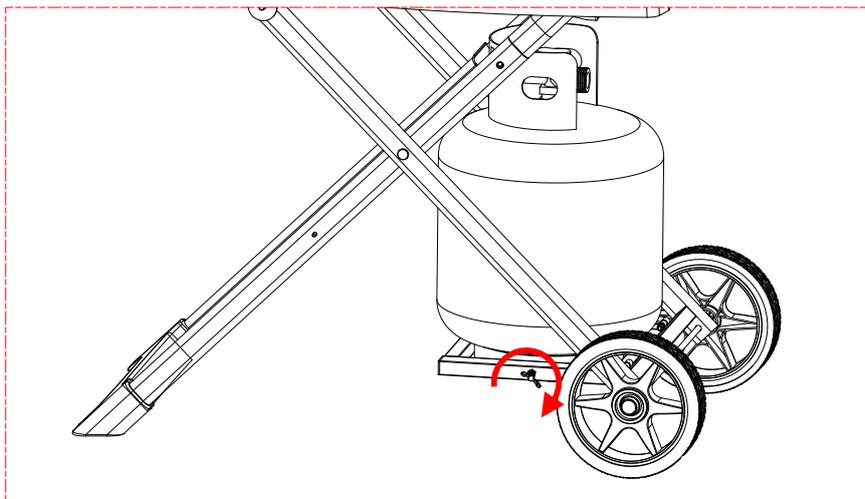


FOLDING INSTRUCTIONS

Note: remove BBQ and gas cylinder before folding the trolley


Step 1

To fold the trolley for storage, pull the upper panel (B) and both ends upwards while keeping the leg base steady.

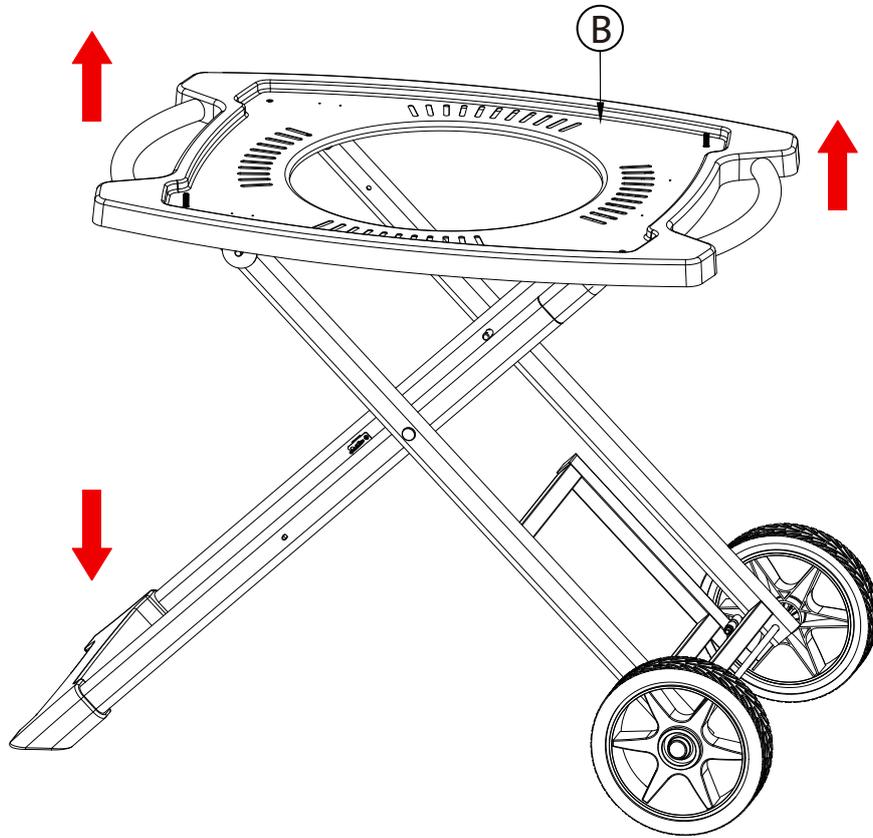

Step 2


Lower the trolley slowly towards the ground.

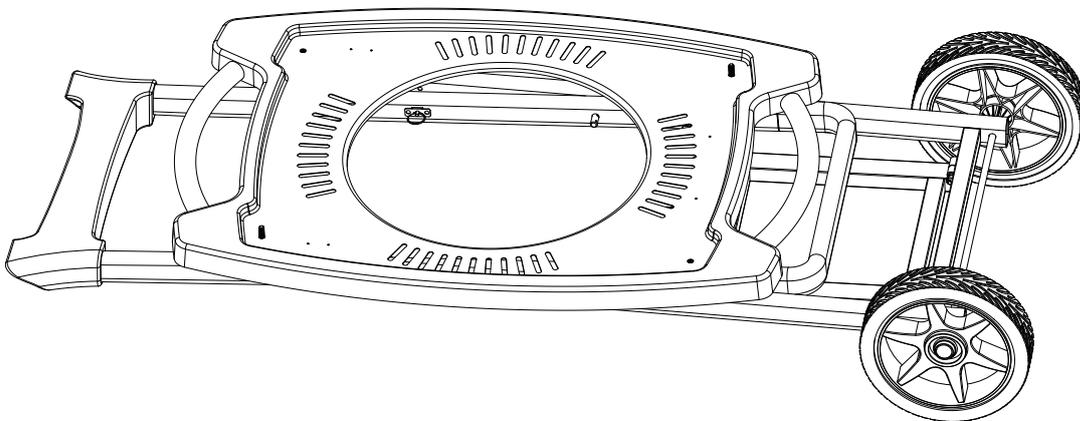

FOLDING INSTRUCTIONS

Step 3

To lock the trolley in the folded position, pull the 2 x spring pins from the rings located on the inside of the frame and turn 90 degrees to lock.

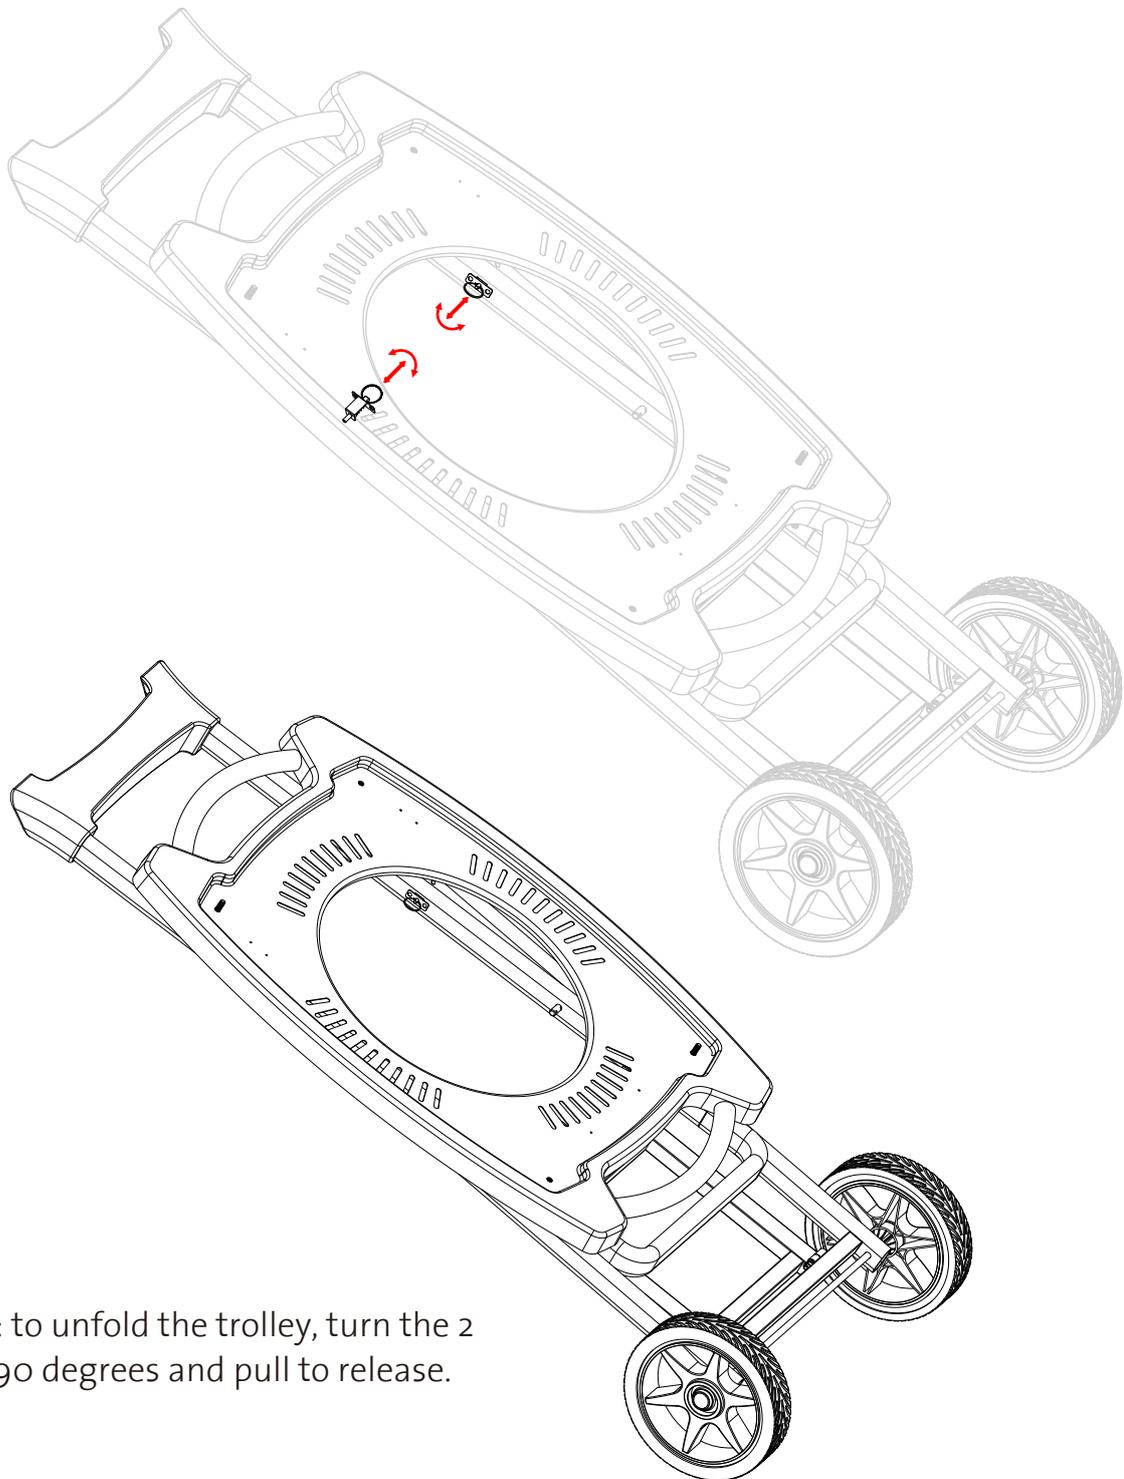

Note: to unfold the trolley, turn the 2 pins 90 degrees and pull to release.

SPECIFICATION

BRAND NAME:	JUMBUCK
APPLIANCE:	Portable Gas BBQ Trolley
CERTIFICATE HOLDER:	Mayo Hardware 4 Secombe Place Moorebank NSW 2170 Phone: 1300 360 211 Email: customerservice@mayohardware.com.au
MODELS:	JBPB19T. Finline 0175300
FEATURES:	Folding design Solid steel construction Mounting base to hold gas cylinder (cylinder not included) Large 20cm diameter wheels for portability Approved for use with Jumbuck portable gas BBQs. Model JBPB19, fineline 0173342 and model JBPB219, fineline 0173343.

The logo features the word "jumbuck" in a bold, lowercase, sans-serif font. The letter "j" is white and set against a dark grey circular background. The remaining letters "umbuck" are dark grey and set against a white background. The entire logo is contained within a dark grey rounded rectangular box.

jumbuck

WARRANTY

FOR AUSTRALIAN CUSTOMERS

Any claim under this warranty must be made within 12 months of the date of purchase of the product. To make a claim under the warranty contact Mayo Hardware customerservice@mayohardware.com.au, or take the product (with proof of purchase) to any Bunnings store (see www.bunnings.com.au for store locations)

The warranty covers manufacturer defects in materials, workmanship and finish under normal use.

This warranty is provided in addition to other rights and remedies you may have under law: our goods come with guarantees which cannot be excluded under the Australian Consumer Law. You are entitled to replacement or refund for a major failure and to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The warranty excludes damage resulting from product misuse or product neglect. The warranty covers domestic use only and does not apply to commercial applications.

FOR NEW ZEALAND CUSTOMERS

Any claim under this warranty must be made within 12 months of the date of purchase of the product. To make a claim under the warranty contact Mayo Hardware customerservice@mayohardware.com.au, or take the product (with proof of purchase) to any Bunnings store (see www.bunnings.co.nz for store locations)

The warranty covers manufacturer defects in materials, workmanship and finish under normal use.

This warranty is provided in addition to other rights and remedies you may have under law: our goods come with guarantees which cannot be excluded under the Consumer Guarantees Act 1993 (NZ). You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The warranty excludes damage resulting from product misuse or product neglect. The warranty covers domestic use only and does not apply to commercial applications.

WARRANTY

WHAT IS NOT COVERED IN THE WARRANTY

- Removal or re-installation costs. This warranty does not cover costs for transit, nor in home service.
- Liability will only be accepted for loss or damage during transit if at the time the product was being transported by Bunnings or a Bunnings approved contractor.
- Lack of maintenance, abuse, neglect, misuse, accidental or improper installation of this appliance.
- Scratches, dents, corrosion or discolouration caused by heat, abrasive chemicals cleaners.
- Corrosions or damage caused by exposure to elements such as weather, hail or grease from the BBQ.
- Commercial use of this product.
- Unauthorised repairs or modification during warranty period.

RECORD THE FOLLOWING INFORMATION

Attach the copy of the purchase receipt here

Date of Purchase

Purchased From.....

Location

Model Name and Number

Serial Number.....

Receipt Number.....

Note: The serial number is located either on the outside of the packing carton or outside or inside the appliance.

FOR TECHNICAL ASSISTANCE

Contact Mayo Hardware through the below details:

Phone (Aus) 1300 360 211

Phone (NZ) 09 415 6240

Email: customerservice@mayohardware.com.au

FOR SPARE PARTS

Contact your local Bunnings store or Mayo Hardware customer service. You should provide the following information:

Model of BBQ

.....
Year of Purchase

.....
Part that requires replacement (refer to the parts list in the instructions manual)