Instructions for Trimmers with Spindle Drives

Fits Models

- UN-46K
- UN-55K
- UN-57K
- UN-59K
- UN-2014R








Imported by: Ozito Industries Pty Ltd
Australia (Head Office)
ACN 050 731 756
1-23 Letcon Drive, Bangholme
Victoria 3175

CUSTOMER SERVICE 1 800 069 486 AUS 0 508 069 486 NZ

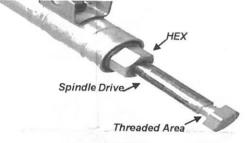

STEP 1

LOCATE BOLT OR NUT FROM PACKAGE
THAT FITS END OF SHAFT
CURVE SHAFT = R

CURVE SHAFT = R STRAIGHT SHAFT = L REMOVE AND SAVE




STEP 2


REMOVE OLD TRIMMER HEAD BY
UNSCREWING KNOB, SPOOL,
AND SPOOL HOUSING FROM SHAFT.




STEP 3
FIT HEAD OVER SHAFT
TOPSIDE AGAINST HEX ON TRIMMER

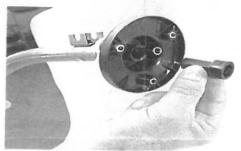


STEP 4
SLIDE HEX ADAPTER OVER SHAFT AND
INSERT INTO HEX OF HEAD

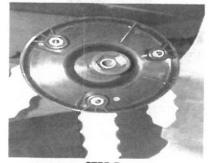


ENSURE FEMALE THREADED AREA OF SHAFT IS FLUSHED
OR BELOW ROUNDED SURFACE PORTION OF HEX ADAPTER
NOTE: MALE THEADS OF TRIMMER
WILL STAND UP ABOVE HEX FLOOR

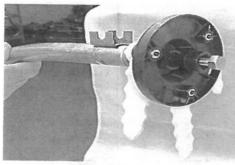

STEP 6
THREAD NUT OR BOLT BACK ONTO UNIT

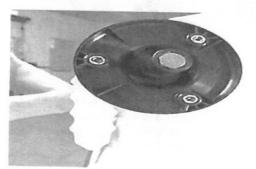

STEP 7
ENSURE UNIT IS TIGHTED AND SECURED

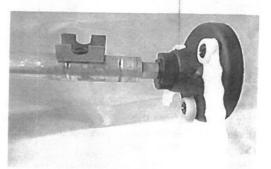

STEP 8

NOTE: IF PLAY EXISTS, ADD SPACER IN BETWEEN
HEX OF TRIMMER AND HEAD

REASSEMBLE AS BEFORE

YouTube

Please visit our YouTube Channel for step-by-step instruction at YouTube.com/ProulxMfg

INSTRUCTIONS FOR PART NUMBERS: UN-46K, UN-55K, UN-57K, UN-59K, UN-2014K

Method 1

Straight Shaft Trimmers and some Curved Shaft Trimmers (Echo, Poulan, and Weed Eater)




1. Consult Owner's Manual to determine method to lock shaft rotation (keyhole for interference fit or wrench to lock rotation of gear case).



2. Unscrew ENTIRE trimmer head assembly to expose threaded area.

(Most straight shaft Trimmers are left hand rotation – right hand clockwise to loosen and left hand counter-clockwise to tighten.

Most curved shaft trimmers are right hand rotation – left hand counter-clockwise to loosen and right hand clockwise to tighten).

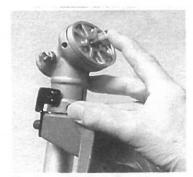

3. For extended thread gear case identify which nut from the package threads easily onto the shaft. (Use plastic spacer for Stihl and Husqvarna Trimmers). Trimmers with threaded holes identify which bolt fits easily into the hole.



4. Place the identified nut or bolt into the recessed hex area of the SaberCut head.



5. Hold nut or bolt in place with finger and secure tightly onto shaft by turning head while the shaft rotation is locked.

Method 2

Some straight Shaft Trimmers have removable Shaft Extensions.



1. Unscrew knob and remove entire Trimmer Head Assembly.



2. Locate keyhole and lock gear case.



3. Unscrew SHAFT EXTENSION to expose primary threads.




4. Identify which nut or bolt from the package threads easily onto gear case. (Use plastic spacer for Stihl and Husqvarna Models)



5. Place identified nut or bolt into recess hex cavity of the SaberCut Head.



6. Hold nut or bolt with finger and securely tighten SaberCut Head onto the gear case by turning head with the gear rotation locked.

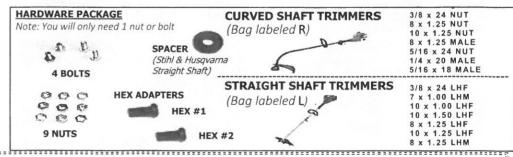

Safety Information:

Never attempt to make any adjustments or alterations not listed in your Owner's Manual or these instructions. Follow all safety and operation instructions.

Any unauthorized alteration to your trimmer may result in failure to your trimmer or SaberCut Head and/or cause personal injury.

Important: Always read the entire Owners' Manual and comply with all safety, operating, and maintenance instructions.