


PILLÄR

PLUSone

Modular Door - Installation Instructions

FACE MOUNT


FITTED **OUTSIDE** DOOR FRAME

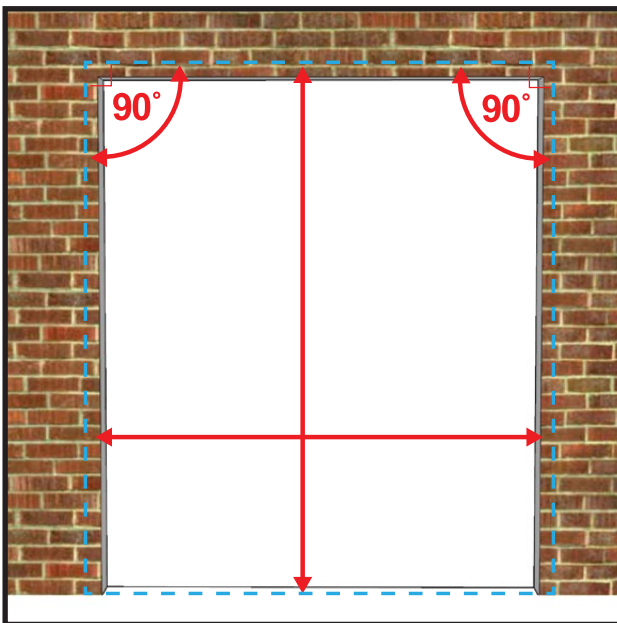

STEP. 1.

Measure width/height to ensure correct size requirements.

DOOR MUST BE LEVEL & SQUARE

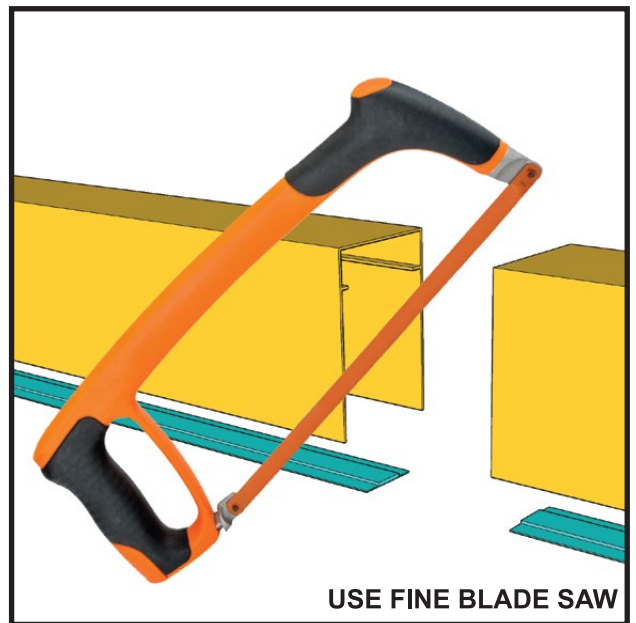


USE FINE BLADE SAW

STEP. 2.


Door width can be altered to suit opening, measure and trim Headrail and Bottom track as required.

HEIGHT CANNOT BE ALTERED

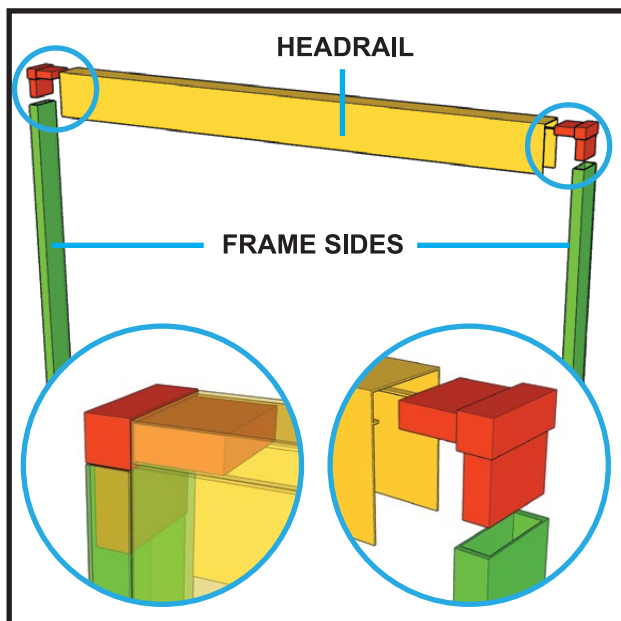


STEP. 3.

Construct door frame by connecting Headrail to frame sides using corner pieces provided.

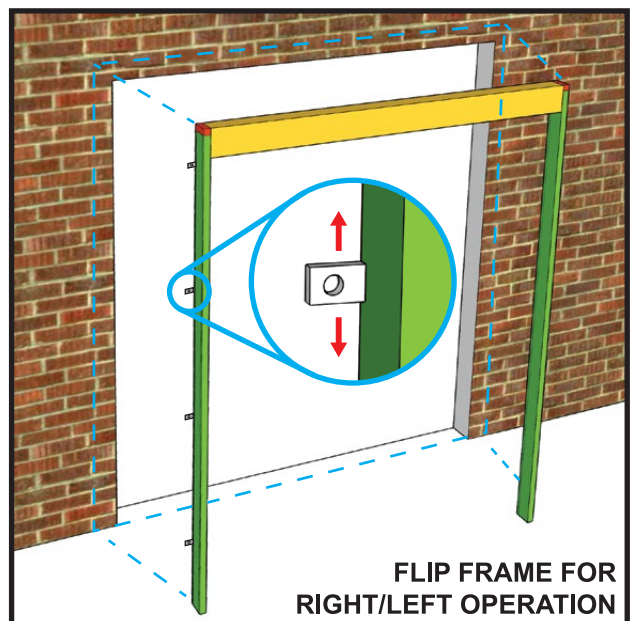


STEP. 4.

Place face-mount brackets in desired locations and position constructed frame over door opening ensuring frame is square and level.

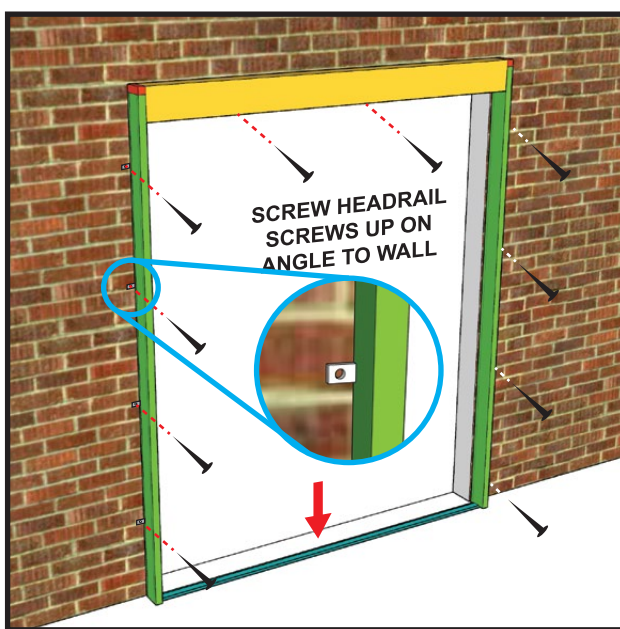


STEP. 5.

Secure door over opening using screws provided. Clean base and apply bottom rail using tape provided.

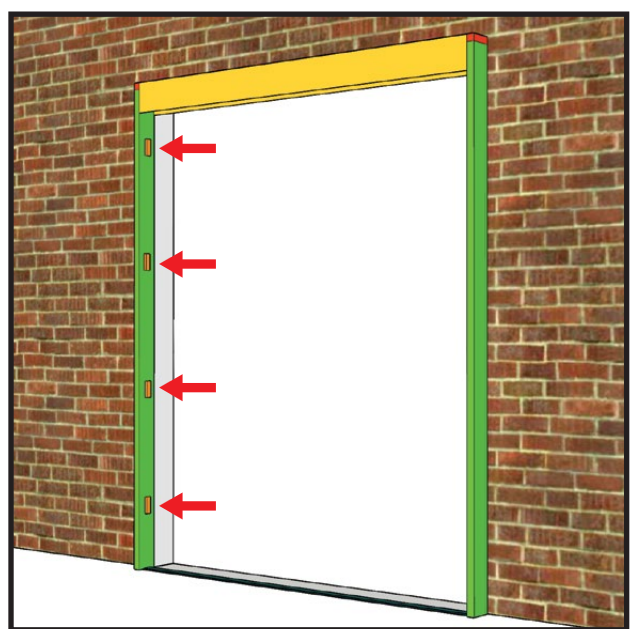


STEP. 6.

Ensure connector clips are securely installed at even intervals for door to clip onto.

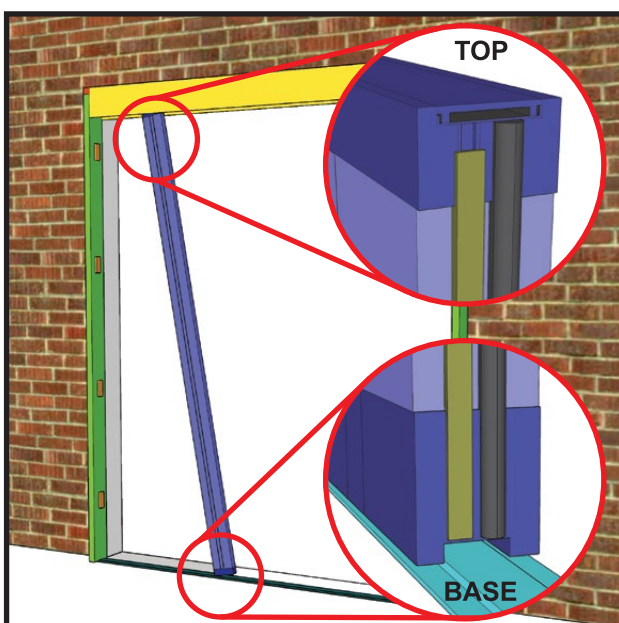


STEP. 7.

To install door, angle door up/under the headrail and straighten against the side frame with connectors. Ensure base of door is sitting correctly on base rail.

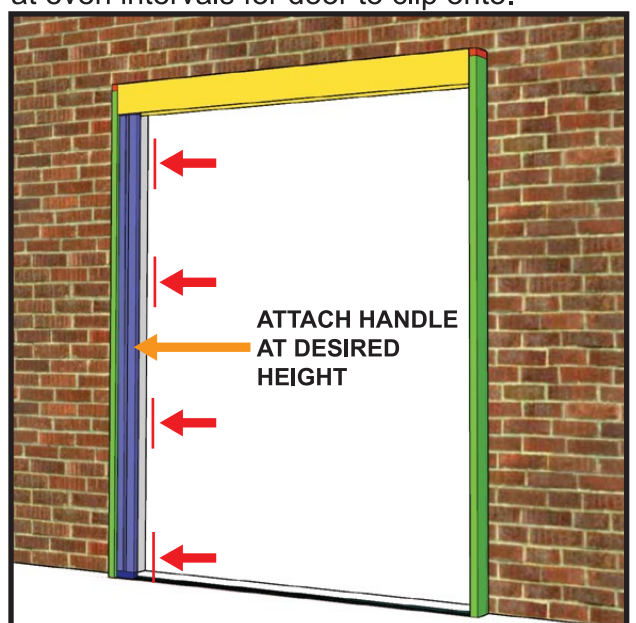

STEP. 8.

Using firm, even pressure, push door onto connector clips until door "clicks" into place. Ensure all clips are engaged correctly. Attach handle

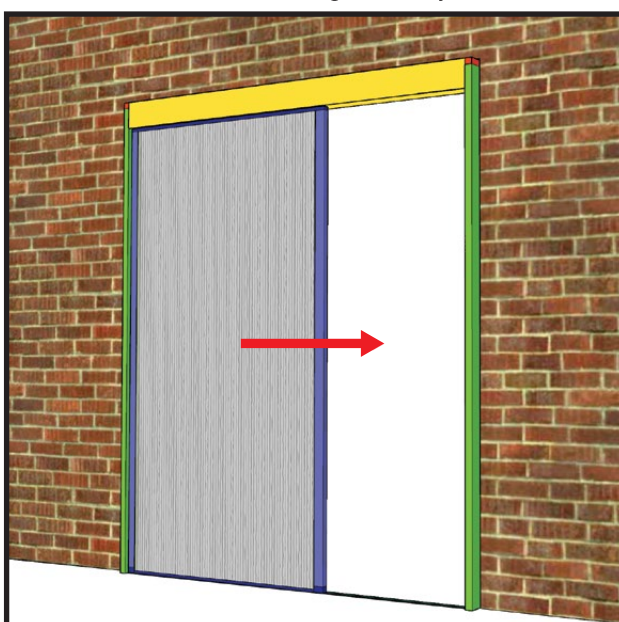

STEP. 9.

Test door to ensure smooth operation. Door should connect to magnetic closure at opposite end

 PILLÄR

Customer Service

1300 155 355

info@pillarproducts.com.au

www.pillarproducts.com.au

48 Access Way
Carrum Downs, Vic, 3201

DOOR IS NOT DESIGNED TO BE CLOSED IN HIGH WINDS OR STRONG WEATHER