



2 Door Wall Unit

IMPORTANT


Before Commencing Assembly:

- Read all instructions COMPLETELY
- Ensure all listed parts are present
If any parts are missing from Parts List 1, please contact 1800 822 823.
- If any parts are missing from Parts List 2, please contact 1300 559 387.
- Ensure you have the required tools to complete the assembly
(Philips Head Screwdriver, Hammer & Wood Glue)

CAUTION

- Ensure your work surface is solid, level, clean and flat (DO NOT WORK ON CARPET)
- Ensure ALL melamine edges are facing as described in the Assembly Instructions.

IF YOU NEED TO CONTACT US WITH REGARD TO THIS PRODUCT PLEASE CALL **1800 822 823** AND QUOTE THE BATCH NUMBER SHOWN ON THE CARTON.

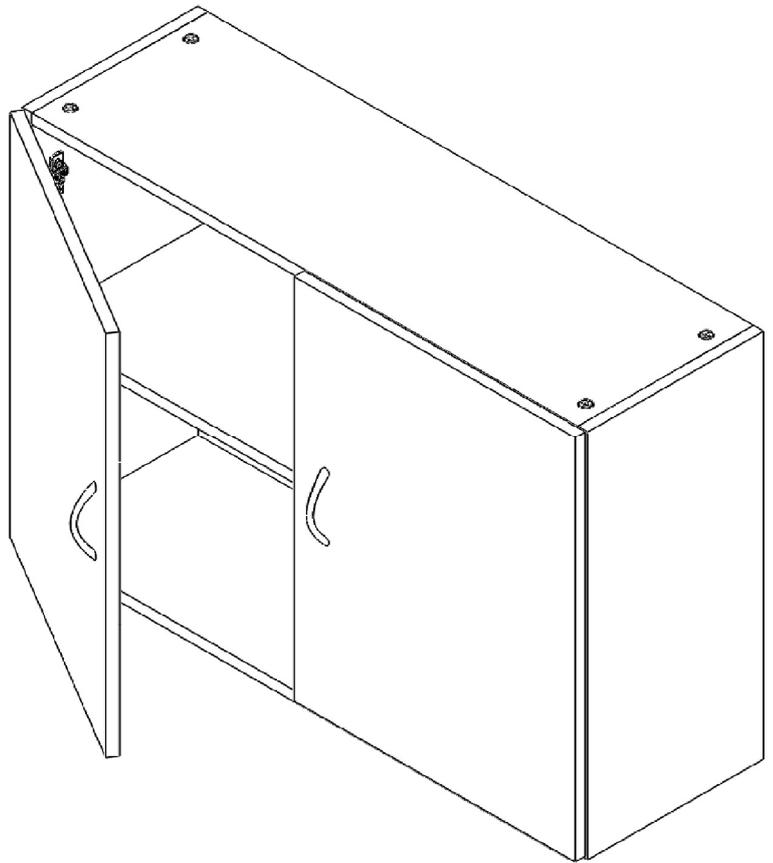

WARNING: Contains small parts, keep out of reach of children.

615 Goodwood Road, Panorama SA 5041
PO Box 18 Melrose Park SA 5039
Telephone: 1800 822 823, Fax: (08) 8460 0009
Email: furniture@bedfordgroup.com.au
www.bedfordgroup.com.au



Quality
ISO 9001

SAI GLOBAL




AUSTRALIAN MADE

Practical, Adaptable, Affordable.


READY TO ASSEMBLE HOME STORAGE SOLUTIONS

Parts List 1


2 Door Wall Unit

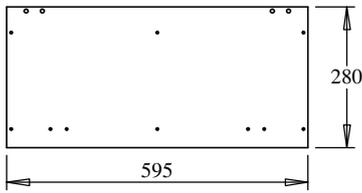


Part No.	Description	Qty.
1	Cabinet End	2

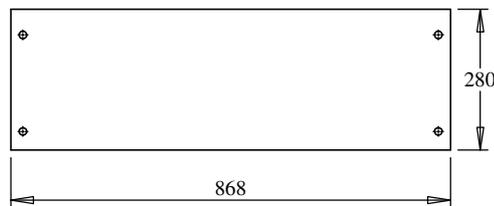


Part No.	Description	Qty.
2	Top/Fix Shelf/Bottom	3

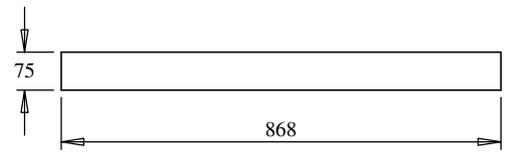

Part No.	Description	Qty.
3	Rails	2

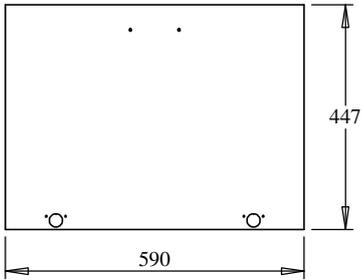


Part No.	Description	Qty.
4	Door	2

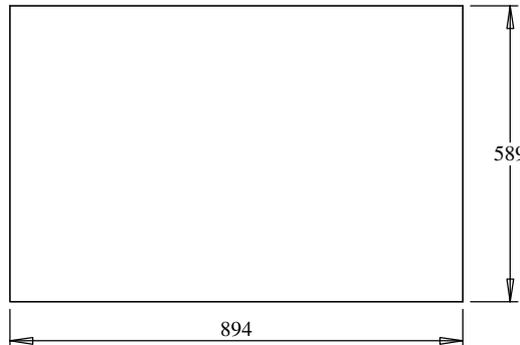


Part No.	Description	Qty.
5	Back	1

Parts List 2


2 Door Wall Unit

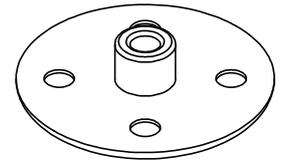


Part No.	Description	Qty.
15	Cover Caps	12

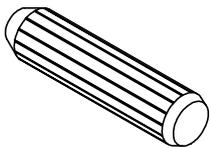


Part No.	Description	Qty.
6	Wooden Dowels	8

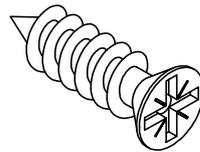


Part No.	Description	Qty.
7	Hinge Screw (15mm)	8

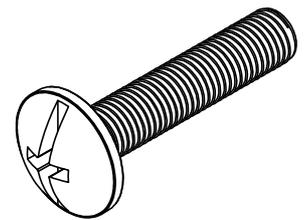


Part No.	Description	Qty.
8	Handle Screw	4

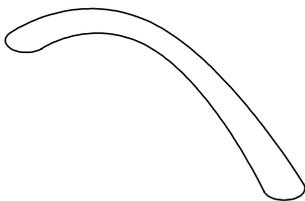


Part No.	Description	Qty.
9	Handle	2

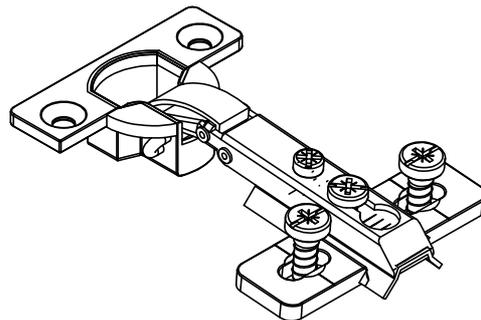


Part No.	Description	Qty.
10	Hinge	4

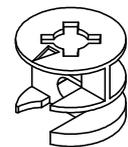


Part No.	Description	Qty.
11	Screw Cams	12

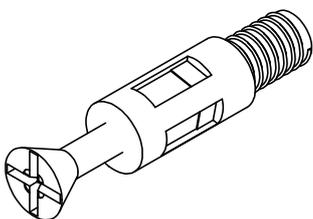

Part No.	Description	Qty.
12	Hardware Pins	12

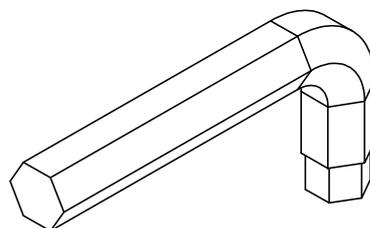

Part No.	Description	Qty.
13	Allen Key (4mm)	1

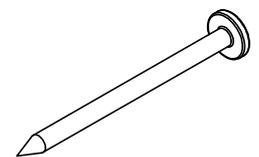


Part No.	Description	Qty.
14	Nails	50

Step 1

Cabinet end panels

Lay the cabinet end panel (1) on a flat protected surface with holes facing up. Please note that the left and right end panels are reversible. Screw the hardware pins (12) in the holes shown.

Repeat the step for other cabinet end panel (1).

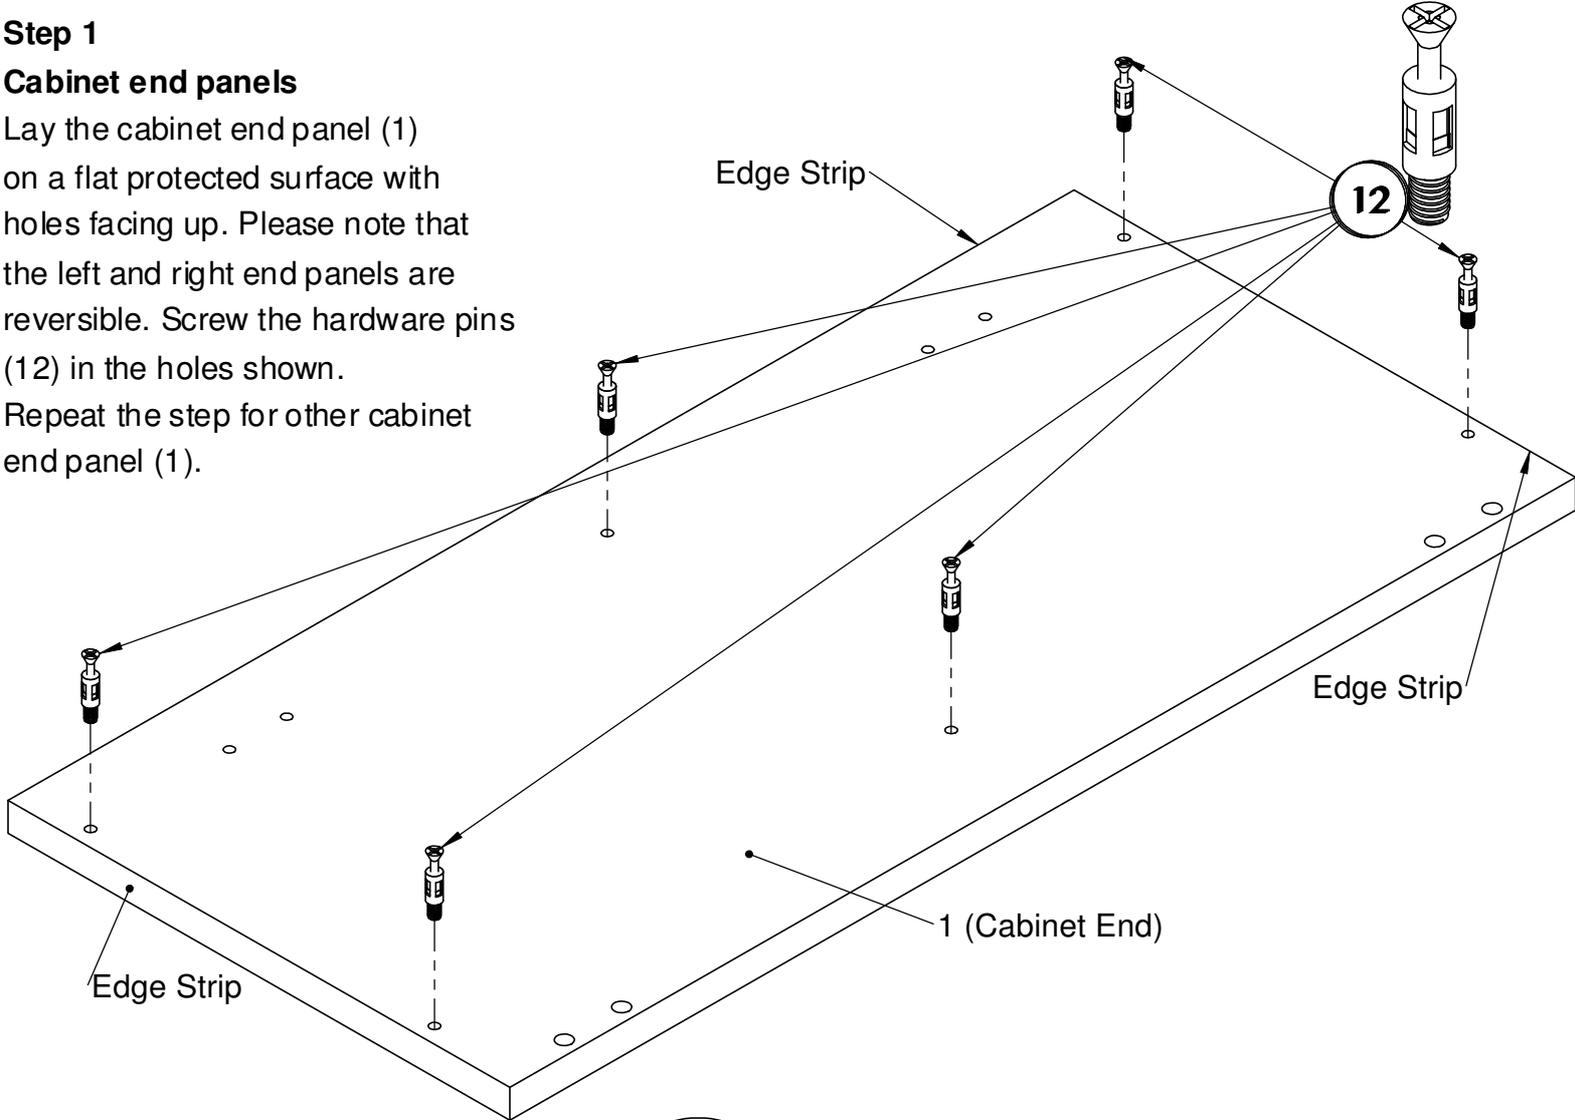


Step 2

Top, bottom and fix shelf

Lay the top (2) on a flat protected surface with holes facing up and insert the cams (11) in the holes with arrows pointing to the side as shown. Please note that top, fix shelf and bottom are same. Make sure to push the cams (11) all the way in by gently tapping them in with a hammer.


Repeat the step for fix shelf (2) and bottom (2).

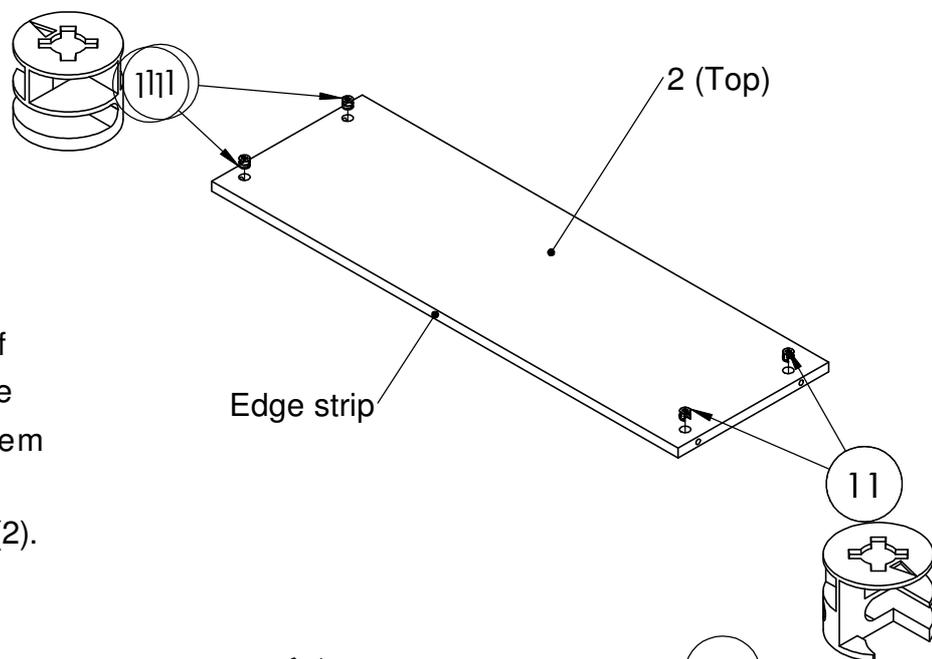

Step 3

Inserting dowels into rails

Please insert wooden dowels (6) into the rail (3). It is recommended to use glue prior to inserting wooden dowels into rails (please remove excess glue with a damp cloth). Make sure to push the dowels (6) all the way in by gently tapping them in with a hammer.


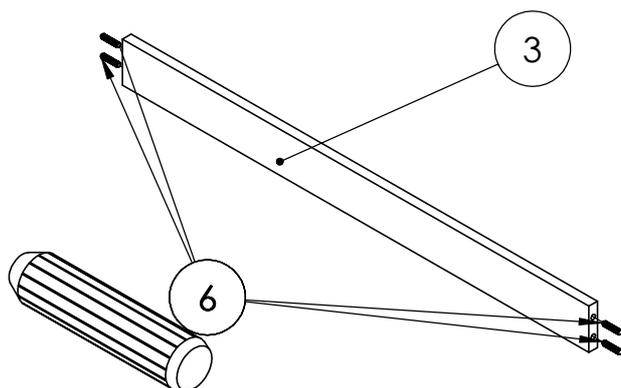


Step 4

Attaching hinge plate to the cabinet ends

With left cabinet end (1) lying flat and with its melamine edge facing toward the assembler, lay the door panel (4) next to the cabinet end panel as shown, making sure that the top of cabinet end panel (1) and door (4) is level. The door panel (4) can easily be identified by large 26mm diameter hole.

Loosen centre screw 2 and separate the hinge mounting plates from hinges. Attach hinge to the door panel (4) by positioning the body of hinge in large 26mm diameter holes and secure in place using hinge screws (7). Secure the two hinge mounting plates on the cabinet end panel (1) in holes directly opposite to the hinge in the door. Repeat for the other door (4) and right cabinet end (1).

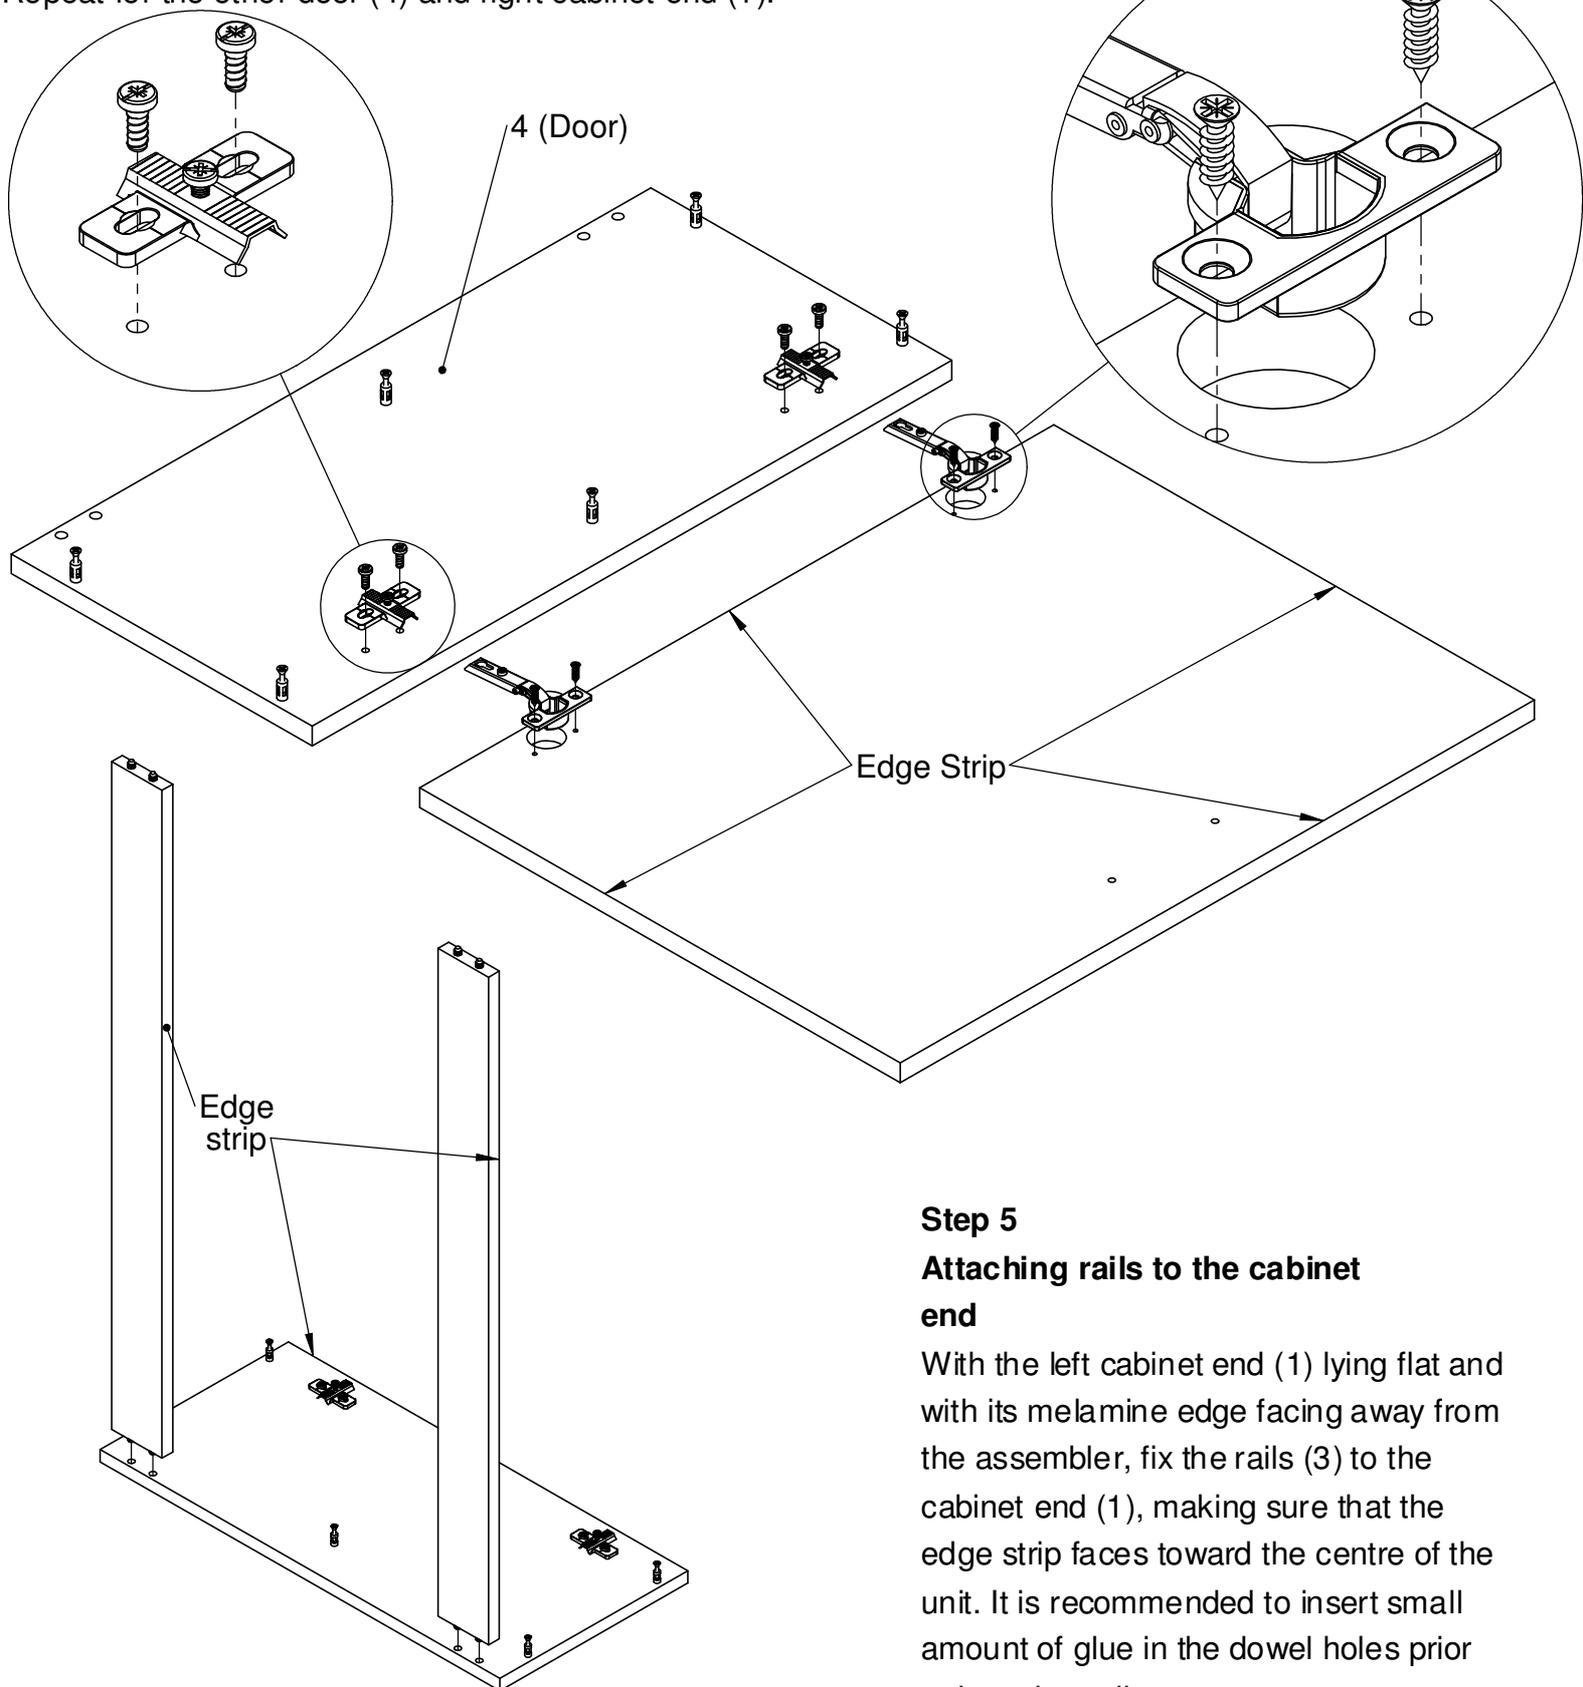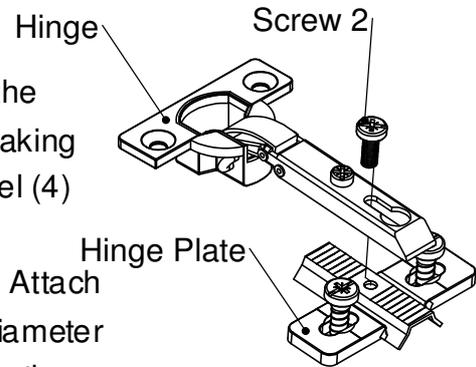

Step 5


Attaching rails to the cabinet end

With the left cabinet end (1) lying flat and with its melamine edge facing away from the assembler, fix the rails (3) to the cabinet end (1), making sure that the edge strip faces toward the centre of the unit. It is recommended to insert small amount of glue in the dowel holes prior to inserting rails.

Step 6

Attaching top, fix shelf and bottom to the cabinet end

Attach the top to the cabinet end (1) with edge strip facing toward the front of the unit and cams facing to the top of the unit. Attach the fix shelf (2) and the bottom (3) to the cabinet end with cams facing to the bottom of the unit. Lock the top, fix shelf and bottom (2) in place by rotating cams (11) in clockwise direction through 180° using Allen Key (13).

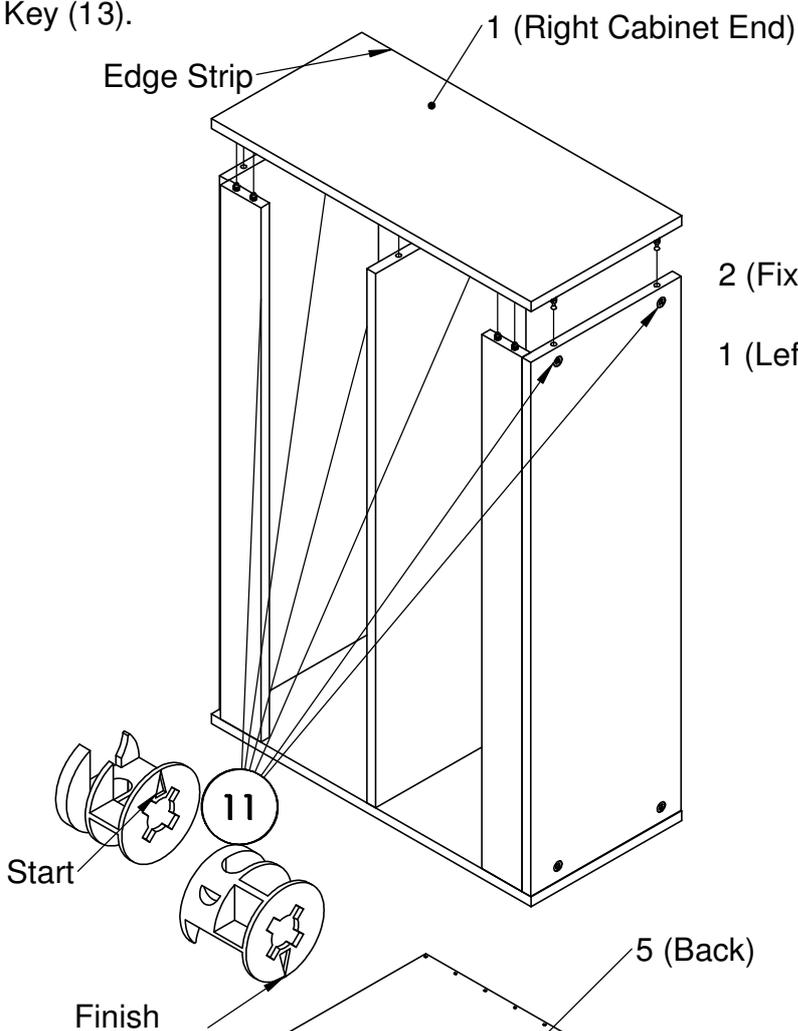


2 (Bottom)

Edge strip

2 (Fix Shelf)

1 (Left Cabinet End)

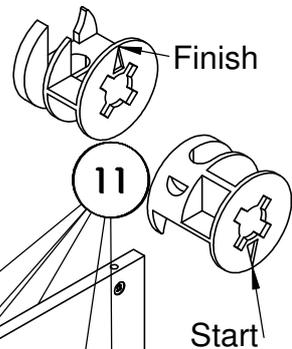

Start

Finish


11

Step 7

Attaching right cabinet end and back

Insert small amount of glue in the dowel holes of the right cabinet end (1) (please remove the excess glue with a damp cloth). Making sure that all the hardware pins and dowel holes in the right cabinet end (1) align with the above assembly and edge strip faces toward the front of the unit, gently press the right cabinet end down so that it is completely pressed up along the top, fix shelf, bottom (2) and rails (3) (no gap). Lock the cams (11) in position by rotating clockwise 180°, using Allen Key (13).

Now, carefully lay the unit face down on a flat protected surface to avoid damaging melamine edges (raw edges facing upward). Position the back panel (5) against the top rear of the unit (approximately 3mm in from edges) with white side facing inward. Ensuring cupboard is square, nail into position along all edges, taking care to avoid nails breaking through the surface of cabinet end panels.

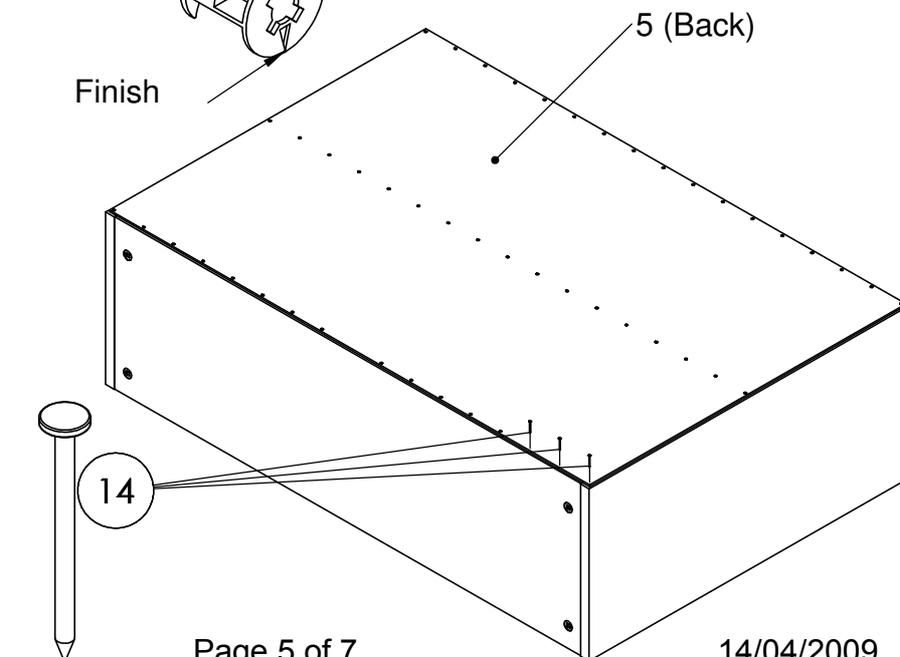

Step 8

Doors assembly with the unit


Hold the door (4) straight against the unit so that the screw 2 in the hinge plates are in line with hole in the hinge and top edge of the door is level to the top of the cabinet.

Tighten hinge screw 2.

Repeat for the other door.

Fix handles (9) onto the doors using handle screws (8).

Fix cover caps (15) on the cams.

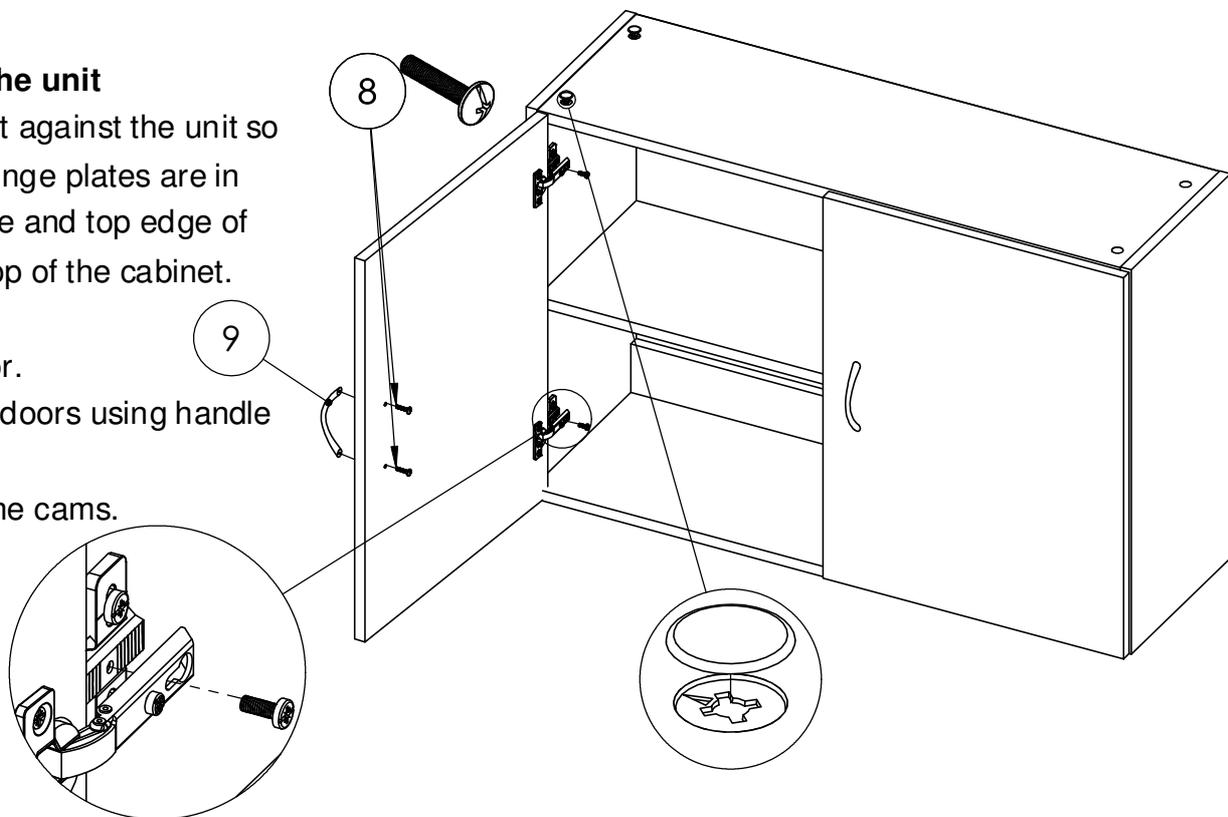

Step 9


Hinge adjustment

- Screw 1 is used for adjustment between cabinet end and door.
- Screw 2 is used to secure hinge to end.
- Screw 3 and 4 are used for gap adjustment between cabinet top and door as well as to secure hinge plate to cabinet end.

The following instructions should be followed to adjust hinges if the gap between the door and cabinet end is too wide or narrow:

1. Start from the top hinge.
2. Loosen screw 2 by turning screw in an anti-clockwise direction.
3. Now turn screw 1 in a clockwise or anticlockwise direction depending on which way the door needs to be moved (the amount to turn this screw is determined by the width of the gap between the cabinet end and doors).
4. Tighten screw 2 by turning in a clockwise direction.
5. Repeat these steps for the bottom hinge.
6. Repeat step 1 to 5 with other door.
7. Check gap between cabinet doors as well as cabinet door and cabinet end (should be approx 2mm), if not same, repeat steps 1 to 6.

To adjust the gap between cabinet top and door (should be 2mm), loosen screw 3 and 4 of top and bottom hinge by turning screws in anticlockwise direction. Adjust the gap between cabinet top and top edge of the door. Once adjusted, tighten the screw 3 and 4 by turning in clockwise direction.

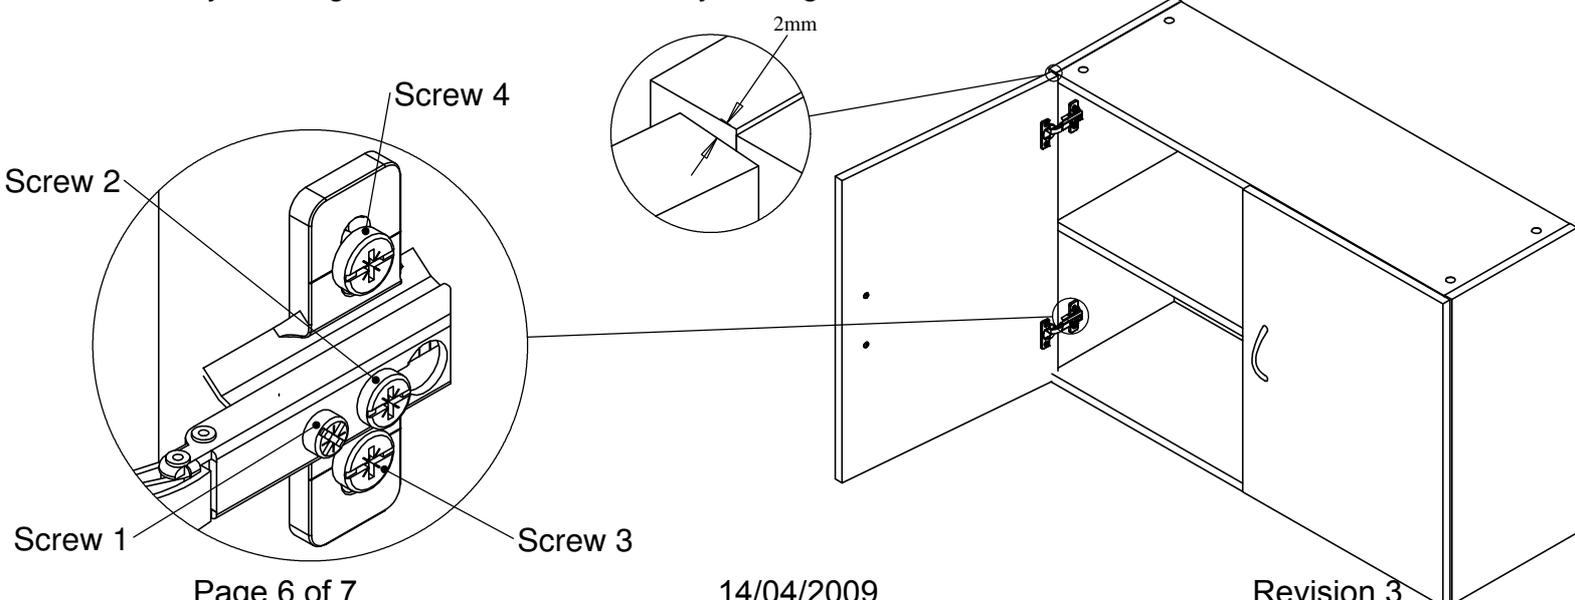



Bedford[™]
Furniture



Bedford Furniture Employee – Nick Fuller

Bedford Furniture is part of the Bedford Group. Bedford is a South Australian not-for-profit organisation dedicated to enhancing the lives of people with a disability or disadvantage through employment, training, residential services and life-skills.



Bedford[™]

615 Goodwood Road, Panorama SA 5041
PO Box 18 Melrose Park SA 5039

Telephone: 1800 822 823, Fax: (08) 8460 0009
Email: furniture@bedfordgroup.com.au

www.bedfordgroup.com.au