

RYOBI®

R18FDF

ORIGINAL INSTRUCTIONS

Floor Drying Fan



Important!

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

It is essential that you read the instructions in this manual before assembling, operating and maintaining the product.

Subject to technical modifications.

Safety, performance, and dependability have been given top priority in the design of your floor drying fan.

INTENDED USE

The floor drying fan is intended to be used only by adults who have read and understood the instructions and warnings in this manual, and can be considered responsible for their actions.

The product is intended for residential drying of damp or wet surfaces such as concrete, laminate, and tile floors.

Do not use the product in any way other than those stated for intended use.

FLOOR DRYING FAN SAFETY WARNINGS

- Know the product. Read operator's manual carefully. Learn its applications and limitations, as well as the specific potential hazards related to this tool. Following this rule will reduce the risk of electric shock, fire, or serious injury.
- **Do not disassemble the product.**
- Do not attempt to modify the product or create accessories not recommended for use with the product. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious personal injury.
- Do not use the product if it is not completely assembled or if any parts appear to be missing or damaged. Use of a product that is not properly and completely assembled could result in serious personal injury.
- Do not use the product to exhaust hazardous or explosive materials and vapors. It is intended for ventilation only.
- Do not open or modify the product, otherwise the warranty will be voided.
- **To reduce the risk of injury, close supervision is necessary when a product is used near children.**
- **Do not allow children to operate the product.** It is not a toy.
- **Cleaning and user maintenance shall not be made by children without supervision.**
- **Never leave the product running unattended. Remove the battery pack after use.**
- **To reduce the risk of personal injury and electric shock, the product should not be played with or placed where small children can reach it.**
- It is possible that unsecured hair may be drawn into the product and may be come entangled and may cause injury. Keep loose or flying hair away from this product at all times.
- Battery tools do not have to be plugged into an electrical outlet; therefore, they are always in operating condition. Be aware of possible hazards when not using your battery tool or when changing accessories. Following this rule will reduce the risk of electric shock, fire, or serious personal injury.
- Do not place battery tools or their batteries near fire or heat. Following this rule will reduce the risk of explosion and possibly injury.

- Never use a battery that has been dropped or received a sharp blow. A damaged battery is subject to explosion. Properly dispose of a dropped or damaged battery immediately.
- Batteries can explode in the presence of a source of ignition, such as a pilot light. To reduce the risk of serious personal injury, never use any cordless product in the presence of open flame. An exploded battery can propel debris and chemicals. If exposed, flush with water immediately.
- Do not charge battery tool in a damp or wet location. Following this rule will reduce the risk of electric shock.
- Do not expose the product to rain. Water entering the product will increase the risk of electric shock or malfunction.
- For best results, your battery tool should be charged in a location where the temperature is more than 10°C (50°F) but less than 38°C (100°F). Do not store outside or in vehicles.
- Under extreme usage or temperature conditions, battery leakage may occur. If liquid comes in contact with your skin, wash immediately with soap and water. If liquid gets into your eyes, flush them with clean water for at least 10 minutes, then seek immediate medical attention.
- Exhausted batteries are to be removed from the product and safely disposed of.
- Keep the product dry, clean and free from oil and grease. Always use a clean cloth when cleaning.
- The supply terminals are not to be short-circuited.
- Save these instructions. Refer to them frequently and use them to instruct others who may use this tool. If you loan someone this tool, loan them these instructions also to prevent misuse of the product and possible injury.

ADDITIONAL BATTERY SAFETY WARNINGS

- To reduce the risk of fire, personal injury, and product damage due to a short circuit, never immerse your tool, battery pack or charger in fluid or allow a fluid to flow inside them. Corrosive or conductive fluids, such as seawater, certain industrial chemicals, and bleach or bleach-containing products, etc., can cause a short circuit.

TRANSPORTING LITHIUM BATTERIES

Transport the battery in accordance with local and national provisions and regulations.

Follow all special requirements on packaging and labelling when transporting batteries by a third party. Ensure that no batteries can come in contact with other batteries or conductive materials while in transport by protecting exposed connectors with insulating, non-conductive caps or tape. Do not transport batteries that are cracked or leaking. Check with the forwarding company for further advice.

MAINTENANCE

- The product should never be connected to a power supply when assembling parts, making adjustments, cleaning, performing maintenance, or when the product is not in use. Disconnecting the product from the power

supply will prevent accidental starting that could cause serious injury.

- When servicing, use only original manufacturer's replacement parts, accessories and attachments. Use of any other parts may create a hazard or cause product damage.
- Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to various types of commercial solvents and may be damaged by their use. Use clean cloths to remove dirt, carbon dust, etc.
- Do not at any time let brake fluids, gasoline, petroleum-based products, penetrating oils, etc., come in contact with plastic parts. Chemicals can damage, weaken or destroy plastic which may result in serious personal injury.
- For greater safety and reliability, all repairs should be performed by an authorised service centre.

SYMBOLS



Safety alert

V

Volts



Direct current



Regulatory Compliance Mark (RCM).
Product meets applicable regulatory requirements.



Please read the instructions carefully before starting the machine.



Warning: slippery surface

T

The product can be used in a tropical climate.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

SYMBOLS IN THIS MANUAL



Note




Parts or accessories sold separately




Low speed



High speed

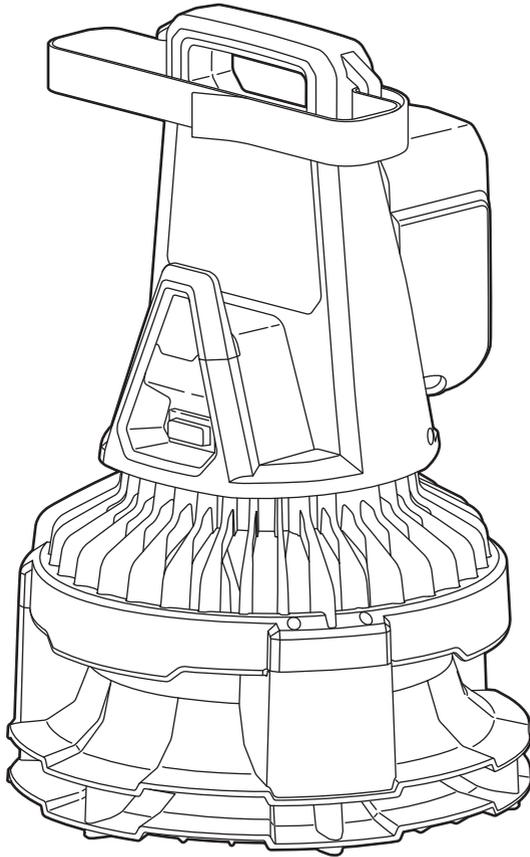






KYOB
ONE+
10x System





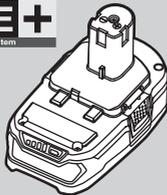


KNOW YOUR PRODUCT

1. Hook-and-loop strap
2. Sign mount
3. 2-speed switch
4. High speed
5. Off
6. Low speed
7. Battery cover
8. Battery port

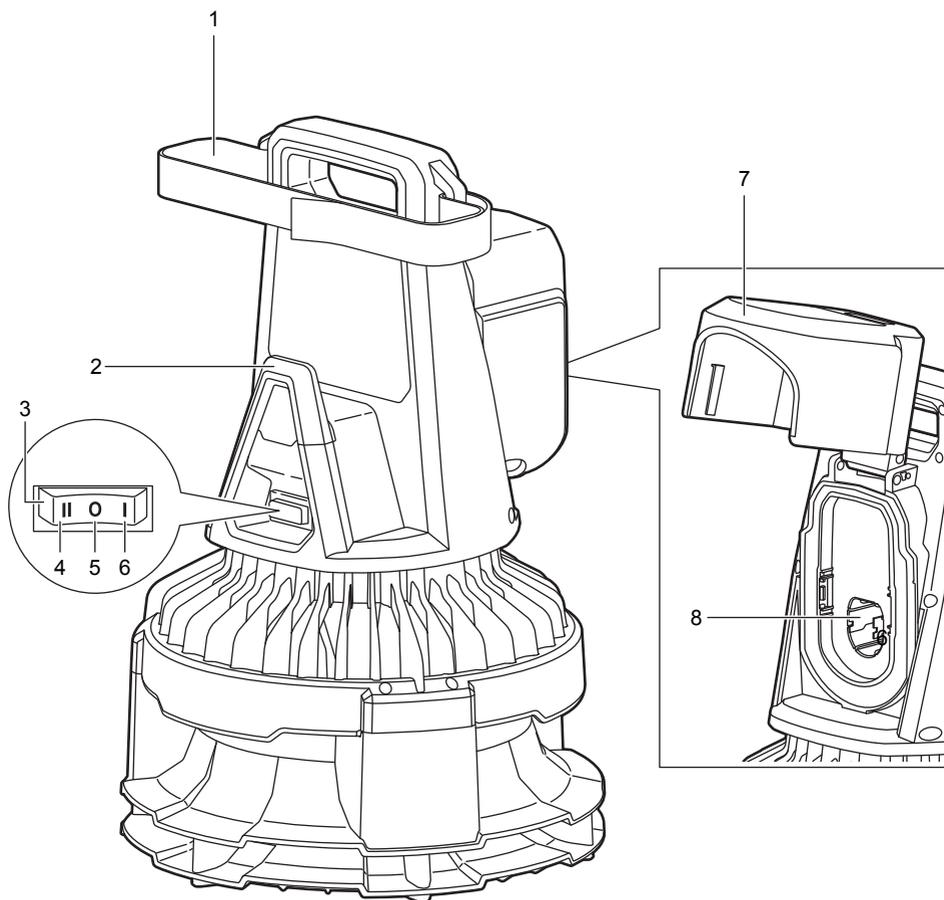

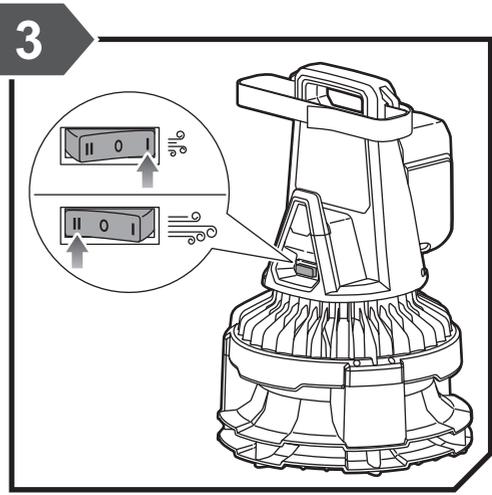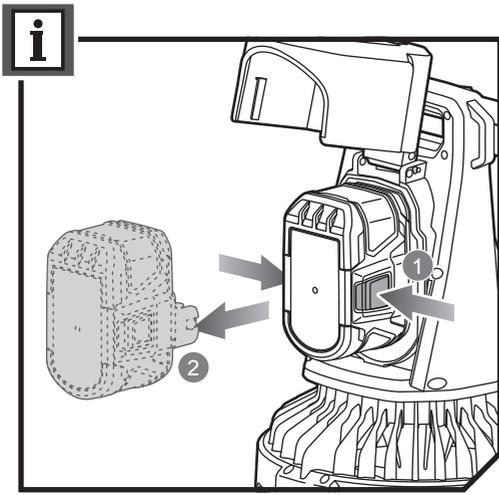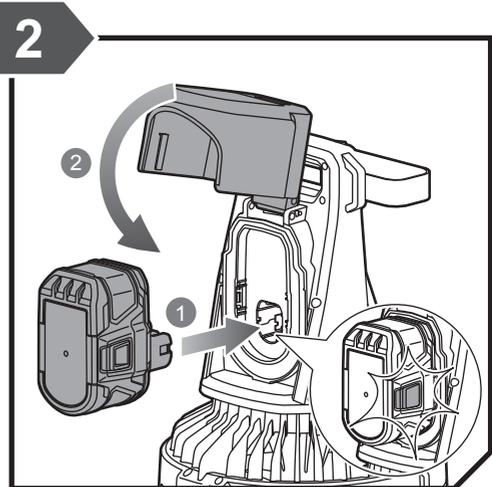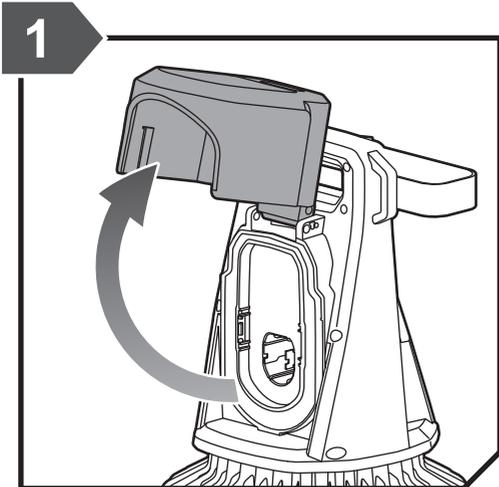

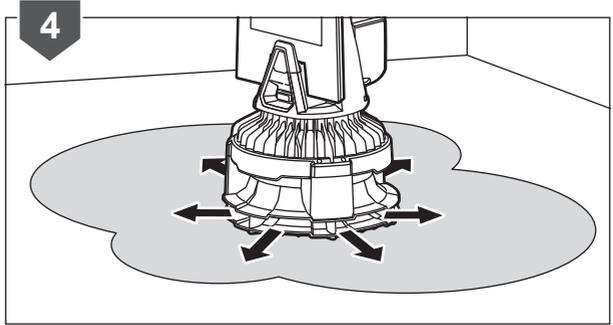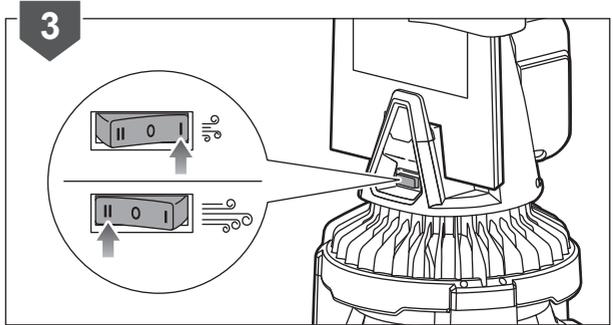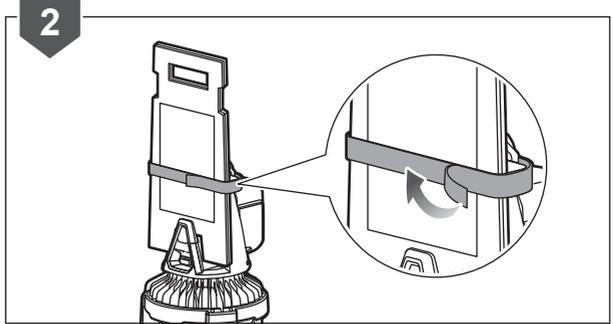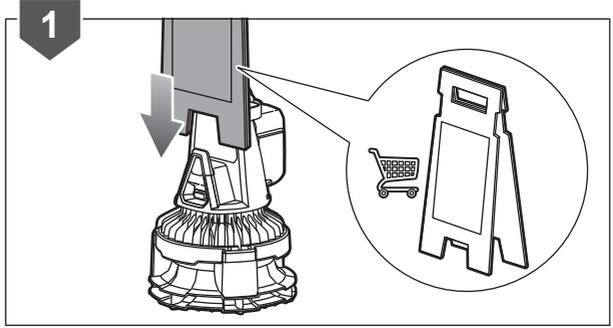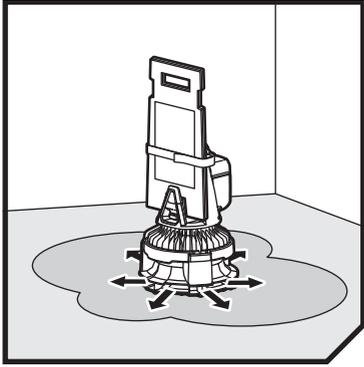

PRODUCT SPECIFICATIONS

Floor drying fan	
Model	R18FDF
Voltage	18 V ---
Switch	Two speed
Fan speed	
Low speed	1700 rpm
High speed	2450 rpm
Flow rate	
Low speed	385 m ³ /hr
High speed	556 m ³ /hr
Weight - not incl. battery pack	1.98 kg

BATTERY AND CHARGER

Model	Compatible battery pack (not included)	Compatible charger (not included)
Lithium-Ion	RB18L13	BCS618G BCL14181H BCL14183H BCL14181V* RC18150U RC18627U RC18120 RC18115
	RB18L15	
	RB18L15A	
	RB18L15B	
	RB18L20	
	RB18L20A	
	RB18L25	
	RB18L25A	
	RB18L40	
	RB18L40A	
	RB18L50	
	RB18L50A	
	RB18L60A	
	RB18L90A	

* for vehicles with 12V DC outlets







RYOBI is a trade mark of Ryobi Limited, and is used under license.
© 2020 Techtronic Cordless GP.

Imported by:

Techtronic Industries (Australia) Pty. Ltd.
31 Gilby Road, Mount Waverley,
VIC, 3149, Australia

Techtronic Industries New Zealand Ltd.
Unit C, 70 Business Parade South,
Highbrook, Auckland 2013, New Zealand