


EUROMATIC

INDUSTRIAL

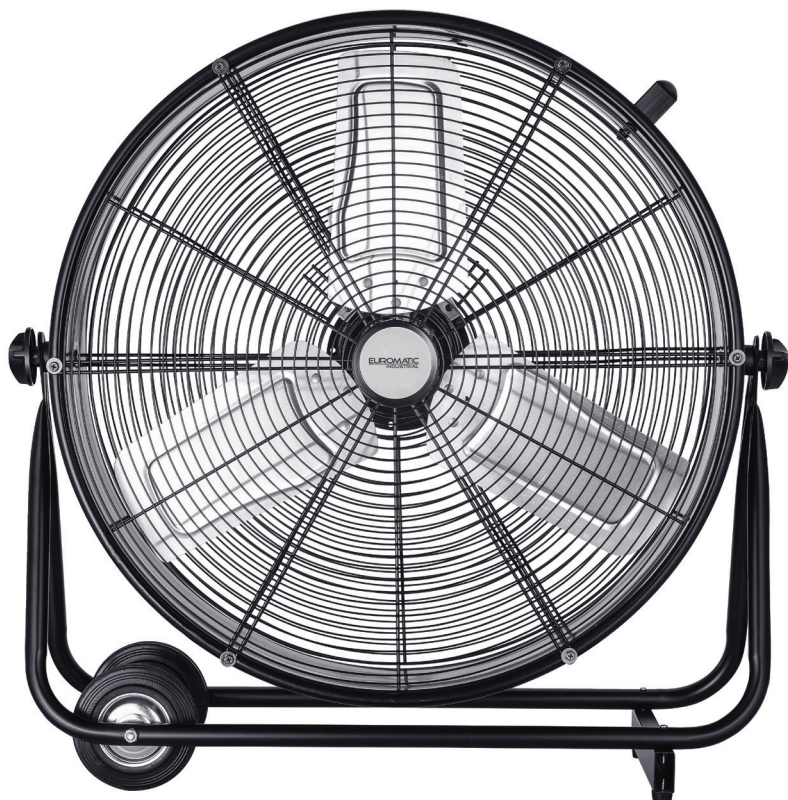

60cm High Velocity Metal Drum Floor Fan

INSTRUCTION MANUAL

Model Number DF6-SZ

AFTER SALES SUPPORT
(AU) 1300 886 649 (NZ) 0800 836 761



Contents

	Page
Important Safety Instructions	3
Product Overview	6
Getting Started	7
Instructions	8
Other Useful Information	9

Important Safety Instructions

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Make sure you understand all instructions and warnings. Keep the manual in a safe place for future reference, along with any warranty information, your purchase receipt and carton. If you sell or transfer ownership of this product, pass on these instructions to the new owner.

Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

Electrical safety and cord handling

- **Voltage:** Make sure your outlet voltage and circuit frequency correspond to the voltage stated on the rating label. If this is not the case, do not use the fan.
- **Water:** To protect against fire and electric shock, do not immerse the cord, plug or the fan in water or other liquid, or expose the electrical connections to water. Ensure your hands are dry before handling the plug or switching on the fan. Do not use the fan outdoors or on wet surfaces. Protect it from liquid spills.
- **Damage:** Check the power cord regularly for visible damage. If the cord is damaged, do not use the fan. A damaged cord must be replaced by the manufacturer, its authorised service centres or appropriately qualified personnel in order to avoid any hazards.

WARNING! Do not pick up or operate the fan if the power cord, plug or housing is damaged, or after it malfunctions or has been dropped or damaged in any manner. In case of damage, contact our after sales support centre.

- **Protect the power cord:**
 - Do not operate the fan with the cord coiled up; always fully unwind.
 - Do not twist or kink the cord or let it touch heated surfaces.
 - Do not put any stress on the cord where it connects to the product.
 - Never carry or pull the fan by the cord.
 - Arrange the cord away from any traffic area so no one will trip over it.
 - Do not run the cord under carpeting or cover it with rugs or runners.
- **WARNING! No extension cord, no speed control device:** Do not use this fan with an extension cord or plug adaptor. To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.

Important Safety Instructions (Cont.)

- **Connection:** To insert the plug, grasp it firmly and guide it into the outlet. Never connect the fan to a power source while disassembled.
- **Disconnection:** Unplug the fan from the power outlet when it is not in use and before cleaning, servicing, moving or storing the fan. Grasp the plug and remove it from the outlet, do not pull on the cord.


Usage conditions and restrictions

- **RCD:** Unless the area where you want to use the fan is already fitted with a residual current device (safety switch), we recommend installing an RCD with a rated residual operating current not exceeding 30mA to provide additional safety protection when using electrical appliances. See your electrician for professional advice.
- **Commercial use only:** This fan is suitable for commercial use only and should only be placed on the floor.
- **Attachments:** The use of accessory attachments not recommended in this manual may cause injury or hazards.
- **Usage restriction:** This fan is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Children:** Supervise children to ensure they do not play with the fan. Close supervision is necessary when any appliance is used by or near children.
- **WARNING! Do not leave unattended during use!** Always switch it off and unplug when not in use, if left unattended, and before cleaning and storing.
- **Keep the top clear:** Do not place anything on top of fan.
- **Proper assembly:** Only operate the fan fully assembled with all parts. Do not use the appliance without the protective grilles (rear and front guards) in place, as serious personal injury may result. Do not attempt to force the grille in order to stop or start the fan.
- **Location:** Place the fan on a flat, level and stable floor surface to avoid overturning. Do not place it on a soft surface such as carpet.
- **Obstructions:** Position the fan in an area that is free from obstructions. This will help to keep the fan's air intake and outlet grilles free from any blockage.
- **WARNING! DO NOT use the fan in the following areas or circumstances:**
 - Near an open flame, a hot burner, oven or other source of high heat.
 - Outdoors or in areas of high humidity, such as in a bathroom, laundry area, near a sink, washer, pool or any source of water.

Important Safety Instructions (Cont.)

- In a window, as rain may create an electrical hazard.
- In areas where paint, petrol, etc. is stored and there is a risk of explosion or fire from flammable gases, or in areas where substances are being sprayed.
- **Rapid air movement:** High velocity fans are designed to create rapid air movement, therefore, make sure the fan is **not** placed near drapes, curtains or any objects that may be drawn into the fan outlet.
- **CAUTION! Personal safety:** Avoid contact with moving parts. Never insert fingers, pencils or any other objects through the grilles when the fan is running. Keep hair and loose clothing well away from the fan when it is in use.
- **Airflow:** Ensure nothing is blocking the air outlet and intake grilles. Do not insert foreign objects into opening as this may cause electric shock and/or a fire hazard.
- **Service:** Do not attempt to open the fan. Do not disassemble or modify the appliance. In case of malfunction, have the fan checked and repaired by qualified service personnel only.
- **Liability:** We assume no liability for any damages or personal injury caused by misuse of the product and/or failure to follow these instructions.

Product Overview

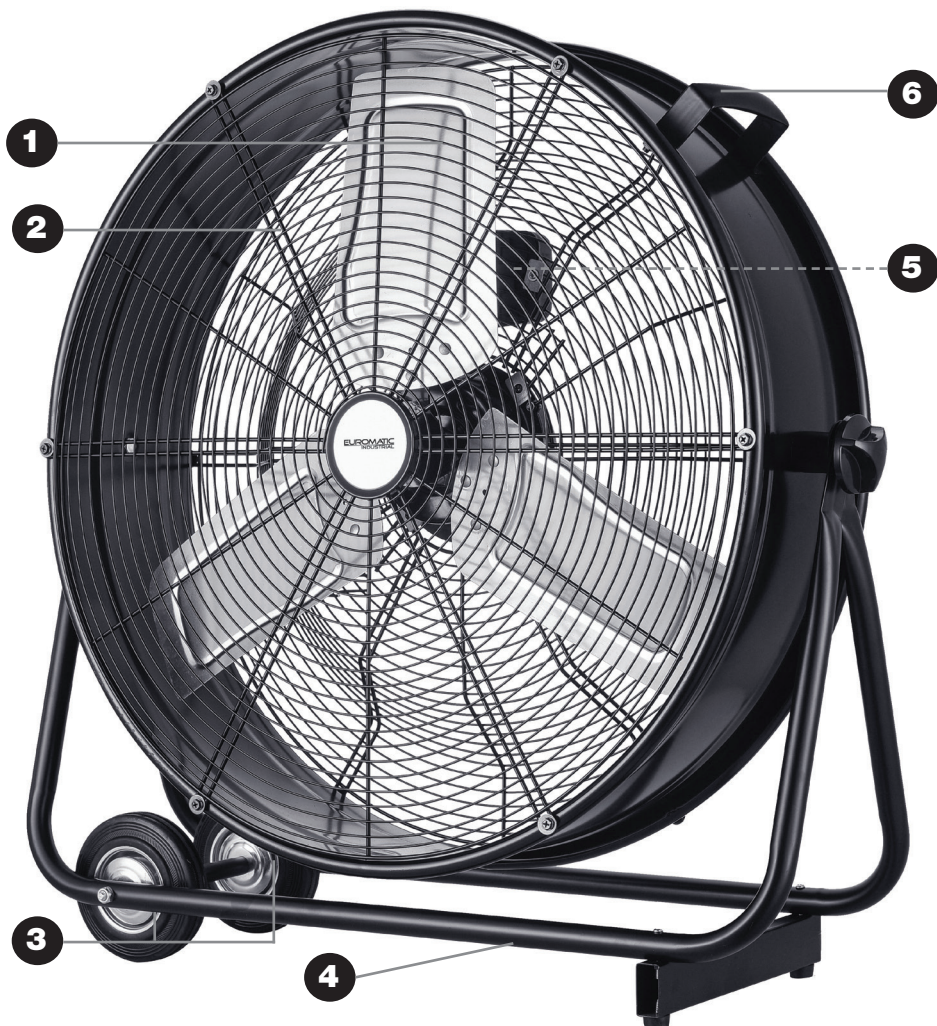

Parts list

- 1 Fan blade
- 2 Front and rear safety guards (grilles)
- 3 Wheels (2)
- 4 Stand frame
- 5 Speed control knob (not visible here, see page 8)
- 6 Handle

Getting Started

Before first use

- **Unpacking:** This product has been packaged to protect it against transportation damage. Unpack the appliance and keep the original packaging materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the appliance when it is not in use. In the event that the packaging is to be disposed of, please recycle it where possible.
- **Safe packaging disposal:** Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.
- **Inspection:** Unwind the cord to its full length and inspect it for damage. Do not use the appliance if the appliance or its cord have been damaged or are not working properly. In case of damage, contact our after sales support centre for advice on examination, repair or return of the damaged product.
- **Instructions:** Make sure you have read and understood all instructions and warnings in this manual. Refer to the product overview, opposite, to familiarise yourself with the product and identify all parts. Pay particular attention to the safety instructions on the previous pages.
- **Assembly:** The fan comes fully assembled. No assembly is necessary.

NOTE:

Due to continued product improvement, images and illustrations in this manual may vary slightly from the product purchased. All images in this manual are for reference purposes only. Parts are not necessarily pictured to scale.

Instructions

Placement

- This fan is intended for floor use only. Place it on a level floor surface where it will not overturn during use.
- As high velocity fans are designed to create rapid air movement, make sure the fan is **not** place near drapes, curtains or any objects that may be drawn into the fan outlet.

Operation

The fan is equipped with three fan speeds, which can be operated with the speed control knob located at the back of the appliance on the switch box.

- Turn the speed control knob in clockwise direction to start the fan.

[0] Off

[1] Low speed

[2] Medium speed

[3] High speed



Tilt adjustment

To target the breeze at a particular angle, the fan head can be tilted. Grasp the handle and move the fan head up or down to the desired position.

Moving the fan

Because of its large size, the fan is equipped with a handle and two wheels for convenience. When you need to move the fan, grip it by the handle and pull it along on the two wheels.

Other Useful Information

WARNING!

- Before cleaning, maintenance or moving the fan, switch off the fan and disconnect it from the power supply.
- Do not immerse the fan in water or other liquids. Do not spray it with liquids. Do not allow water to drip on or into the motor housing.
- Never use fuel, solvents, harsh detergents, or abrasive or alkaline cleaners on any part of the fan.

Cleaning and maintenance

- **Dusting:** Make sure the fan is unplugged from the power supply before cleaning. To remove any dust or dirt that may have accumulated inside or on the unit, clean the fan periodically by lightly running a vacuum cleaner nozzle (soft brush) over the front and rear guards. Alternatively, use a soft, dry cloth for dusting.
- **Stubborn stains:** Use a slightly damp, soapy cloth for stubborn stains but be sure the cloth is not too wet. If wiping the switch box with a damp cloth, make sure no water or other liquid is allowed to enter the motor housing or interior parts.
- **Do not remove the guard (grille) for cleaning.**
- **Storage:** When storing your fan, make sure to keep it in a safe, dry location, protected from dust. We recommend using the original packaging for storage. Alternatively, cover the cleaned appliance with a piece of material or a plastic bag for dust protection.
- **Service/repair:** The appliance requires no maintenance and contains no user-serviceable parts. Do not take the motor part apart; do not attempt to repair or modify the fan. In case of damage or malfunction, or if the power cord is damaged, have the unit repaired by authorised personnel only, or contact our after sales support centre for advice on repair or replacement.

Other Useful Information (Cont.)

Technical specifications

Power	265W, 220-240V~, 50Hz
Dimensions (mm)	765 (H) x 770 (L) x 275 (D) (approx.)
Weight	11.8kg (approx.)

Compliance

This appliance has been fully tested and meets all requirements as set out by standards AS/NZS 60335.1 and AS/NZS 60335.2.80.



The RCM Mark (Regulatory Compliance Mark) indicates that the product complies with the relevant guidelines of the ACMA as well as corresponding government requirements for the safety of electrical devices.

Responsible disposal

- At the end of its working life, make the appliance unserviceable by unplugging it from the power outlet and cutting the power cord.
- Do not throw this appliance out with your household rubbish. Electrical and electronic products contain substances which can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, make sure to contact our After Sales Support Centre on (AU) 1300 886 649 or (NZ) 0800 836 761.

Distributed by Tempo (Aust) Pty Ltd ABN 70 106 100 252

PO BOX 6056 Frenchs Forest, Australia NSW 2086

Customer Helpline:

(AU) 1300 886 649 (NZ) 0800 836 761

Email: info@tempo.org

For an electronic version of this manual, please contact our after sales support centre.

IM Version Number

Issue Date

V1.0 Original release

May 2020

After Sales Support

☎ (AU) 1300 886 649 (NZ) 0800 836 761 | 📧 info@tempo.org