

click



Rechargeable Handheld Fan

USER MANUAL

Model Number: CLHHF

Important Safety Instructions

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Make sure you understand all instructions and warnings. Keep the manual in a safe place for future reference, along with any warranty information, your purchase receipt and the original packaging carton. If you sell or transfer ownership of this product, pass on these instructions to the new owner.

Always follow basic safety precautions and accident prevention measures, including the following:

Charging and USB cable handling

- **Voltage:** The appliance must only be supplied at a safe extra low voltage corresponding to the marking on the appliance.
- **Charging:** This product contains a built-in lithium ion battery pack, which must be charged using the supplied USB cable. Unplug the USB cable when charging is completed. If strong heat occurs during charging, stop charging or using the product and contact our after sales support centre.
- **Water and moisture:** Do not immerse the USB cable or the fan in water or other liquid, or expose the connections to water. If water or other liquid enters the product, switch off the power and dry the product properly.
- **Protect the USB cable:**
 - Do not charge the fan with the cable coiled up; always fully unwind.
 - Do not twist the cable or let it touch heated surfaces or sharp edges.
 - Do not allow the cable to hang over the edge of a table, desk or bench.
 - Never pull or carry the fan by the USB cable.
- **Damage:** Check the USB cable regularly for visible damage. If the cable is damaged, do not use it to charge the fan.
- **WARNING!** Do not pick up or operate the fan if the USB cable or port, or the fan housing is damaged, or after it malfunctions or has been dropped or damaged in any manner. In case of damage, contact our after sales support centre.
- **Disconnection:** Disconnect the fan from the computer when it is not in use and before cleaning, servicing, moving or storing the appliance. Grasp the USB plug and remove it from the port, do not pull the cable when disconnecting.

Important Safety Instructions (Cont.)

Usage conditions and restrictions

- **Intended use:** Only use this fan as described in this manual. Any other use is not recommended and may cause fire, electric shock or injury.
- **Assembly:** The fan comes fully assembled, do not take it apart. Do not modify it for any other purpose. Do not disassemble the safety grilles for cleaning.
- **Usage restriction:** This fan is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Children:** Keep this fan out of reach of children. This fan is not a toy. Supervise children to ensure they do not play with the fan.
- Do not cover the fan while it is in use.
- **WARNING!** Do not leave the fan running unattended. Always switch the fan off when it is not in use, if left unattended and before cleaning and storing.
- **CAUTION!** Personal safety: Avoid contact with moving parts. Never insert fingers, pencils or any other objects through the grilles when the fan is running. Keep hair and loose clothing well away from the fan when it is in use.
- **WARNING!** DO NOT use the fan in the following areas:
 - Near an open flame, a hot burner, oven or near any other source of high heat.
 - In temperatures above 60°C.
 - In areas with high levels of humidity, such as in a bathroom or laundry, or near a pool or tub where it could fall into water.
 - Near curtains, draperies, tablecloths and other fabrics since they may be drawn into the fan, damage the motor and/or cause a fire.
- **Handle with care:** Do not drop or strike the fan. Do not place heavy items on top of the fan.
- **Free airflow:** Ensure nothing is blocking the airflow outlet and air intake grilles.
- **Before storage:** If the fan will not be used for a long time, please charge the battery completely and then store the product in a dry place.
- **Disposal:** This product contains a built-in lithium ion battery pack. Do not dispose of the product in a fire as it may explode.
- **Misuse:** We accept no liability for any damages or personal injury caused by misuse of the product and/or failure to follow these instructions.

Product Overview



Parts list

- 1 Fan head assembly
- 2 Fan blades (4)
- 3 Indicator light (working: blue, charging: red)
- 4 POWER/SPEED button
- 5 Micro USB charging port (at the back)
- 6 Handle
- 7 Stand

USB cable (not pictured)

NOTE: Due to continued product improvement, images and illustrations in this manual may vary slightly from the product purchased. All images in this manual are for reference only. Parts are not necessarily pictured to scale.

Instructions

Before first use

- **Unpacking:** This product has been packaged to protect it against transportation damage. Unpack the fan and keep the original packaging carton and materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the product when it is not in use. In the event that the packaging is to be disposed of, please recycle all packaging materials where possible.
- **Safe packaging disposal:** Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.
- **Inspection:** Unwind the USB cable to its full length and inspect it for damage. Do not use the product if the USB cable or the fan has been damaged or is not working properly. In case of damage, contact our after sales support centre.
- **Documentation:** Make sure you have read and understood all instructions and warnings in this manual. Refer to the illustration to familiarise yourself with the product and identify all parts. Pay particular attention to the safety instructions on the previous pages.
- **Assembly:** Your new fan has been fully assembled at the factory. No assembly is necessary.

Charging the fan

This product contains a built-in lithium ion battery, which must be charged before use.

- Connect the supplied USB cable to the micro USB port at the back of the fan handle and the USB connector end to a powered USB port (on a computer, laptop or other powered USB port).
- During charging, the indicator light will illuminate red.
- For your convenience, you can place the fan in the stand during charging.
- When charging has finished, disconnect the USB cable.
- **CAUTION:** If strong heat occurs during charging, stop charging or using the product and contact our after sales support centre for advice.

NOTE: If you use your computer for charging the fan, make sure to connect the computer to the power supply during charging to avoid battery power drain.

Instructions (Cont.)

Using the fan

This product has been designed for portable, handheld use for your convenience on the go.

Alternatively, place it in the supplied stand for use at work or home.



Speed selection

Use the POWER/SPEED button on the handle to switch on the fan. The indicator light above the button will illuminate blue. Now use the button to select the appropriate fan speed.

Press the POWER/SPEED button once	Low speed
Press the POWER/SPEED button twice	Medium speed
Press the POWER/SPEED button three times	High speed
Press the POWER/SPEED button four times	Power off

Cleaning and maintenance

WARNING!

- Before cleaning or maintenance, switch off the fan and make sure it is disconnected from the USB charging cable.
- Do not immerse the fan in water or other liquids. Do not spray it with liquids. Do not allow water to drip on or into the fan motor housing.
- Never use petrol, solvents, harsh detergents, or abrasive or alkaline cleaners on the fan.

Other Useful Information

Cleaning: Clean your fan periodically by lightly running a vacuum cleaner nozzle (soft brush) over the front and rear safety grilles to remove any dust. Alternatively, use a soft, dry cloth for dusting. If using a slightly damp cloth, ensure to follow with a dry cloth until the fan is completely dry. Do not attempt to open the housing for cleaning.

Storage: Store the clean and dry fan in a safe, dry location, protected from dust. We recommend using the original carton for storage.

Service/repair: The fan requires no maintenance and contains no user-serviceable parts. Do not attempt to take it apart, repair or modify it. Do not operate the fan if it is damaged, or when it is working abnormally. In case of damage or malfunction, contact our after sales support centre for advice.

Technical specifications

Battery output	3.7V ---
Power consumption	2.5-5W
Battery capacity	1200mAh.
Dimensions (approx.)	210 x 105 x 40 mm (Stand: 60 x 60 x 41 mm)
Weight (approx.)	170g (235g with accessories)

Compliance

This appliance has been fully tested and meets all requirements as set out by standards AS/NZS 60335.1 and AS/NZS 60335.2.80.



The RCM Mark (Regulatory Compliance Mark) indicates that the product complies with the relevant guidelines of the ACMA as well as corresponding government requirements for the safety of electrical devices.

E209

Responsible disposal

At the end of its working life, do not throw this appliance out with your household rubbish. Electrical and electronic products contain substances which can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area. Do not under any circumstances dispose of this product by burning it. The product contains a battery pack and it might explode.

Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, make sure to contact our After Sales Support Centre on (AU) 1300 886 649 or (NZ) 0800 836 761 for advice.

Distributed by Tempo (Aust) Pty Ltd ABN 70 106 100 252

PO BOX 6056 Frenchs Forest, Australia NSW 2086

Customer Helpline:

(AU) 1300 886 649 (NZ) 0800 836 761



Email: info@tempo.org

For an electronic copy of this manual, please contact our after sales support centre.

IM Version No: V1.0

Issue: April 2020

AFTER SALES SUPPORT

 (AU) 1300 886 649 (NZ) 0800 836 761 |  info@tempo.org