



# 30L GARDEN ROLLER

Item No. 0241586

## Parts List:

A - Handle x1	B - Handle Extension Bars x2	C - Cross Bar x1	D - Drum x1
E - Bolts x6	F - Washers x6	G x Small Nuts x6	H - Large Nut x2
			I - Plug x1

## Assembly:

<p>Step 1</p>	<p>Step 2</p>
<p>Step 3</p>	<p>Step 4</p>


**Important – Read these instructions carefully and retain for future use.**

### **Safety Warnings**

- Check all components are present against the parts list before assembly.
- To avoid the risk of suffocation to animals or children, dispose of the plastic bags immediately.
- Handle parts with care.
- Roller can be filled with water, sand or a combination of both water and sand.
- Use caution when turning, slowing or stopping.
- Take care when using on slopes.
- Always drain the roller if water is used to keep from freezing in cold areas.
- This product is intended for domestic use only.

### **How to fill the roller**

Rotate the roller, so that the plug hole is at the highest position. Remove the plug, and insert the garden hose. Ensure that you hold the hose securely while filling the roller. Fill the roller with water to the desired level (weight you require). Replace the plug, ensuring that it is securely in place. Your roller is now ready to use.

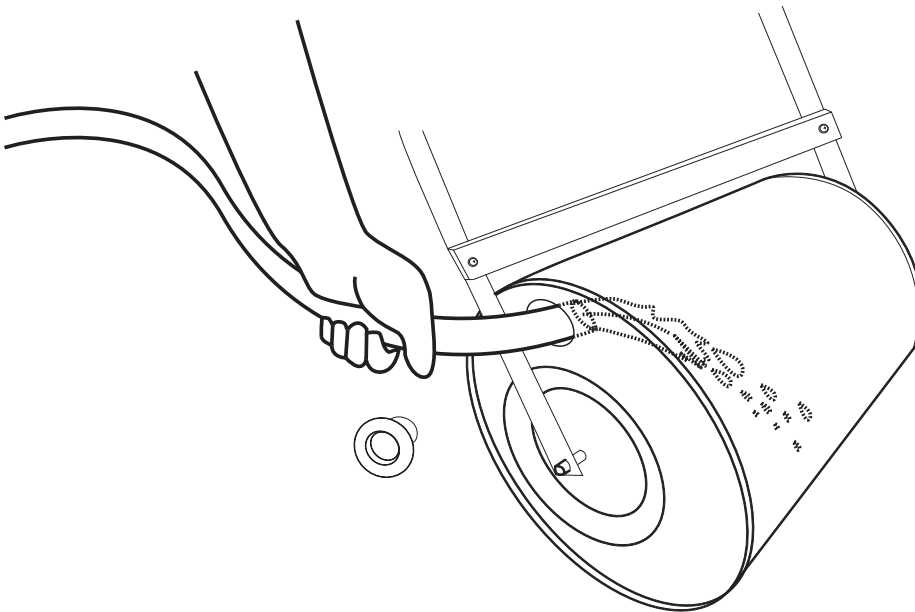

### **Care and Maintenance**

- Wipe clean after each use.
- To clean, wipe with warm, soapy water.
- Do not use organic cleaning agents, bleach or abrasive products.
- When not in use, store in a dry place.