


Instruction manual Heavy Duty Staple Gun

Loading the staple gun


Hold the staple gun upside down and release the refill latch, slide the rack out.

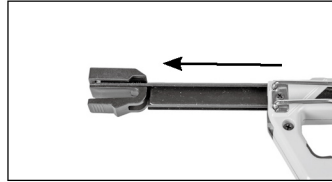


Place the staples or nails into the loading chamber



Refer to the markings on the bottom of the refill rack when loading the nails or staples.

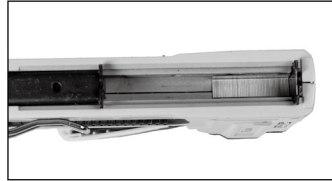


Slide the rack back slowly ensuring the nails or staples are fitted correctly.

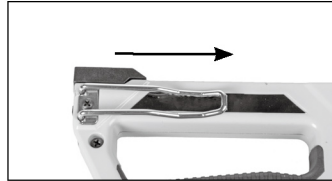

Adjusting the firing pressure


To increase the depth in which the nail/staple is driven into the workpiece, push the firing pressure adjustment switch to '+'.

To decrease the depth in which the nail/staple is driven into the workpiece push the firing pressure adjustment switch to '-'

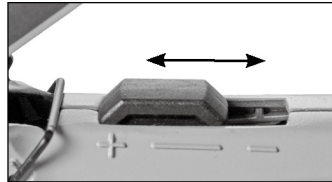


Selecting the fastener type

To fire heavy duty and gable staples push the fastener selection switch to the higher setting.

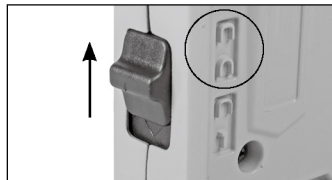

To fire light duty staples and nails push the fastener selection switch to the lower setting.

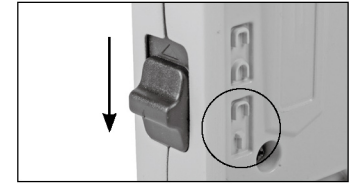

Operation

- . Place the firing chamber where the staple or nail is to be driven.*
- . Use downward pressure to keep the firing chamber firmly against the workpiece.*
- . Depress the soft grip handle until the staple gun fires.*
- . Release the soft grip handle.*

Maintenance and storage

The staple gun is mainly maintenance free. Wipe with a dry cloth before storage.