

NOOSA BUTTERFLY GAZEBO

ASSEMBLY GUIDE AND
OPERATING INSTRUCTIONS



MIMOSA NOOSA BUTTERFLY GAZEBO

WARRANTY CONDITIONS

Any claim under this warranty must be made within 3 years of the date of purchase of the product. To make a claim under the warranty, take the product (with proof of purchase) to any Bunnings store (see www.bunnings.com.au for store locations) or contact Gale Pacific.

Gale Pacific bears reasonable, direct, expenses of claiming under the warranty.

You may submit details and proof to Gale Pacific for consideration. The warranty covers manufacturer defects in materials, workmanship and finish under normal use.

This warranty is provided in addition to other rights and remedies you may have under law: our goods come with guarantees which cannot be excluded under the Australian Consumer Law or Consumer Guarantees Act 1993 (NZ). You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The warranty excludes damage resulting from product misuse or product neglect.

The warranty covers domestic use only and does not apply to commercial applications.

This warranty is given by Gale Pacific, ABN 80 082 263 778, 145 Woodlands Dr Braeside Vic 3195, 1800 331 521, galepacific.com
New Zealand #: 0800 555 171

WARRANTY EXCLUSIONS

Fading due to weather exposure or damage to the frame and fabric through accident, misuse or negligence. Your gazebo is a non-permanent structure. Always ensure the gazebo is properly weighted down. Damage caused by not following the instructions will void your warranty.



MIMOSA NOOSA BUTTERFLY GAZEBO

Make the most of your outdoor living area with your very own Mimosa Noosa Butterfly Gazebo. Relax and enjoy the outdoors while being protected from the sun.

The Mimosa powder coated aluminium frame Sorrento Gazebo is perfect for shading your garden, deck, courtyard or swimming pool.

IMPORTANT

This structure is a non-permanent structure and the warranty does not cover damage incurred under extreme weather conditions including heavy rain, high winds or if exposed to high heat from heaters or BBQs.

Safety precautions should always be followed when assembling and using this product to reduce the risk of personal injury and damage to equipment.


Please read all instructions before assembly and use. Never leave children unattended around/ under this gazebo.

Do not attempt to assemble or use the gazebo in moderate or heavy wind conditions. Always secure it during heavy winds or extreme weather conditions to avoid damage to the gazebo or personal injury.

PARTS LIST

Please check all parts against the parts list before commencing construction of Gazebo.

PARTS LIST	QTY
A Upper Corner Poles	2
B Upper Corner Poles	2
C Cover Poles	4
D Lower Leg Poles	4
E Feet	4
F Common Pole	8
G Common Bolts	16
H Centre Pole	4
J Leg Bolts with Plastic Caps	4
K Lower Leg Pole Bolts with Plastic Caps	4
L Elastic Bobbles	1
M Feet Bolts	12
N Spanner 1 (For Lower Leg Pole Bolts)	1
O Spanner 2 (For Upper Corner Pole Bolts)	1
P Canopy	1

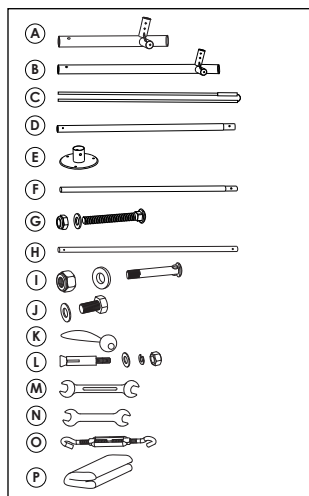





MIMOSA NOOSA BUTTERFLY GAZEBO

STEP BY STEP INSTRUCTIONS


Step 1: Measure a 4 x 4m square in the position you want the gazebo, mark the four corners with chalk or tape. Ensure the pole feet are placed on these markings with even spacing between poles to provide a sound structure.

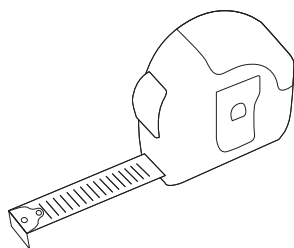

 
Step 2: Connect the common poles (f) using centre poles (h) as shown.



Step 3: Connect the common poles (f) into upper corner poles (a) and (b) as shown. Using spanner (n) provided secure with common bolts.

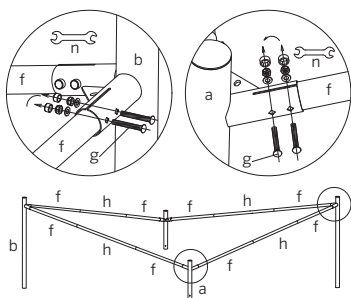

Step 4: Attach the feet (e) into lower leg poles (d) using bolts (j) and tool (m).

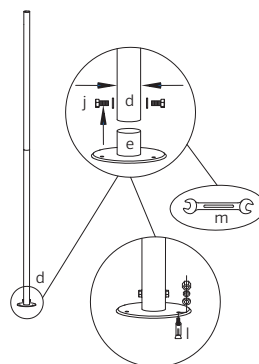





MIMOSA NOOSA BUTTERFLY GAZEBO

STEP BY STEP INSTRUCTIONS

Step 5: Unfold the canopy (p).

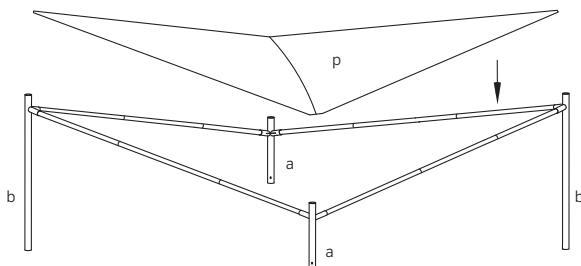

Step 6: Insert the four cover poles (c) along the edges of the canopy. Connect corners of the canopy to the corners of the frame with turnbuckles (o).

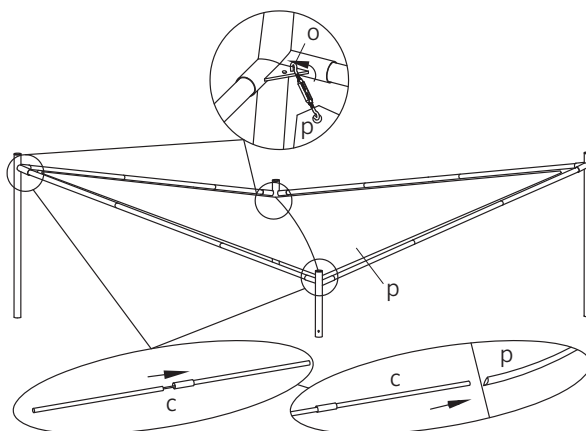





MIMOSA NOOSA BUTTERFLY GAZEBO

STEP BY STEP INSTRUCTIONS

Step 7: Secure the edges of canopy to frame with elastic bobbles (k). Tighten the turnbuckles (o) by rotating.

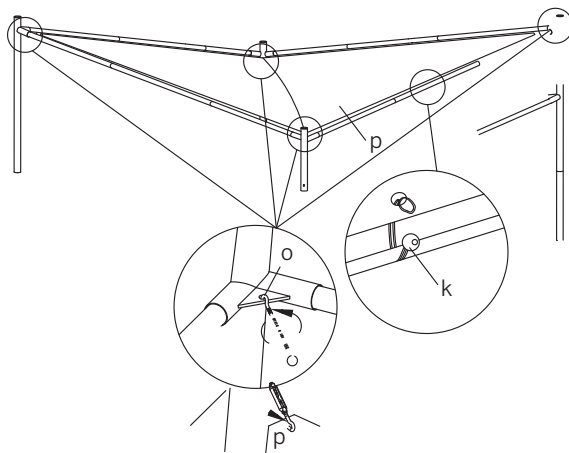

Step 8: Lift the assembled upper section of the gazebo and insert the lower leg of the gazebo and insert the lower leg poles (d) into the upper corner poles (a) and (b). Secure the connection with bolts and plastic caps (i).

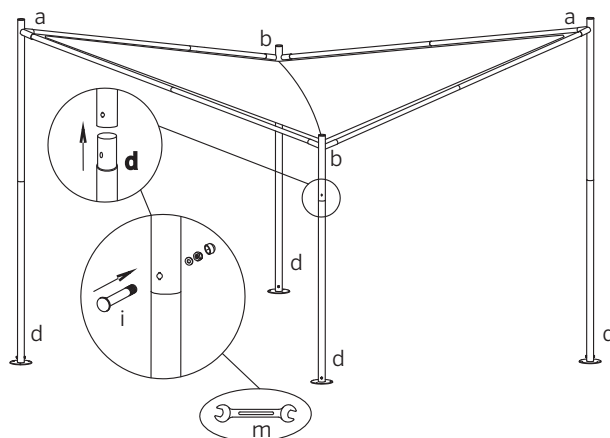



MIMOSA NOOSA BUTTERFLY GAZEBO

STEP BY STEP INSTRUCTIONS

Step 9: Once erect, ensure the Butterfly gazebo is firmly secured to a stable surface, you can use feet bolts (I) if desired.

