



DO NOT twist or knot suspension cords when hanging.




DO NOT exceed the maximum load of 150kgs.



DO NOT leave children or pets unattended in or near hammock.



Hammocks will stretch by 5-10% after the first few uses. Adjustments can be made after each use to keep you and your hammock comfortable.

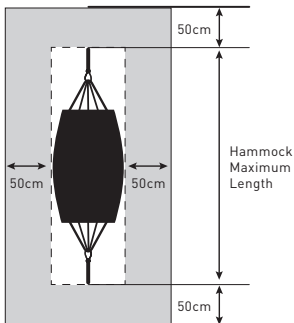

Allow a minimum of 50cm clearance range around the perimeter of your hammock when in use. (Fig.1)

PRODUCT MANUAL

DOUBLE HAMMOCK


150kg Capacity | Item No: 0215109



WARNING: Read instructions before use and keep for future reference. Failure to read these instructions before use can lead to an increased risk of injury. When installing always check with a qualified builder for safety.

Caution And Safety Instructions

1. Assembly must be carried out by an Adult.
2. Ensure hammock is fully assembled before use.
3. **DO NOT** exceed the maximum load of 150kgs.
4. **DO NOT** climb into hammock feet first.
5. **DO NOT** stand in hammock.
6. **DO NOT** dive into or jump about in hammock.
7. **DO NOT** stick your head through the suspension cords.
8. Keep suspension cords as straight as possible. **DO NOT** twist.
9. **DO NOT** use damaged or weakened hammock hanging accessories.
10. Hammocks are not designed for swinging, playing, climbing or to be used as a children's toy.
11. **DO NOT** leave children or pets unattended in or near hammock.
12. Hammock fabric, suspension cords and hanging accessories will become worn over time and with use. Always inspect prior to use and **DO NOT** use if items show signs of damage or weakness.
13. Always check the loading capacity before use.
14. Keep hammock clear of obstructions.
15. Allow a minimum of 50cm clearance range around the perimeter of your hammock when in use (Fig. 1).
16. Only use the hammock on level floors with shock-absorbing properties such as carpet or outdoor grass to minimise the risk of injury in case of an accident. **DO NOT** use on slippery or hard surfaces.
17. Never use a free standing brick wall to hang your hammock.
18. **DO NOT** modify hammock. Hammock must be used in accordance of this manual.
19. **DO NOT** smoke in or around the hammock. Keep away from heat or flames.
20. **DO NOT** use whilst wearing shoes, clothing, jewellery or accessories that have a hook and loop fastener.
21. **DO NOT** use near sharp objects.
22. A copy of this manual must be provided should the hammock transfer ownership.

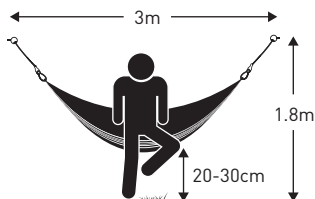

How To Hang Your Hammock

You will require two fixed points, such as a trees, beams, posts, or dyna bolts in brick walls. Consult a qualified builder if unsure. Never use a free standing brick wall to hang your hammock.


Your hammock will require a minimum of 3 metres between fixing points to get the ideal shape. Rope may be needed to attach one end of the hammock, it is recommended to use a double piece to avoid hammock twisting.



Temporary Installations

For temporary installations, such as trees or beams, we recommend using the Two Trees hanging kit.

1. Place the cord round the pole or tree, then thread through the figure eight hook.
2. Thread the cord through the clamp hook and secure at desired length.
3. Repeat process for other side of hammock. Ensure both hooks are secure, place hammock ends over hooks.

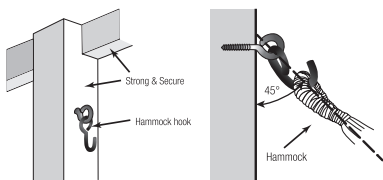

Permanent Installations

We recommend using the Two Trees screw eye and hook. Always check with your qualified builder if unsure of safety. For sturdy masonry walls (not air/hollow/single brick, besser block, or free standing walls) a 10mm dyna bolt with larger washer and rope can be used.

Frame Installation

We recommend using the Two Trees Universal Hammock Frame.



How To Relax In Your Hammock

1. Open the hammock fabric in the centre of the hammock and slowly and safely sit in the middle as you would a chair.
2. Gently lie back on a diagonal with your head on the edge of the hammock.
3. Bring your feet in and stretch them out, so you are lying on a diagonal. This is the traditional way to relax in a classic style hammock.



NOTE: Do not climb into your hammock feet first.



Do not
bleach



Do not
tumble dry



Do not
dry clean

Caring For Your Hammock

To prolong the life of your hammock it is best to store away when not in use, as the sun and rain will deteriorate the fabric over time. If using near the sea it is important to rinse regularly. Prior to washing your hammock, tie a loose single knot in the suspension ropes at both hanger ends. Machine wash with cold water on a regular cycle using non-bleach detergent. Do not tumble dry. Do not iron. DO NOT use harsh chemicals or solvents. Dry in shade.



Storing Your Hammock

When storing your hammock, make sure the hammock is clean and completely dry.

To prevent tangles in the hammock, place a knot in each suspension rope. Fold the hammock in half, with suspension ropes together. Then fold the edges of the hammock to the centre, and roll the hammock up starting with the suspension ropes. Store in a dry place.

PRODUCT WARRANTY

PLEASE KEEP YOUR RECEIPT AS THIS WILL AUTHENTICATE YOUR WARRANTY.

Warranty Conditions

Any claim under this warranty must be made within 12 months of the date of purchase of the product. To make a claim under the warranty, take the product (with proof of purchase) to any Bunnings store (see www.bunnings.com.au or bunnings.co.nz for store locations).

Bunnings Group Ltd bears reasonable, direct, expenses of claiming under the warranty. You may submit details and proof to our store for consideration.

The warranty covers manufacturer defects in materials, workmanship and finish under normal use.

This warranty is provided in addition to other rights and remedies you may have under law: our goods come with guarantees which cannot be excluded under the Australian Consumer Law or Consumer Guarantees Act 1993 (NZ). You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The warranty excludes damage resulting from product misuse or product neglect. The warranty covers domestic use only and does not apply to commercial applications.

This warranty is given by Bunnings Group Limited ABN 26 008 672 179, 16-18 Cato Street, Hawthorn East, Victoria 3123, e-mail: CustomerSupport@bunnings.com.au Or call our Customer Support Team – Ph.1800 797 586

This warranty is given by Bunnings NZ Limited: Postal address: PO Box 14436, Panmure, Auckland 1741, e-mail: marketing@bunnings.co.nz Or call our Customer Support Team – Ph.1800 797 586

Warranty Exclusions

Fading due to weather exposure or damage to the fabric though accident, misuse or negligence.

Max. weight capacity: 150kgs.