RETRACTING FLYSCREEN ROLLER DOOR





Appox. 1 Hour Install



1 Person Install


CONTROL CLOSE BY HAND.

DO NOT RELEASE DOOR UNTIL FULLY RETRACTED. RETRACTION FORCE OF UNCONTROLLED RELEASE MAY DAMAGE DOOR.


LEAVE DOOR OPEN IN HIGH WINDS

1300 155 355 info@pillarproducts.com.au


www.pillarproducts.com.au

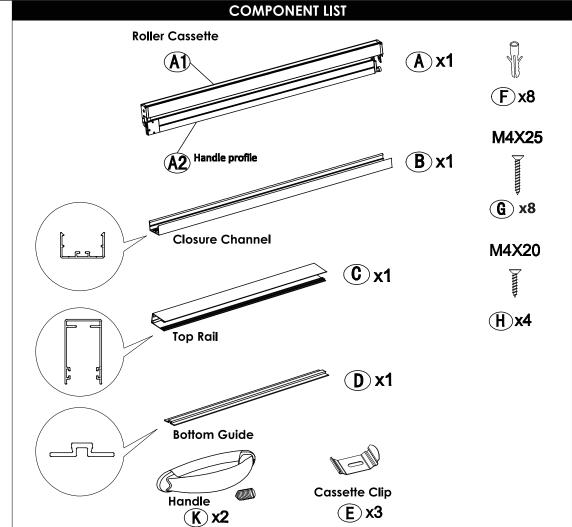




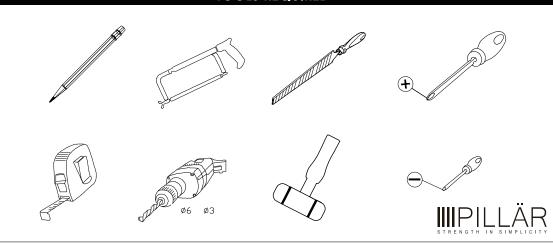

Measure opening Width and Height to ensure correct size door is selected.

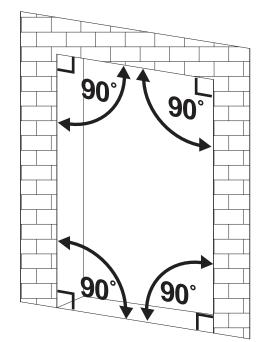


Opening **MUST** be **FLAT, LEVEL** and **SQUARE**. Door will not operate properly if installed out of square

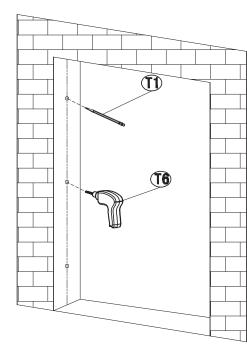


Measure, mark and pre-drill clip positions at even intervals. Use plugs if required.




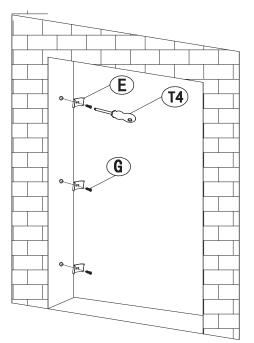


Attach Cassette Clips using screws provided at pre-drilled positions.

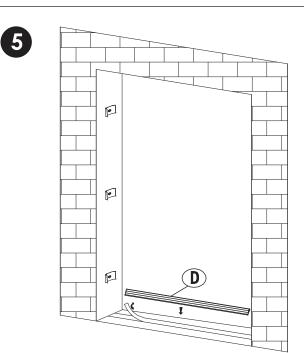


Attach the Bottom Guide to the floor using double sided tape. Additional adhesive may be used such as silicone.

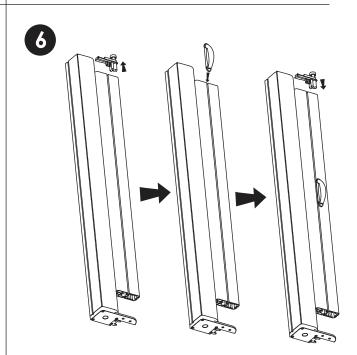


Remove the top guide to allow access for handle to slide into door & replace top guide. Secure at desired height.

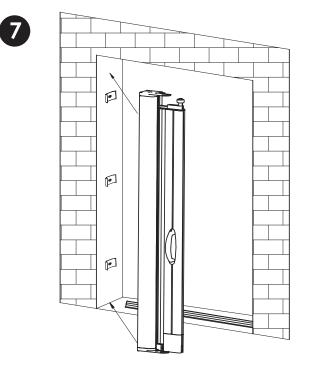





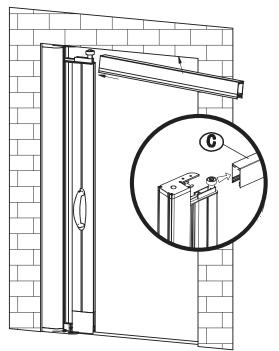


Insert the Top Rail over the wheel and onto the top of the Cassette as shown.

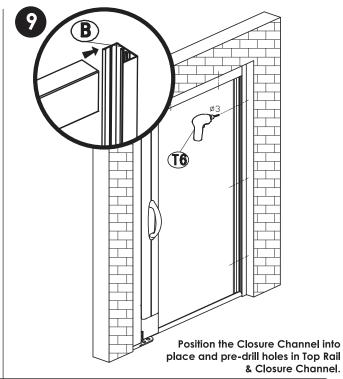

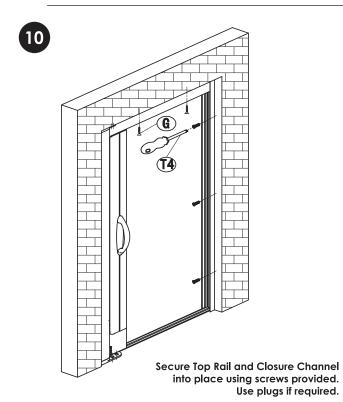

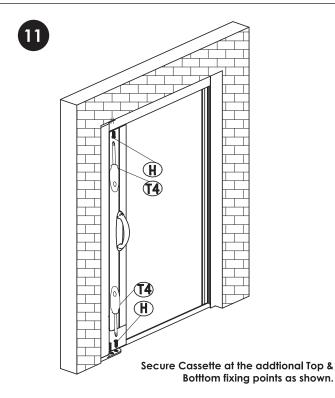

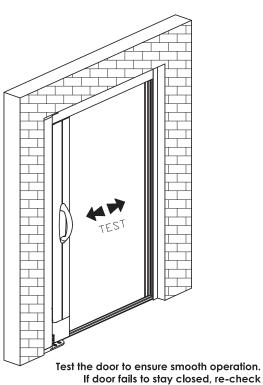

alignment and door is square

