


EUROMATIC

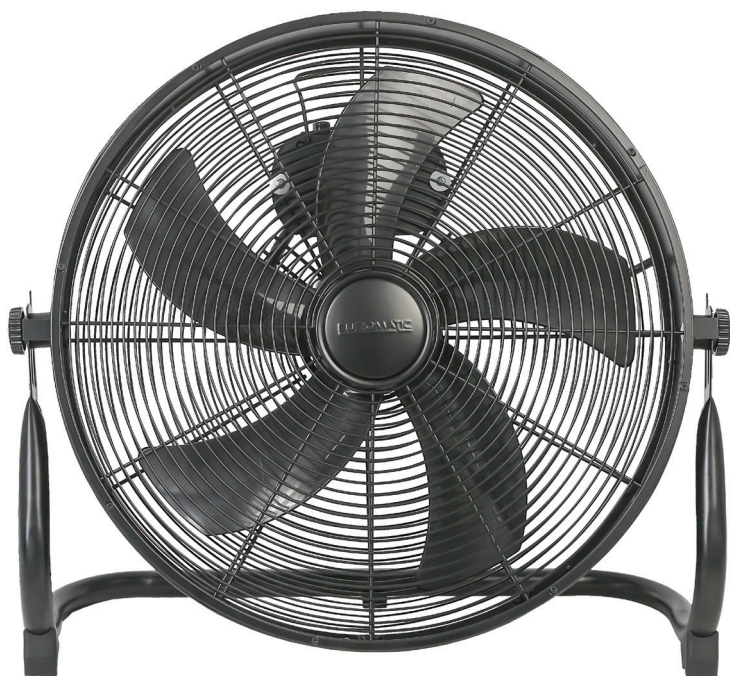

40cm Drum Floor Fan

USER MANUAL

Model Number FF5BMV

AFTER SALES SUPPORT

(AU) 1300 886 649 (NZ) 0800 836 761



Important Safety Instructions

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Make sure you understand all instructions and warnings. Keep the manual in a safe place for future reference, along with any warranty information, your purchase receipt and packaging carton. If you sell or transfer ownership of this product, pass on these instructions to the new owner.

Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

Electrical safety and cord handling

- **Voltage:** Make sure your outlet voltage and circuit frequency correspond to the voltage stated on the rating label. If this is not the case, do not use the fan.
- **Water:** To protect against fire and electric shock, do not immerse the cord, plug or the fan itself in water or other liquid, or expose the electrical connections to water. Ensure your hands are dry before handling the plug or switching on the appliance. Do not use the fan outdoors or on wet surfaces. Protect it from liquid spills.
- **Damage:** Check the power cord regularly for visible damage. If the cord is damaged, it must be replaced by the manufacturer, its authorised service centres or appropriately qualified personnel in order to avoid any hazards.
WARNING! Do not pick up or operate the appliance if the power supply cord, plug or housing is damaged, or after it malfunctions or has been dropped or damaged in any manner. In case of damage, contact our after sales support centre for advice.
- **Protect the power cord:**
 - * Do not operate the fan with the cord coiled up; always fully unwind.
 - * Do not twist or kink the cord or let it touch heated surfaces.
 - * Do not put any stress on the cord where it connects to the product.
 - * Never carry the fan by the cord.
 - * Arrange the cord away from any traffic area so no one will trip over it.
 - * Do not run the cord under carpeting or cover it with rugs or runners.
- **WARNING! No extension cord, no timer:** Do not use this fan with an extension cord, plug adaptor, external timer or separate speed control device.
- **Connection:** To insert the plug, grasp it firmly and guide it into outlet.
- **Disconnection:** Unplug the appliance from the power outlet when it is not in use and before cleaning, servicing, moving or storing the appliance. Grasp the plug and remove it from the outlet, do not pull the cord when disconnecting.
- **Guard removal:** Ensure the fan is disconnected from the power supply before removing a front or rear guard (grille).

Important Safety Instructions (Cont.)


- **RCD:** Unless your home is already fitted with a residual current device (safety switch), we recommend installing an RCD with a rated residual operating current not exceeding 30mA to provide additional safety protection when using electrical appliances. See your electrician for professional advice.

Usage conditions and restrictions

- **Domestic use only:** This appliance is intended for indoor household use only. It is not suitable for commercial, industrial or outdoor use. Do not use it for anything other than its intended purpose, and only use it as described in this manual. Any other use may cause fire, electric shock or injury.
- **No clothes drying:** Do not use this fan as a dryer.
- **Attachments:** The use of accessory attachments not recommended in this manual may cause injury or hazards.
- **Usage restriction:** This fan is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Children:** This fan is not a toy. Supervise children to ensure they do not play with it. Close supervision is necessary when any appliance is used by or near children.
- **WARNING! Do not leave unattended during use!** Always switch it off and unplug when not in use, if left unattended and before cleaning and storing.
- **Location:** Place the fan on a dry, flat, stable surface to avoid overturning.
- **Keep the top clear:** Do not place anything on top of fan.
- **Proper assembly:** Do not operate the fan until fully assembled with all parts. Do not use the appliance without the protective grilles (rear and front guards). Do not attempt to force the grille in order to stop or start the fan.
- **WARNING! DO NOT use the fan in the following areas:**
 - * Near an open flame, a hot burner, oven or other source of high heat.
 - * On a soft surface (such as carpet) or where it may tip over during use.
 - * Outdoors or in areas of high humidity without suitable ventilation (such as in a bathroom, laundry area, near a sink, washer, pool or any source of water).
 - * Near curtains or in tight corners, to enjoy maximum airflow.
 - * In areas where paint, petrol, etc. is stored and there is a risk of explosion or fire from flammable gases, or in areas where substances are being sprayed.
- **CAUTION! Personal safety:** Avoid contact with moving parts. Never insert fingers, pencils or any other objects through the grilles when the fan is running. Keep hair and loose clothing well away from the fan when it is in use.
- **Free airflow:** Ensure nothing is blocking the airflow outlet and air intake grilles. Do not insert foreign objects into any opening as this may cause electric shock and/or a fire hazard.
- **Misuse:** We accept no liability for any damages or personal injury caused by misuse of the product and/or failure to follow these instructions.

Product Overview

Front view

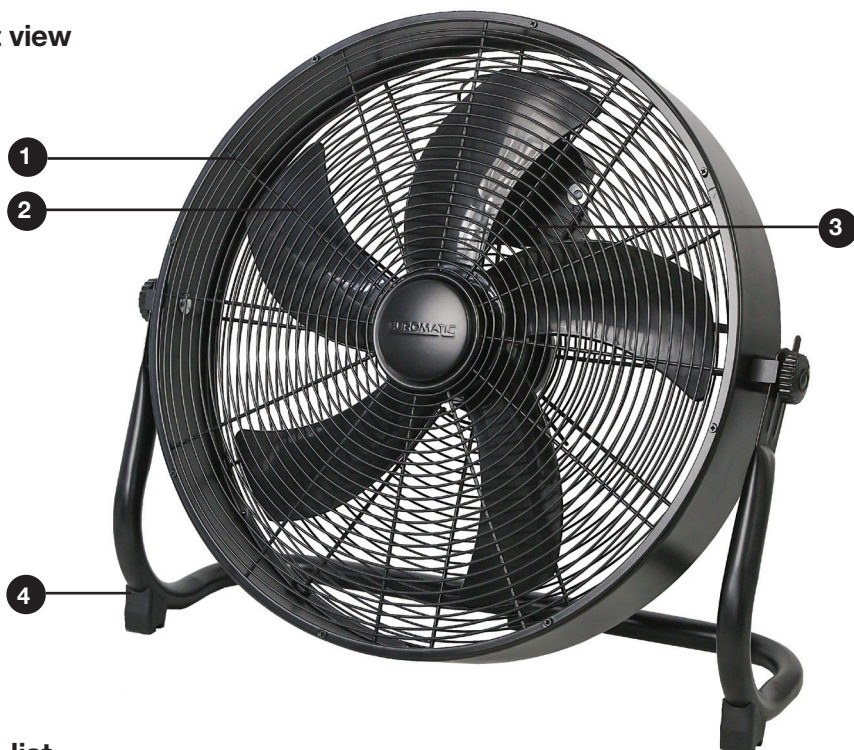

Parts list

- 1 Front grille
- 2 Fan blade
- 3 Motor
- 4 Stand (with protective rubber feet)
- 5 Speed controls

Speed controls (at the back)



NOTE: Due to continued product improvement, images and illustrations in this manual may vary slightly from the product purchased. All images in this manual are for reference purposes only. Parts are not necessarily pictured to scale.

Instructions

Unpacking

- This product has been packaged to protect it against transportation damage. Unpack the appliance and keep the original packaging carton and materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the appliance when it is not in use. In the event it is to be disposed of, please recycle all packaging materials where possible.
- Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.
- Unwind the cord to its full length and inspect it for damage. Do not use the appliance if the appliance or its cord has been damaged or is not working properly. In case of damage, contact our after sales support centre for advice on examination, repair or return of the damaged product.
- Make sure you have read and understood all instructions and warnings in this manual. Refer to the Product Overview, opposite, to familiarise yourself with the product and identify all parts. Pay particular attention to the safety instructions on the previous pages.
- No assembly is necessary. The fan comes fully assembled.

Using the fan

This fan is equipped with 3 speeds and the fan head can be tilted up/down. To use the fan, follow the simple instructions below.

- Place the fan on a dry, level surface where it will not overturn during use. It is designed for floor use.
- Make sure the speed control buttons at the back of the fan are in the OFF position (no button is pressed down), then insert the power plug into an appropriate electrical outlet.

Switching on and speed selection

- Press the desired speed control button at the back of the fan to switch it on. The fan will start straight away: [1] Low, [2] Medium, [3] High Speed.
- Press the [0] button to switch off the fan.

Tilt adjustment

To target the breeze at a particular angle, the fan head can be tilted up/down. Simply move the fan head gently up or down to the desired position. Ensure the screws at the sides of the fan head are tightened securely.

CAUTION: Do not tilt the fan head further than it is intended to go (100 degrees). Doing so will damage the unit.

Other Useful Information

WARNING!

- Before cleaning, maintenance or moving the fan, and before removing a front or rear grille, switch off the fan and unplug it from the wall outlet.
- Do not immerse the fan in water or other liquids. Do not spray it with liquids. Do not allow water to drip on or into the fan motor housing.
- Never use petrol, solvents, harsh detergents, or abrasive or alkaline cleaners on the fan.

Cleaning and maintenance

- **Dusting:** Clean your fan periodically by lightly running a vacuum cleaner nozzle (soft brush) over the front and rear grilles to remove any dust or dirt that may have accumulated inside or on the unit. Alternatively, use a soft, dry cloth for dusting.
- **Stubborn stains:** Use a slightly damp, soapy cloth for stubborn stains but be sure the cloth is not too wet. Use caution around the motor housing area. Do not allow the motor or other electrical components to be exposed to water.
- **Thorough cleaning:** To remove stains from the blades, or for thorough cleaning before storage, open the clips at the edge of the grilles, remove the tiny screw and nut at the bottom of the grille edge and take off the grilles. Remove the blades cautiously for cleaning, taking care not to drop them, then refit. Make sure all grille clips are securely closed and the screw and nut tightened before reuse.
- **Storage:** When storing your fan in the off season, make sure to keep it in a safe, dry location, protected from dust. We recommend using the original carton for storage. Alternatively, place a large plastic bag or old sheet or towel over the cleaned appliance for dust protection.
- **Service/repair:** The appliance requires no maintenance and contains no user-serviceable parts. Do not take the motor part apart; do not attempt to repair or modify the fan. Do not operate the fan if its power cord or plug is damaged, or when it is working abnormally. In case of damage or malfunction, or if the cord is damaged, have the unit repaired by trained personnel only, or contact the after sales support line for advice on repair or replacement. But before phoning for a service, please ensure that your fan is properly assembled and connected to your power supply.

Other Useful Information (Cont.)

Technical specifications

Power	50W, 220-240V ~, 50Hz
Fan speeds	3 (Low - Medium - High)
Dimensions (mm)	500 x 180 x 475 (approx.)
Weight	3.7kg (approx.)

Compliance

This appliance has been fully tested and meets all requirements as set out by standards AS/NZS 60335.1 and AS/NZS 60335.2.80.



The RCM Mark (Regulatory Compliance Mark) indicates that the product complies with the relevant guidelines of the ACMA as well as corresponding government requirements for the safety of electrical devices.

Responsible disposal

- At the end of its working life, make the appliance unserviceable by unplugging it from the power outlet and cutting the power cord.
- Do not throw this appliance out with your household rubbish. Electrical and electronic products contain substances which can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

Warranty returns

Should you for any reason need to return this product for a warranty claim, make sure to include all accessories with the product.

Product does not work?

If you encounter problems with this product, or if it fails to perform to your expectations, make sure to contact our After Sales Support Centre on (AU) 1300 886 649 or (NZ) 0800 836 761 for advice.

Distributed by Tempo (Aust) Pty Ltd ABN 70 106 100 252

PO BOX 6056 Frenchs Forest, Australia NSW 2086

Customer Helpline:

(AU) 1300 886 649 (NZ) 0800 836 761

Email: info@tempo.org

For an electronic copy of this manual, please contact our after sales support centre.

IM Version No: V1.0

Issue: June 2020

After Sales Support

☎ (AU) 1300 886 649 (NZ) 0800 836 761 | ✉ info@tempo.org