INSTALLATION AND WIRING INSTRUCTIONS

MANROSE[®] Premium Inline Fan



Model: MRINL100 and MRINL150 READ AND SAVE THESE INSTRUCTIONS

Premium Inline Fan

Premium Inline Fans have been manufactured in accordance with the rigorous standards of production as defined by the International Quality Standards ISO 9001, to Ventair's specifications.

All the components have been checked and tested at the end of the manufacturing process.

We recommend that you check the following after receiving this product:

- 1. The correct size has been received
- 2. The correct model has been received

3. The details on the rating label correspond to the electrical supply: voltage, frequency etc.

Remove the unit from packaging and inspect for shipping damage upon receiving this exhaust fan. If the product is found to be damaged, immediately contact your local authorised supplier. DO NOT OPERATE THE UNIT IF DAMAGED.

ENVIRONMENT

This exhaust fan is suitable for operation within indoor environments only. The fan is suitable for the exhaust or supply of both conditioned and un-conditioned airstreams within the temperature ranges (inclusive of duct airstream's temperature) of (-10°C up to +45°C).

ELECTRICAL EQUIPMENT SAFETY PLEASE READ BEFORE USE

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

(a) Use this unit only in the manner intended by the manufacturer. If you have any questions contact the manufacturer.

(b) This product comes with plug and lead. Before servicing or cleaning please ensure unit is unplugged or disconnected from the power supply.

(b) Before servicing or cleaning the unit, switch the power off at the service panel and lock the service disconnecting means to prevent power from being switched on accidentally.

When the service disconnecting means cannot be locked; securely fasten a prominent warning device such as a tag to the service panel.

(c) Installation work and electrical wiring must be done by a qualified person(s) in accordance with all applicable National codes & standards including National Build code of Australia.

(d) Precautions must be taken to avoid the back-flow of gases into the room from the open flue of gas or other fuel-burning appliances.

Follow the heating equipment manufacturer's guideline and latest safety standards such as the Build Code of Australia, the National Wiring Rules also known as AS/NZS 3000 and any other local council code authorities.

(e) When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.

(f) Ducted fans must always be vented to the outdoors.

(g) If this unit is to be installed over a tub or a shower, it must be installed in accordance with the Australian National Wiring Rules: AS/NZS3000 (the latest thereof).

(h) Never place a switch where it can be reached from a tub or shower.

(i) CAUTION: For General Ventilating Use Only. Do Not Use To Exhaust Hazardous Or Explosive Materials and Vapours.

(j) CAUTION: This fan is to be installed so that the blades are more than 2.1 m above the floor.

(k) All units are suitable for use with solid-state speed control.

INSTALLATION – Applications, Recommendations & Wiring

Installation tips:

This exhaust fan can be mounted in any orientation, horizontal or vertical, and is suitable for numerous types of applications. See Figure (1) Illustration of some typical applications.

If the installation is made to rigid or flexible ducting, then we would recommend the correct diameter ducting is used to couple to the fan flanges. If it is necessary to bend the duct at the discharge of the fan, then the bend radius should be as large as possible.

Before installing the product check the following points:

(1) the fan impeller turns freely; and

(2) there are no obstructions to the airflow.

(3) there is a socket outlet to provide power to the fan and that the socket outlet can turn OFF/ON via wall switch. If there is no socket outlet near the location of installation, a licensed electrician will be required.

(4) the correct ducting size (100mm or 150mm) required are prepared and ready to be connected to the fan inlet and outlet.

This exhaust fan includes a robust mounting bracket which enables easy and

quick installation of the fan.

Ductwork connection should be made with duct tape or duct fast-clamps (available through your local distributor) to ensure a good seal and secure connection.

Figure 1. Typical Applications:

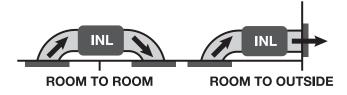


Figure 3. Installing and Assembly:

To start the installation:

CAUTION: Ensure the electrical power to the circuit is switched OFF and the switch board before carrying out this installation.

1.Located a suitable mounting surface to mount the fan at the mounting base shown in diagram below.



Mounting base

2. Secure the fan to the mounting surface with suitable screws for the mounting surface material. Ensure all four fixing points are secured.

3. Connect the ducting to both the inlet and outlet of the fan;

4. Return power to the circuit and Switch ON/OFF to operate the fan.

MAINTENANCE

IMPORTANT: BEFORE CARRYING OUT ANY MAINTENANCE OR SERVICING, ENSURE THE UNIT IS DISCONNECTED FROM THE MAIN ELECTRICAL SUPPLY.

We would recommend inspection of the product at least once every twelve (12) months to avoid the excessive accumulation of dust and dirt on the impeller.


To inspect the unit disconnect from electrical supply and remove from ducting. If any debris is evident on the impeller clean with a damp (not wet) cloth. DO NOT USE any detergents or abrasive materials for cleaning.

TECHNICAL SPECIFICATION

| Rated input Voltage: | 220-240V AC | 220-240V AC | |
|--|---|---|--|
| Model: | MRINL100 | MRINL150 | |
| Rated Motor Power: | 18 Watts | 28 Watts | |
| Rated Frequency: | 50 Hz | 50 Hz | |
| Input/output Ducted diameter: | 97 mm (For 100mm ducting tubing) | 145mm (For 150mm ducting tubing) | |
| Max. Air flow rate: | 119 CBM/h | 379 CBM/h | |
| Electrical classification: | Class 1 | Class 1 | |
| IP Rating (Ingress Protection rating) | IP44 | IP44 | |
| Indoor / Outdoor Suitability: | For indoor and covered outdoor applications | For indoor and covered outdoor applications | |
| Climatic Classification: | Tropical condition | Tropical condition | |

MRINL100


DIMENSIONS

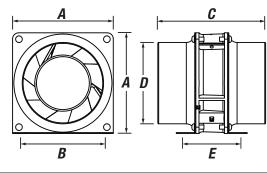

| A | B | С | D | Ε |
|-------|-------|-------|-------|------|
| 120mm | 101mm | 128mm | Ø97mm | 69mm |

MRINL150

DIMENSIONS

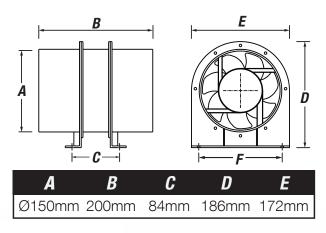

Manrose

By Ventair Pty Ltd. **4** Capital Place Carrum Downs VIC 3201

MANROSE MANROSE BY VENTAIR PTY LTD

4 Capital Place Carrum Downs VIC 3201

IMPORTANT EXHAUST FAN WARRANTY INFORMATION FOR OWNER AND INSTALLER. PLEASE READ AND OWNER TO RETAIN

OUR GOODS COME WITH GUARANTEES THAT CANNOT BE EXCLUDED UNDER THE AUSTRALIAN CONSUMER LAW. YOU ARE ENTITLED TO A REPLACEMENT OR REFUND FOR A MAJOR FAULT AND COMPENSATION FOR ANY OTHER REASONABLY FORESEEABLE LOSS OR DAMAGE. YOU ARE ALSO ENTITLED TO HAVE THE GOODS REPAIRED OR REPLACED IF THE GOODS FAIL TO BE OF ACCEPTABLE QUALITY AND THE FAILURE DOES NOT AMOUNT TO A MAJOR FAILURE.

THIS PRODUCT IS COVERED BY A THREE YEAR REPLACEMENT WARRANTY AND A ONE YEAR COMMERCIAL WARRANTY.

BEFORE HAVING THE EXHAUST UNIT INSTALLED. CHECK ALL THE COMPONENTS TO ENSURE THERE IS NO VISUAL DAMAGE. SHOULD THERE BE ANY DAMAGE, RETURN THE UNIT TO PLACE OF PURCHASE FOR REPLACEMENT. IN HOME WARRANTY SERVICE WILL NOT BE PERFORMED TO REPLACE ANY SURFACE SCRATCHED OR MARKED PARTS.

THE FOLLOWING POINTS NEED TO BE CHECKED BEFORE REQUESTING A WARRANTY REPLACEMENT. PLEASE ENSURE YOUR INSTALLER ALSO READS THIS INFORMATION.

THIS WARRANTY IS SUBJECT TO THE BELOW WARRANTY CONDITIONS:

- 1. THE FAN OR BELEVANT PART HAS NOT BEEN MODIFIED. SUBJECT TO MISUSE, NEGLECT OR BEEN INVOLVED IN AN ACCIDENT.
- 2. THE REPAIRS ARE NOT REQUIRED AS A RESULT OF NORMAL WEAR AND TEAR.
- 3. THE PRODUCT WAS INSTALLED IN ACCORDANCE WITH THE INSTRUCTION MANUAL.
- 4. NO SOLID STATE SPEED CONTROL DEVICE HAS BEEN USED WITH THIS APPLIANCE.
- 5. GLOBES SUPPLIED ARE NOT COVERED BY WARRANTY
- IF YOU CONSIDER THERE ARE FAULTS RELATING TO THE INSTALLATION. CONTACT YOUR INSTALLER TO RECTIFY.
- IF YOU CONSIDER THERE IS AN MANUFACTURER DEFECT TO THE FAN MOTOR, CONTACT THE WARRANTY SERVICE LINE ON 1300 665 926, OR LOG THE WARRANTY AT www.ventair.com.au/warranty

YOU WILL NEED TO PROVIDE THE FOLLOWING INFORMATION:

- THE BRAND. MODEL NUMBER AND COLOUR OF THE UNIT
- THE DATE AND PLACE OF PURCHASE OF THE UNIT.
- THE OWNERS NAME, ADDRESS AND TELEPHONE CONTACT NUMBERS
- THE NATURE OF THE FAULT

MANROSE

IMPORTANT

WARRANTY INFORMATION ON REVERSE SIDE. DO NOT DISCARD

PURCHASE RECORD FOR YOUR REFERENCE

PLEASE FILL IN THIS CARD PRIOR TO INSTALLATION. INFORMATION IS MANDATORY IN CASE OF WARRANTY CLAIM

| BRAND: |
|---|
| MODEL NUMBER: |
| SERIAL/BATCH NUMBER: |
| COLOUR: |
| DATE OF PURCHASE: |
| PURCHASED FROM: |
| INSTALLED BY ELECTRICIAN (IF APPLICABLE): |
| ELECTRICIAN LICENSE NUMBER (IF APPLICABLE): |
| |