



ASSEMBLY INSTRUCTION
DELUXE EASY UP GAZEBO
6M X 3M
Item no. 3192055


ITEM	PART	QTY (PCS)	PART NAME
A		1	FRAME
B		1	CANOPY
C		10	STAKE
D		4	ROPE
E		1	STORAGE BAG

Care and Maintenance

Wash frame and canopy with a mild solution of soap and water, rinse thoroughly. Dry completely. Do not use bleach or solvents.

Inspect frame periodically to ensure all bolts and nuts are tight.

Always return the gazebo to the carry bag after use. Be sure the gazebo is completely dry before storing it.

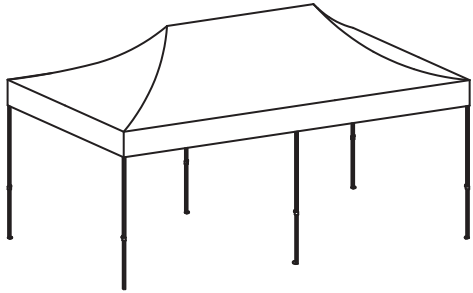

SET-UP INSTRUCTIONS

IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING ANY PART OF SET-UP

NOTE: First Time Assembly
Canopy Top and frame are shipped unattached to avoid damage. For first time set up requires that top be attached on to the frame with velcro. Once canopy top is permanently attached, set up and take down are easily accomplished within seconds.

-
1. Stand frame **(A)** upright. Starting at the corners, with person standing on the opposite side, grasp the two outer legs, slightly lift the frame off the ground and step backward, stopping at full arms' length.
-
2. Take out the pocket from canopy pack and place it onto the top of center pole and tie it up as an extra protection.
-
3. Place the Main Canopy **(B)** over the top frame. Use the Velcro pads to secure each corner of the canopy to the frame under the plastic leg caps.
-
4. Each person should then grasp the bottom of the middle frame section(cross beams) where it forms diamond. Lift slightly and slowly walk backward until the frame is fully extended. Be careful not to pinch your finger or pull backward too hard as this may result in the bending of cross beams.

SET-UP INSTRUCTIONS (CONT'D)

-
5. Engage the slider at each corner by pushing up the slider with one hand while holding down the top of the leg with the other hand. Repeat this at the rest of corners.
-
6. Lift two adjacent outer legs and pull out inner legs gently until spring loaded snap button pops in position. Repeat on the other two legs. The gazebo offers three height levels. To adjust, lift the leg up, carefully depress the push button at knuckle and slowly pull out the inner leg until the snap button pops in next position. Repeat on the other legs. Be careful do not overpull the leg and exceed maximum height.
-
7. Stake **(C)** down the gazebo by driving the 4 small anchors through one of the holes on each base foot. This will keep the leg from moving sideways in mild weather conditions.
-
8. Measure out from the leg to a proper distance and secure the four big anchors to ground at a 45 degree angle. Tie up one end of each guy **(D)** rope to the triangular shaped rope holder located on the outside fabric corners. Tie the other end of each rope to the anchor on the ground. Make sure the guy ropes have the proper tension.

THIS GAZEBO MUST BE SECURED TO THE GROUND WITH ANCHORS AND GUY ROPES.

TAKE-DOWN INSTRUCTIONS

IMPORTANT : DO NOT USE EXCESSIVE FORCE DURING TAKING-DOWN. PLEASE REMOVE ANCHORS AND GUY ROPES BEFORE TAKING DOWN

-
1. Release each push button on each leg and shorten the frame to its original height prior to extending the legs during set-up.
-
2. CRITICAL STEP TO AVOID FRAME DAMAGE! Release sliders at all four corners by gently depressing the push button and pushing the sliders down a bit.
-
3. With person on the opposite side, grasp the middle section of the frame and lift up slightly.
-
4. Walk forward slowly allowing for the frame to fold inward and close. Be careful not to pinch fingers or hands as you close the frame.
-
5. Completely close the frame with or without the canopy attached.
-
6. Place the frame into the storage bag **(E)** slowly until gazebo fits comfortably. Zip the storage bag completely shut. Be sure the gazebo is completely dry before storage.
-
7. Wheel your gazebo to your desired storage area.