



# **LAVA BRONTE RECLINER CHAIR**

## **ASSEMBLY INSTRUCTIONS**




### **Item No. 0177374**

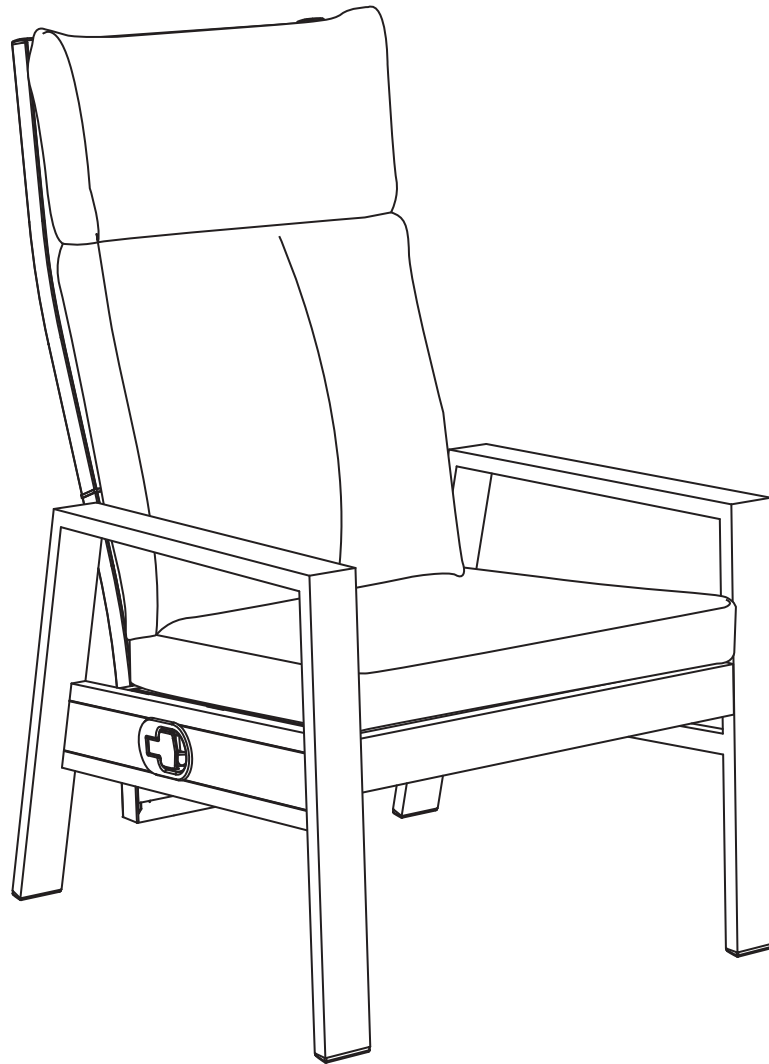

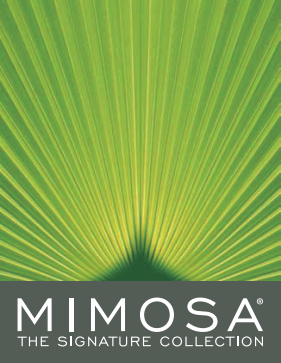



#### **READ & SAVE BELOW INSTRUCTIONS BEFORE ASSEMBLY**

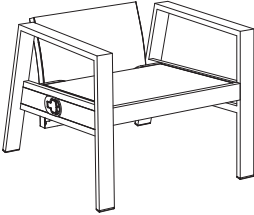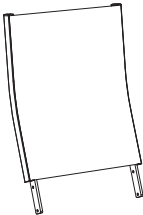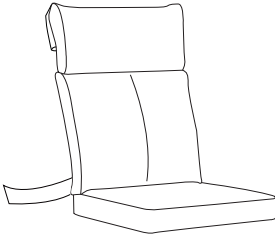
1. PLEASE SEPARATE AND IDENTIFY ALL PARTS, MAKING SURE THAT YOU HAVE ALL OF THE PARTS LISTED.
2. TO AVOID ANY SCRATCHES DURING ASSEMBLY, ASSEMBLE ON A SOFT MAT OR SIMILAR.
3. ASSEMBLE STEP BY STEP FOLLOWING THE INSTRUCTIONS.
4. WASHERS MUST BE USED.
5. DURING ASSEMBLY DO NOT OVER FASTEN SCREWS & NUTS.
6. DO NOT COMPLETELY TIGHTEN EACH SCREW AND NUT UNTIL THEY ARE ALL FIXED IN PLACE.

## PARTS LIST


CODE	PARTS	QTY.
#1	 <p>Seat Base</p>	1PC
#2	 <p>Back</p>	1PC
#3	 <p>Cushion</p>	1PC

## HARDWARE LIST


CODE	PARTS	QTY.
A	 <p>Bolts</p>	4PCS
B	 <p>Washer</p>	4PCS
C	 <p>Allen Key</p>	1PC
D	 <p>Cap</p>	4PCS

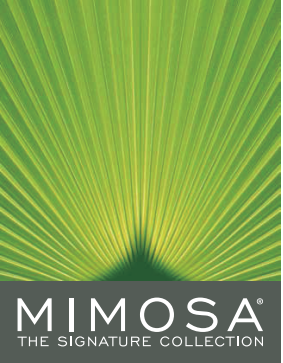


- 1 Use the Allen Key(C) to fix the back(#2) to seat base(#1) using bolts(A) and washer(B). Cover with cap (D).

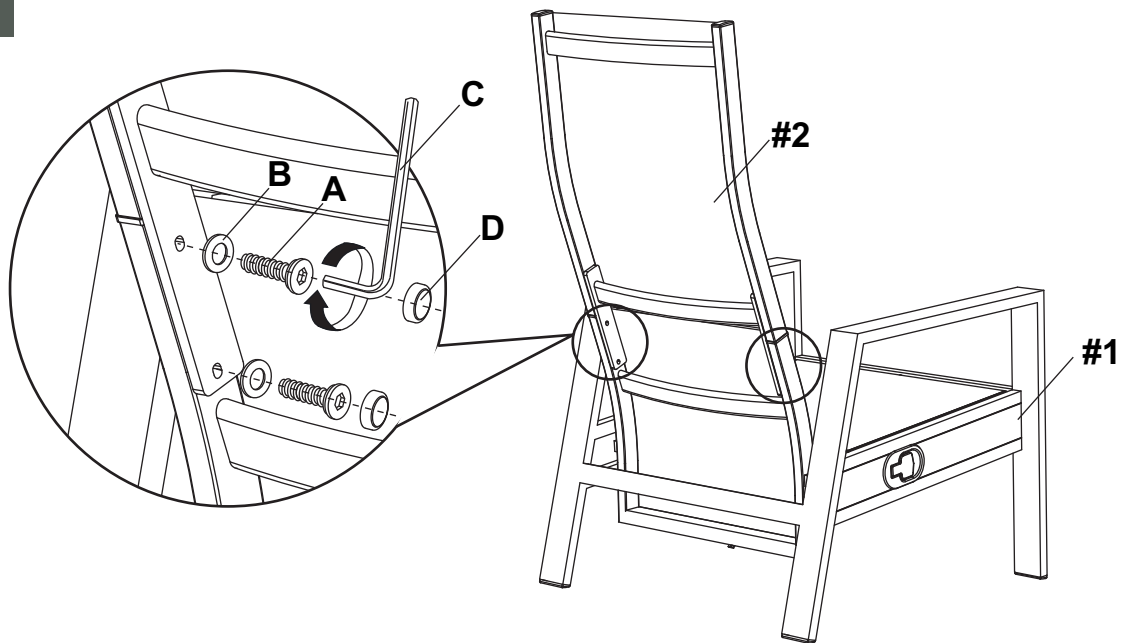

- 2 Fasten the cushion(#3) on chair with belts.

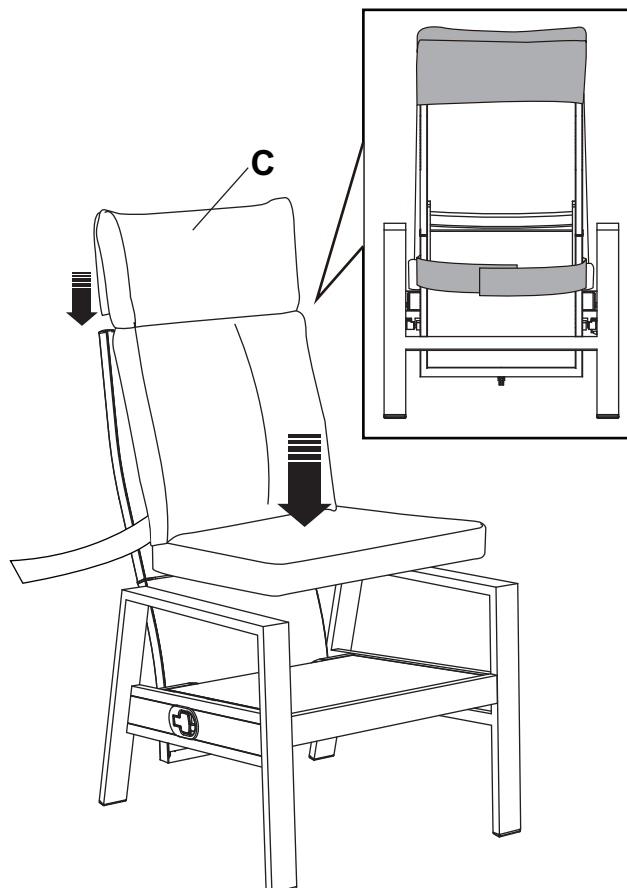

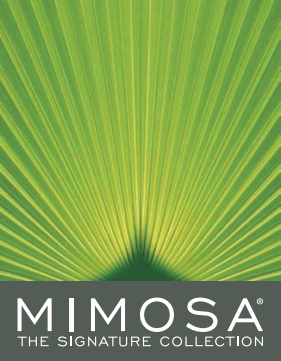

- 3 Adjust the chair to any position as desired with chair gas pump and your chair is ready to use.

