



3-tier Plant stand
Item No. 0262338




Assembly Instructions

Parts List					
1		Hook frame	2	6	 Cross brace
2		Short L frame	2	7	 Bolt M6 x 8
3		Shelf	3	8	 Bolt M6 x 25
4		Long L frame	2	9	 Bolt M6 x 30
5		Ornamental fringe	3	10	 Spanner

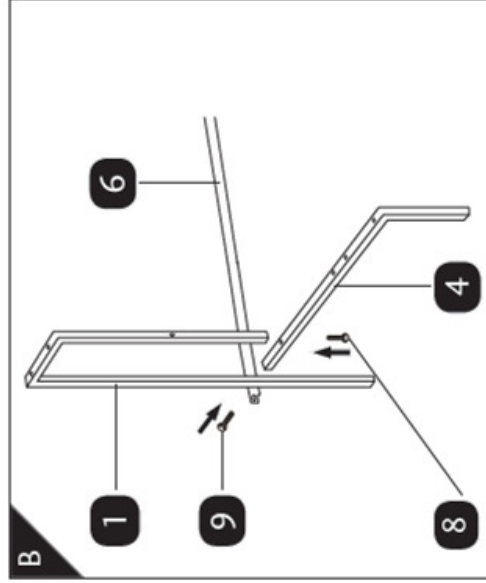


Assembling the frames

1. Lay out one hook frame **1**, the cross brace **6**, one long L frame **4**, and one M6 x 30 mm screw **9**.
 2. Loosely secure the cross brace to the back of the hook frame and the long L frame to the front of the hook frame by manually inserting and securing the M6 x 25 mm screw **8** (see Fig. B).
- Repeat for the remaining hook frame and long L frame.

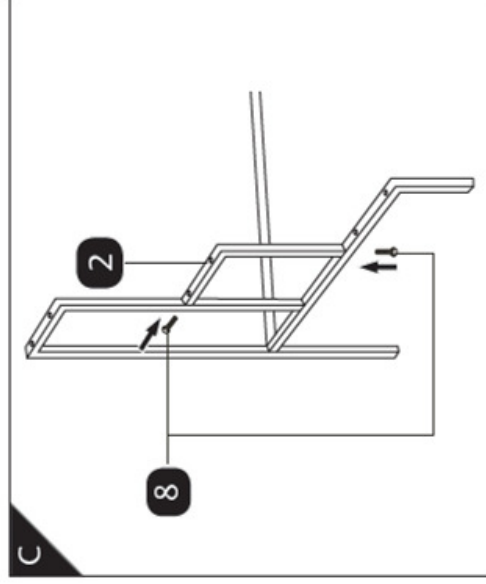

3. Take one short L frame **2** and match it up to the front of a hook frame.
 4. Make sure the holes in the short L frame face upwards.
 5. Loosely secure the short L frame to the hook frame by manually inserting and securing an M6 x 25 mm screw **8** (see Fig. C).
- Repeat for the remaining short L frame.
- Next, assemble the shelves.

Assembling the shelves

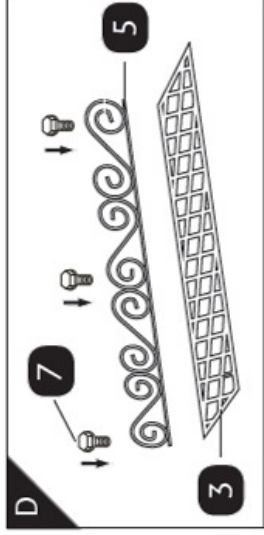


1. Lay out one shelf **3** and an ornamental fringe **5**.
2. Align the screw holes.
3. Loosely fasten the ornamental fringe to the shelf with three M6 x 8mm screws **7** (see Fig. D).




4. Check the position of the ornamental fringe on the shelf. If it is satisfactory, tighten the M6 x 8mm screws with spanner.
The shelf is now assembled (see Fig. E).
Repeat for the remaining ornamental fringes and shelves.
Next, combine the frames and shelves.

Combining the frames and the shelves

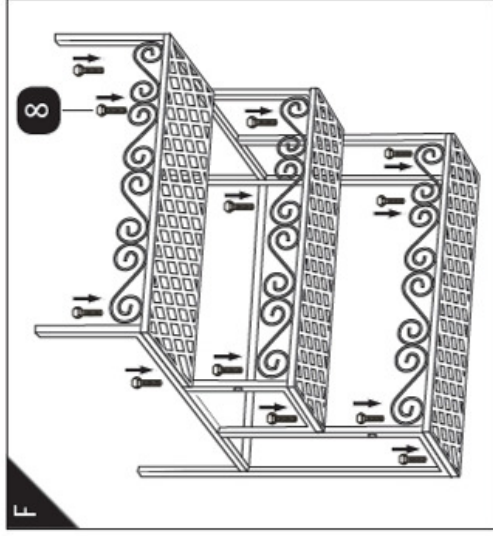

1. Make sure one shelf **3** is upside down.
2. Turn the assembled frames upside down and place the topmost part of the hook frames **1** on the shelf.
Make sure the holes in the hook frames align with the holes on the shelf.
3. Loosely attach the shelf to the hook frames by manually inserting and securing four M6 x 2.5 mm screws **8** (see Fig. F).
Repeat for the remaining shelves.
4. Carefully turn the loosely-assembled flower steps upright.
5. Check the positioning of all components is satisfactory.

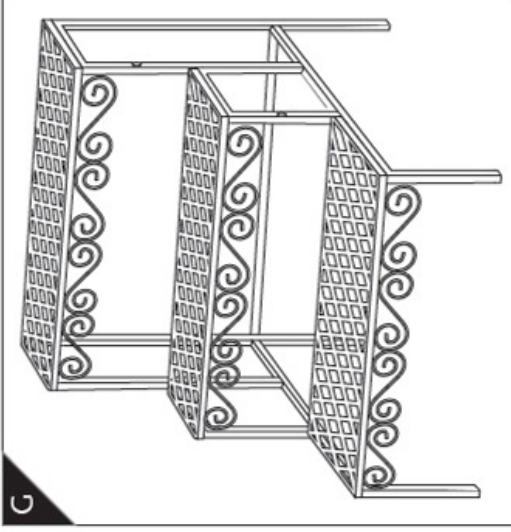

6. Carefully move the plant stand to the desired location.
7. Re-check that the M6 x 8mm screws **7** the M6 x 2.5 mm screws, and the M6 x 30 mm screws **9** are still securely tightened.

The plant stand is now ready for use (see Fig. G)