


CAUTION
Ensure Cupboard is square
before nailing back panel.

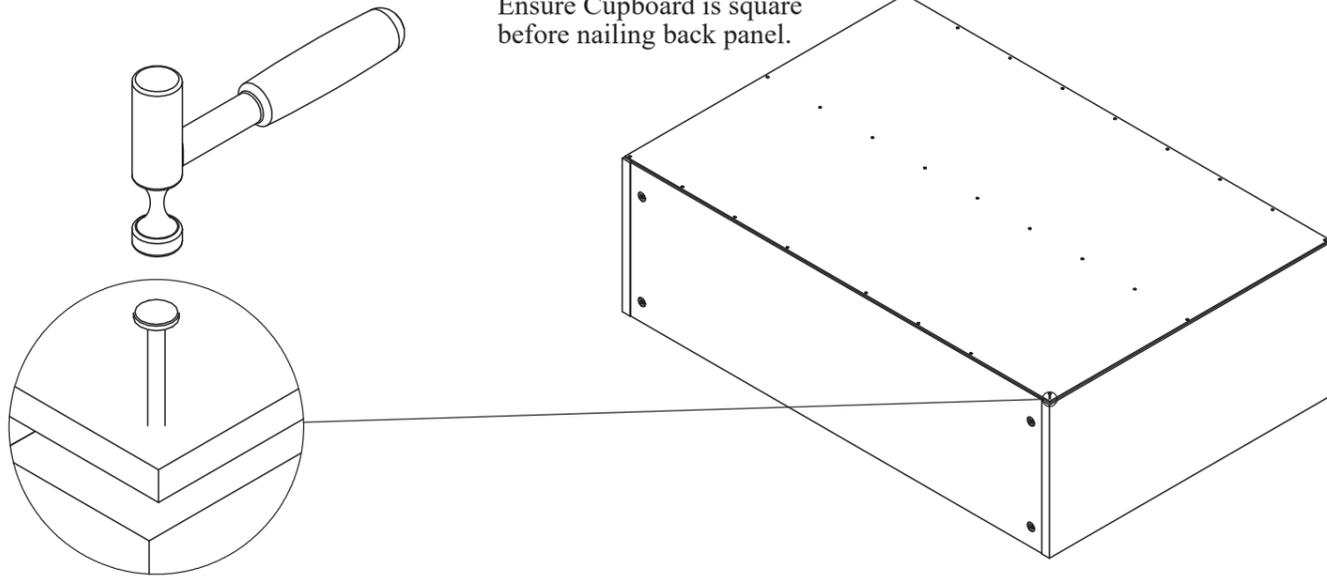

HMR Open Wall Unit 900mm

IMPORTANT

Before commencing Assembly:

- Read all instructions COMPLETELY. Detailed instructions are available by visiting
http://www.bedfordgroup.com.au/business_services/bedford_furniture/product_information
- Hardware kit contains small parts; keep out of reach of children.
- Ensure all listed parts are present.
- Required tools to assemble:
Philips head screw driver, Hammer & Wood Glue.
- Required assembly work surface should be solid, level, clean and flat.
- Ensure all melamine edges are facing to the front of the unit.

Customer Services Enquiries 1800 822 823

