


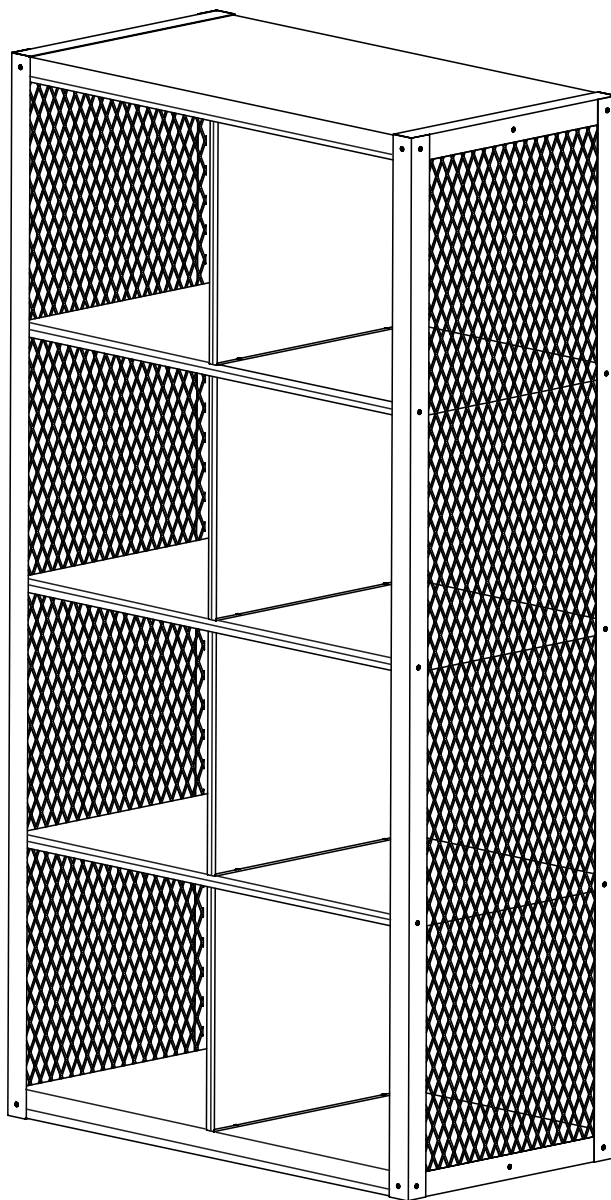

2X4 Diamond Mesh Cube Storage Unit

Installation Instructions













2X4 Diamond Mesh Cube Storage Unit

Installation Instructions

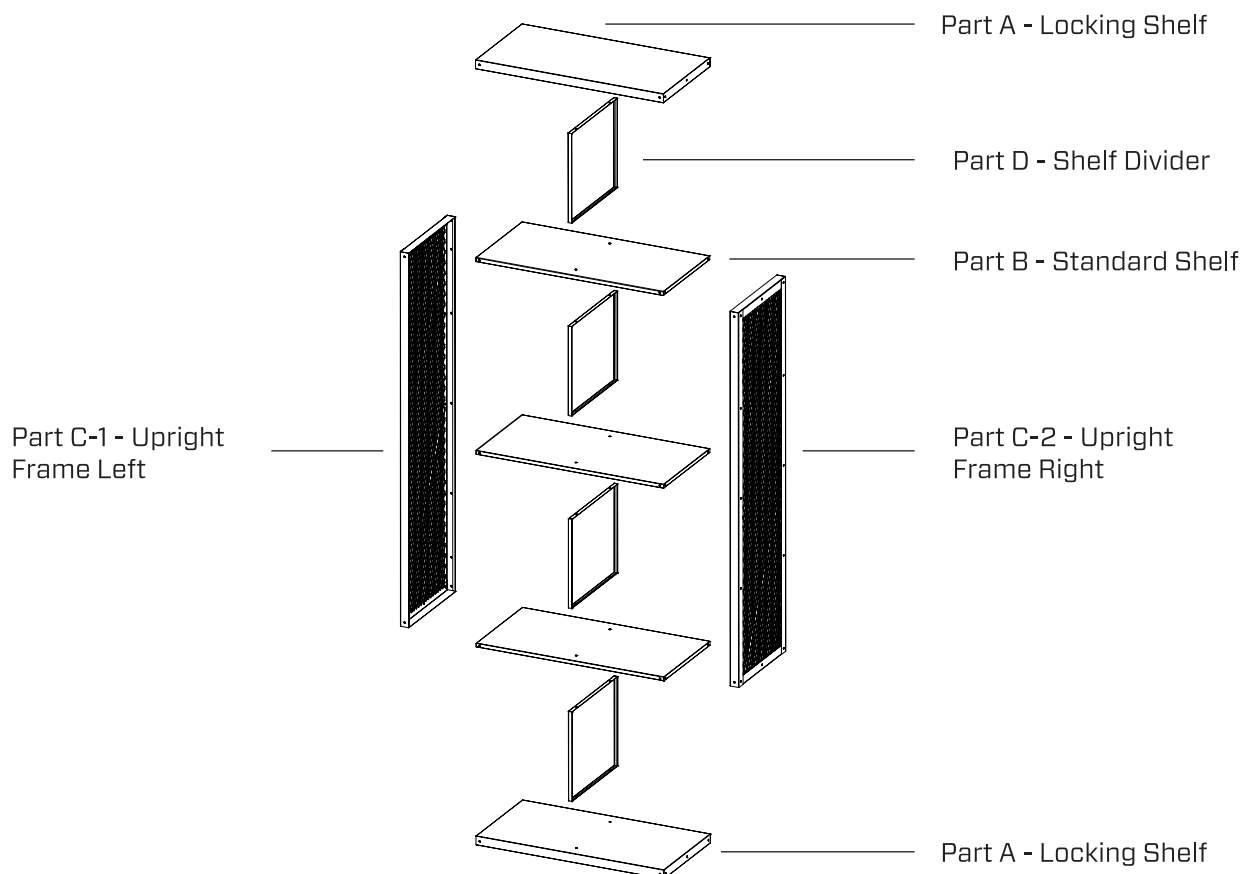Elements Supplied



Hardware Supplied

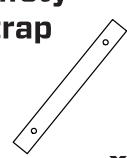M5 Bolt  x50	M5 Nut  x50	Hex Key  x1	M5 Screw  x4
Wall Plug  x4	Safety Strap  x1	Floor Protectors  x4	



2X4 Diamond Mesh Cube Storage Unit

Installation Instructions


Step 1

Lay the parts out on a flat surface. Carpet is best or make sure some protective cover is used over hard surfaces like concrete. Read all instructions before commencing assembly.

Step 2

Lay the **PART C-1 Upright LEFT** on its side and fit **1 x PART A Locking Shelf** in place by finger tightening **4 x M5 Nuts & Bolts** (1 nut & bolt on the top edge, 3 on the side).

NOTE: The extra holes should be on the floor side.

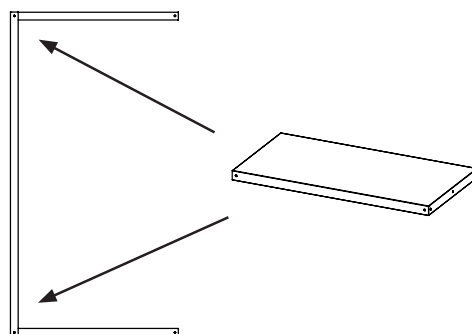


Step 3

Fix the second **PART A Locking Shelf** in place on the **C-1 Upright Frame LEFT** by finger tightening **4 x M5 Nuts & Bolts**.

Step 4


Fix the **C-2 Upright RIGHT** onto the **Top and Bottom Locking Shelves** with **8 x M5 Nuts & Bolts** and finger tighten.

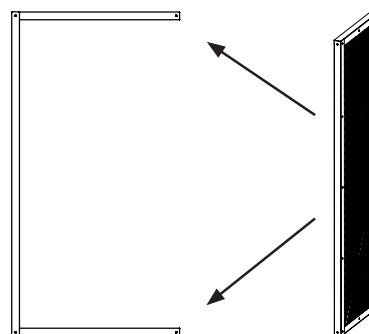

Step 5

Fit the **3 x Standard Shelves** in place with **4 x M5 Nut & Bolt** per shelf.

NOTE: Take care when installing the shelves to avoid scratching or scraping the finish.

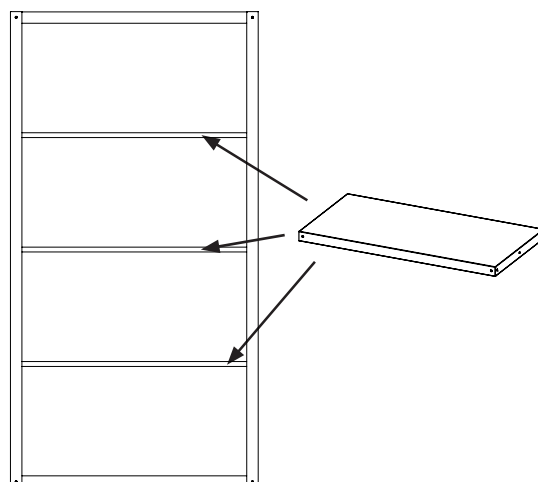



2X4 Diamond Mesh Cube Storage Unit


Installation Instructions

Step 6

Fit the **4x PART D SHELF DIVIDERS** in between the shelves. The holes in the Divider and middle of the shelves should line up.

- **6.1** Start at the bottom shelf – add a Divider between the Bottom Shelf and Shelf 1 and fix **2 x M5 Nuts & Bolts** into the bottom edge of the Divider and the Bottom Shelf. **DO NOT FIX** the Top edge of the Divider just yet.
- **6.2** Add a Divider between Shelf 1 and Shelf 2 . Fix the bottom edge of this Divider so that **2 x M5 Nuts & Bolts** also fix the **TOP** edge of the Divider below.
- **6.3** Repeat Step 6.2 for the Divider between Shelf 2 and Shelf 3.
- **6.4** Add the final Divider between Shelf 3 and the Top Shelf. Fix the bottom edge of this Divider so that **2 x M5 Nuts & Bolts** also fix the **TOP** edge of the Divider below. Fix final **2 x M5 Nuts & Bolts** through the **TOP** shelf and finger tighten.

NOTE: Take care when installing the dividers to avoid scratching or scraping the finish.

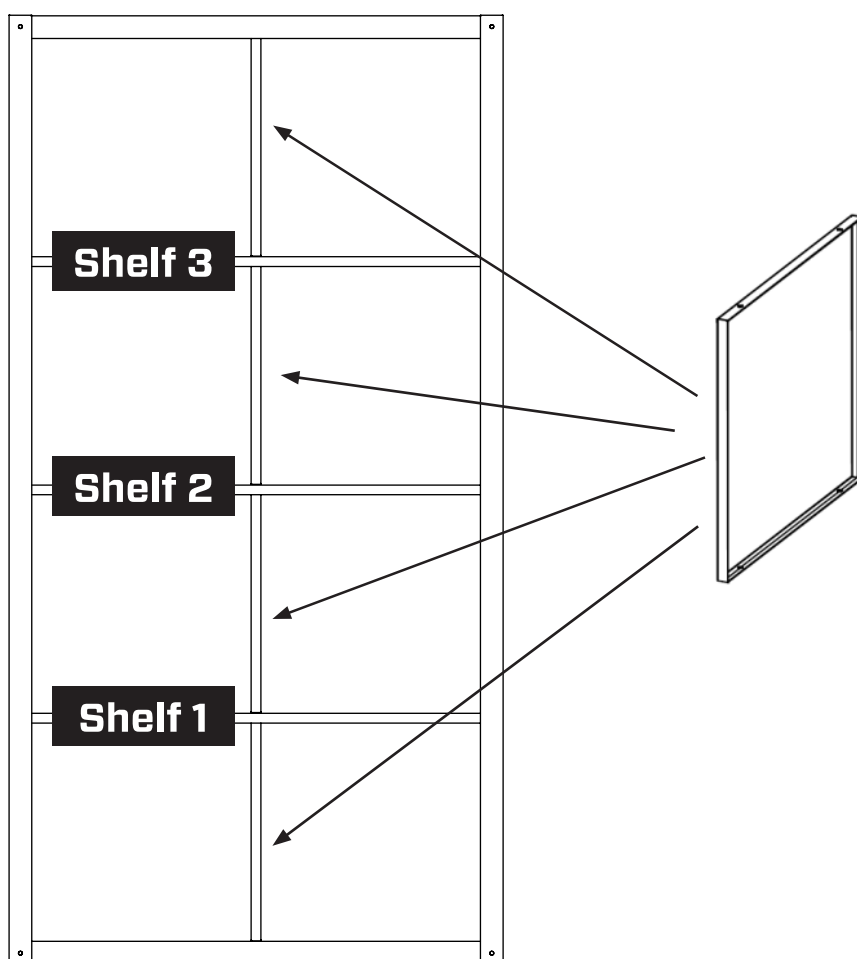



2X4 Diamond Mesh Cube Storage Unit

Installation Instructions


Step 7

Fix the **4 x Adhesive Floor** protecting feet to the **BOTTOM** of the **2 UPRIGHT FRAMES**

Step 8

Gently stand-up the assembled unit and fix remaining **M5 Nuts & Bolts** to the **Top & Bottom Locking Shelves**. The remaining holes were not accessible when unit was lying on the floor.

IMPORTANT: Also at this stage fix **The Safety Strap** with one of the remaining **M5 Nuts & Bolts**. Safety Strap must be fixed to the **TOP Locking Shelf** where it is joined to the upright frame, either left or right side depending on how you want to locate the assembled unit. **See Step 10.**

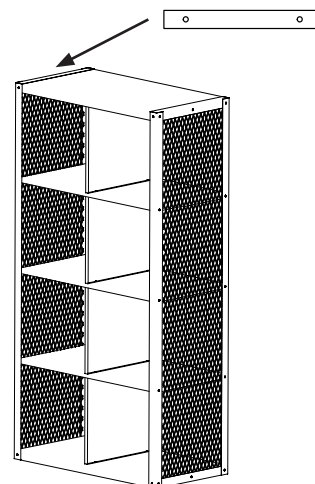

Step 9

It is now time to systematically go over the whole unit and tighten all of the **M5 Nuts & Bolts** to full tightness.

Step 10

IMPORTANT: This product is supplied with **4 x 50mm Screws and Wall Plugs** not suitable for Plasterboard or Dry wall. If fixing into these please purchase separate Plasterboard Anchors. You have the option of using the **50mm Screw and Plug** to fix to a wall or use one of these **50mm screws and plug** to fix the **Safety Strap** to the Wall.

NOTE: The Safety Strap must be fitted at the stop of the unit and fastened to a solid wall.