



V visionmirrors

Distributed by: Stein International Limited


Direct To Wall Instructions

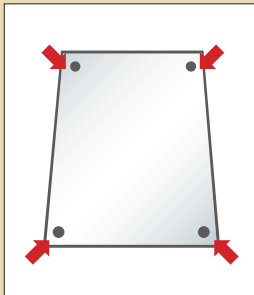


1. Peel off black circular packaging pads from corners of mirror back. This will not damage the mirror backing.

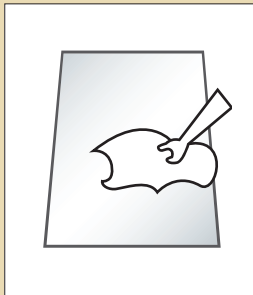

2. Clean rear of mirror to be free of any particles or dust.

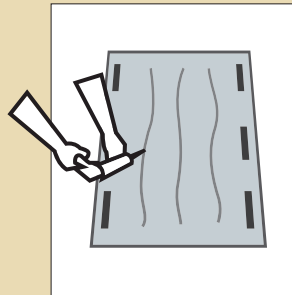


3. Place double sided foam tape and mirror adhesive in long even strips to rear of mirror.

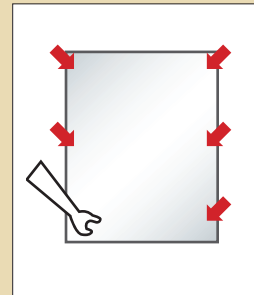


4. Place mirror on wall and press firmly into place.


Concealed Fixing Instructions

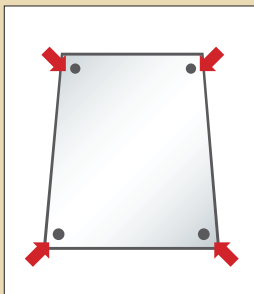


1. Peel off black circular packaging pads from corners of mirror back. This will not damage the mirror backing.

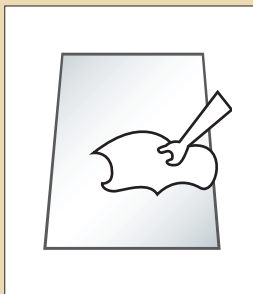

2. Clean rear of mirror to be free of any particles or dust.

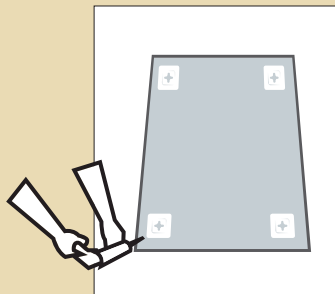

3. Glue 4 fixing plates evenly spaced on the corners of the mirror back using recommended adhesive (see below).

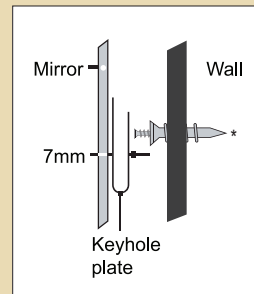

4. After allowing adhesive to cure (normally 72 hours), mount mirror to wall.
* Screws not included

WHEN INSTALLING LARGER MIRRORS IT WILL BE NECESSARY TO SUPPORT THE WEIGHT OF THE MIRROR UNTIL THE ADHESIVE HAS DRIED.

RECOMMENDED ADHESIVE

Selleys Liquid Nails
Mirror - Metal - Glass

RECOMMENDED TAPE

3M Scotch
Indoor Mounting Tape

WHEN HANDLING GLASS ALWAYS WEAR EYE PROTECTION

Available at
BUNNINGS
warehouse

Stein Helpline: 0800 00 22 99

Disclaimer: Stein International is not liable for any Vision Mirrors that have not been installed correctly.