


PILLÄR

# PLUSone

Modular Door - Installation Instructions

## RECESS MOUNT


FITTED **INSIDE** DOOR FRAME

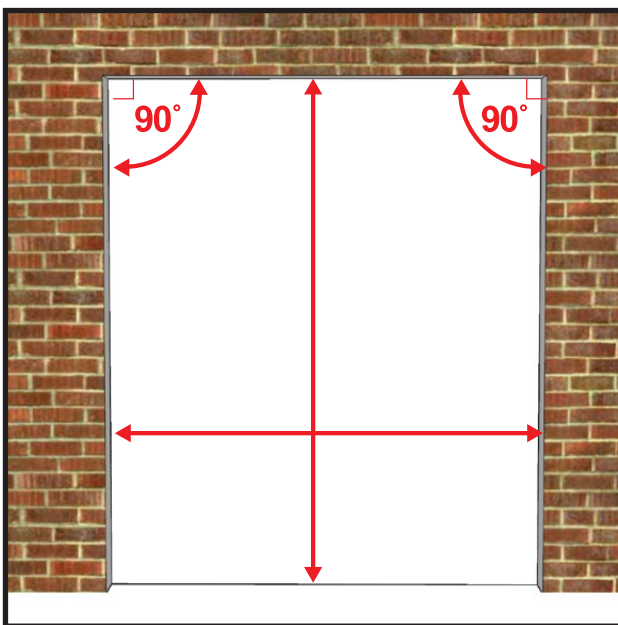

**STEP. 1.**

Measure opening width/height to ensure correct size requirements.

**DOOR MUST BE LEVEL & SQUARE**

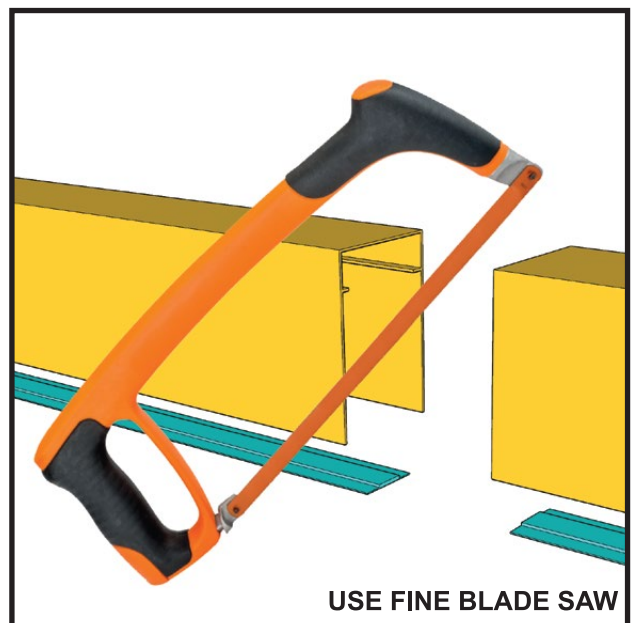


USE FINE BLADE SAW

**STEP. 2.**


Door width can be altered to suit opening, measure and trim Headrail and Bottom track as required.

**HEIGHT CANNOT BE ALTERED**

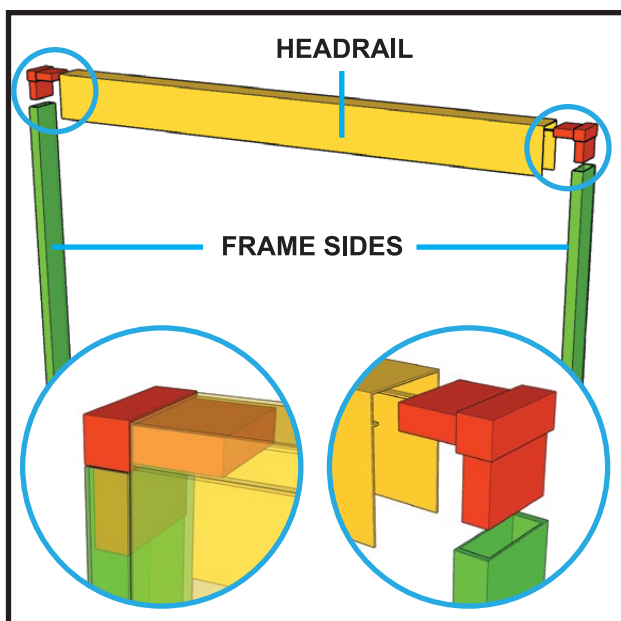


**STEP. 3.**

Construct door frame by connecting Headrail to frame sides using corner pieces provided.

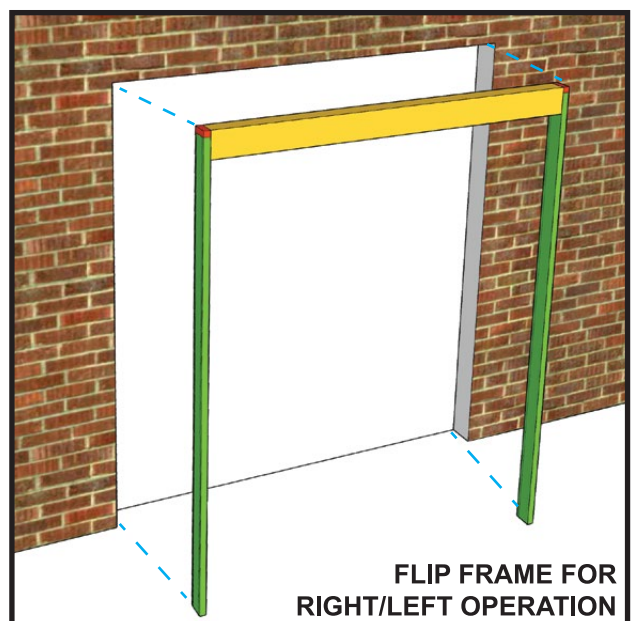


**STEP. 4.**

Position constructed frame into door opening ensuring frame is square and level.

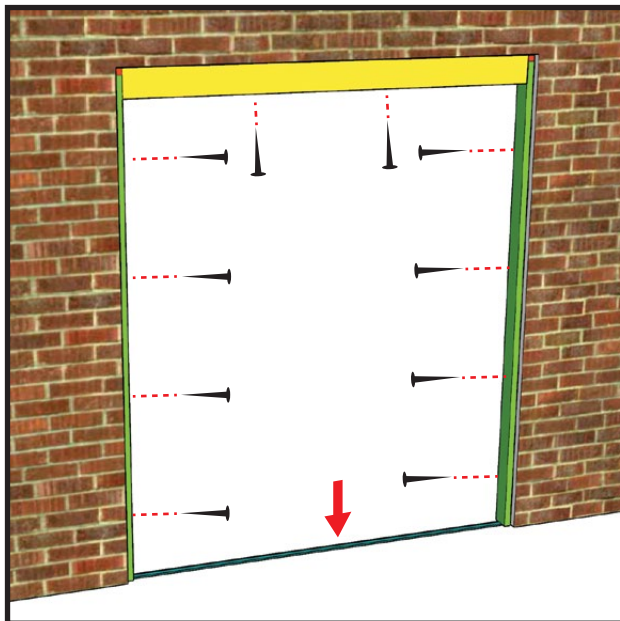


#### STEP. 5.

Secure door inside opening using screws provided. Clean base and apply bottom rail using tape provided.

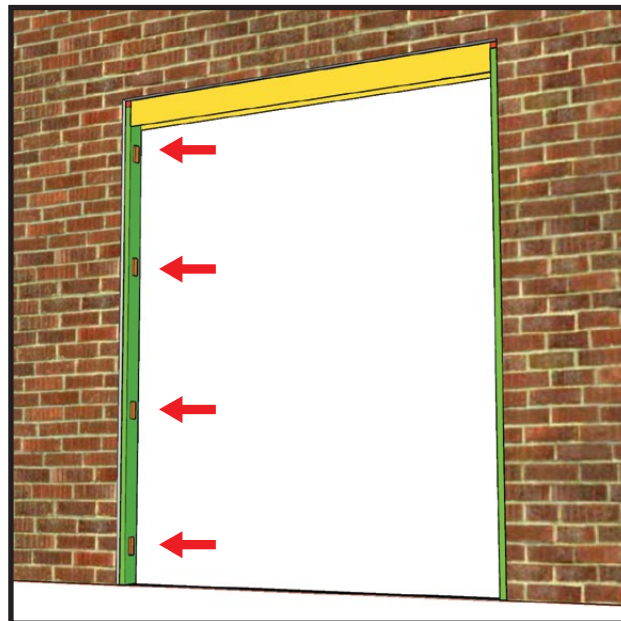


#### STEP. 6.

Ensure connector clips are securely installed at even intervals for door to clip onto.

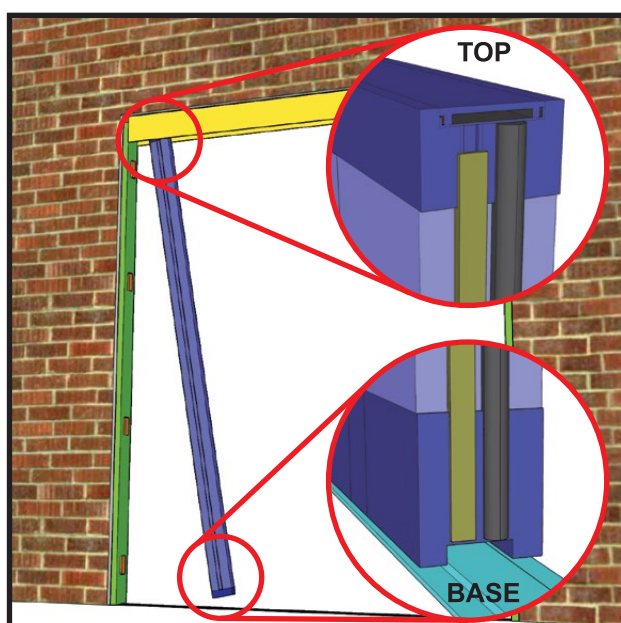


#### STEP. 7.

To install door, angle door up/under the headrail and straighten against the side frame with connectors. Ensure base of door is sitting correctly on base rail.

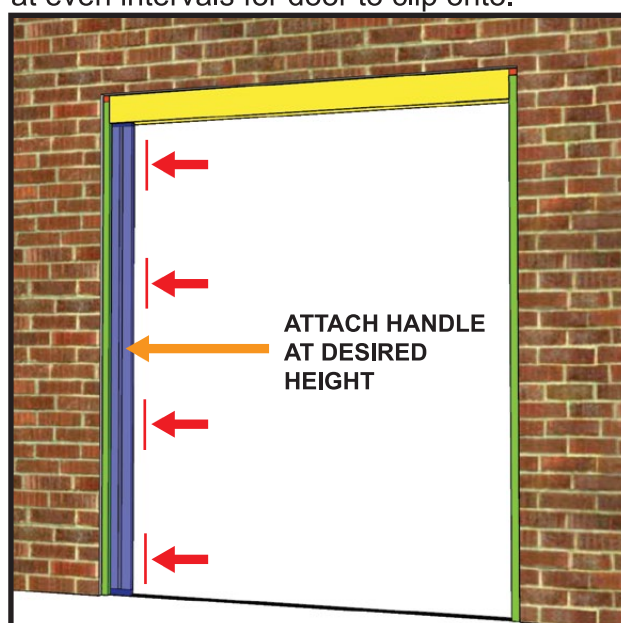

#### STEP. 8.

Using firm, even pressure, push door onto connector clips until door "clicks" into place. Ensure all clips are engaged correctly. Attach handle

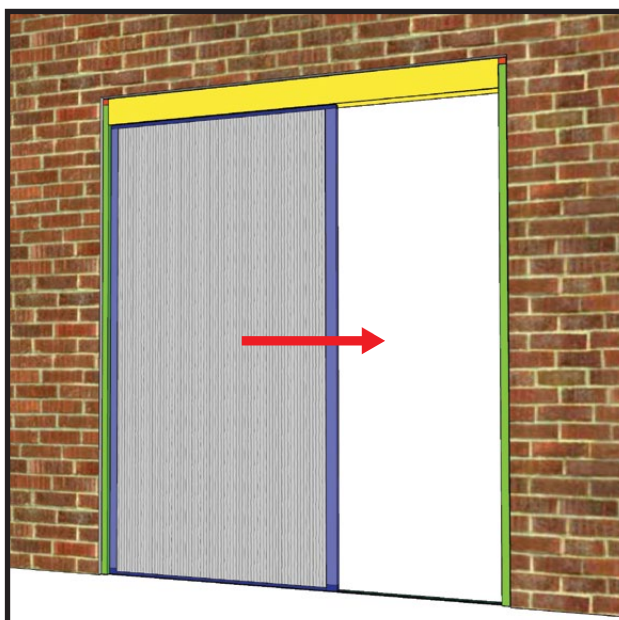

#### STEP. 9.

Test door to ensure smooth operation. Door should connect to magnetic closure at opposite end

 PILLÄR

**Customer Service**

1300 155 355

[info@pillarproducts.com.au](mailto:info@pillarproducts.com.au)

[www.pillarproducts.com.au](http://www.pillarproducts.com.au)

48 Access Way  
Carrum Downs, Vic, 3201

**DOOR IS NOT DESIGNED TO BE CLOSED IN HIGH WINDS OR STRONG WEATHER**