


Monaco Concertina Door

INSTALLATION INSTRUCTIONS

COMPONENTS

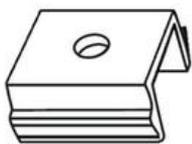


Fasteners x 5




Magnetic Plate x 2



Screw A x 15
(Headrail - Fasteners)

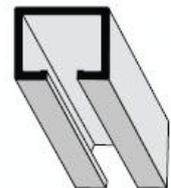


Headrail/Top Track x 1



Handle Screw x 2



Handle x 2




Screw B x 4
(Magnetic Plate)




Closure Channel x 1

STEP 1.

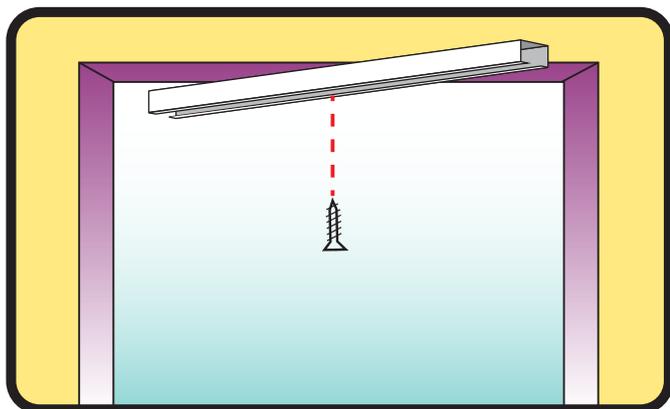


Centre Top Track in doorway and secure with a single screw (A) in the centre to allow track to pivot/turn.

STEP 2.

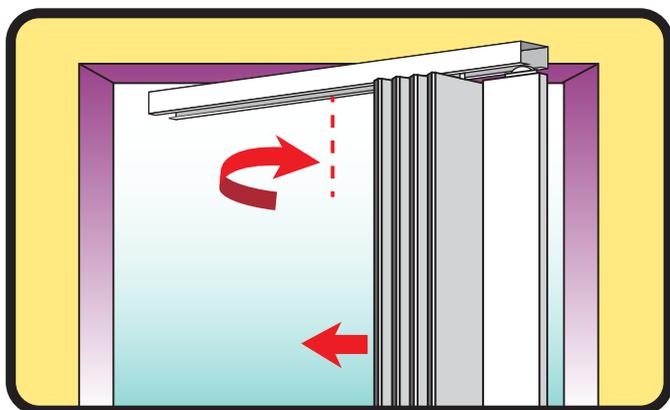


Pivot Top Track out from frame to enable the door panels to slide onto track. Align panel top rollers with track channel and insert into top track.

STEP 3.

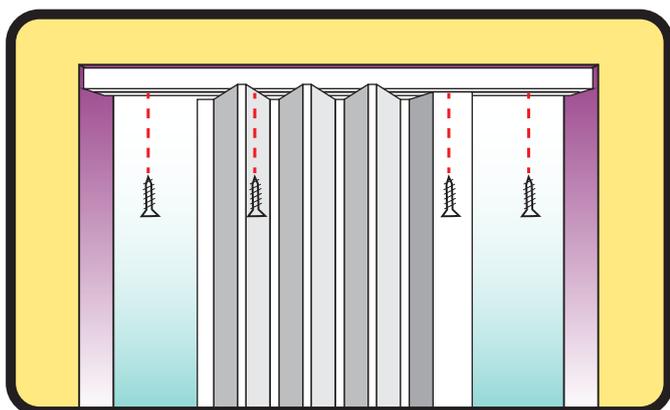


Re-align Top Track with doorway/frame and secure firmly into place with additional screws (A).

STEP 4.

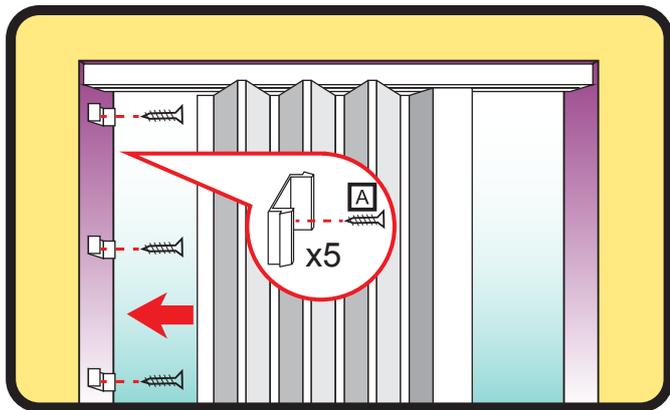


Align and attach side fasteners to wall or frame at equal spacings using screws (A).

STEP 5.

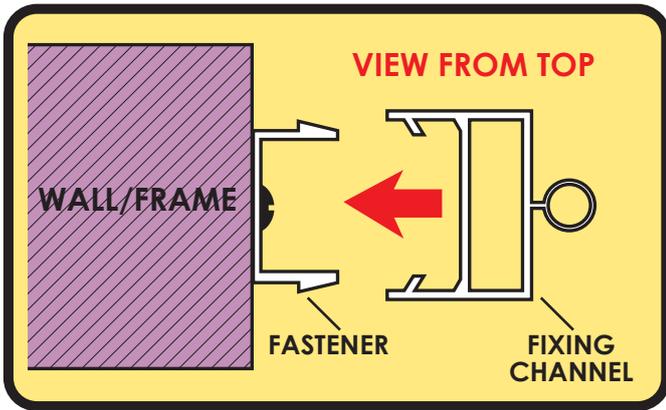


Firmly press the Fixing Channel onto Fasteners until locked into place

STEP 6.

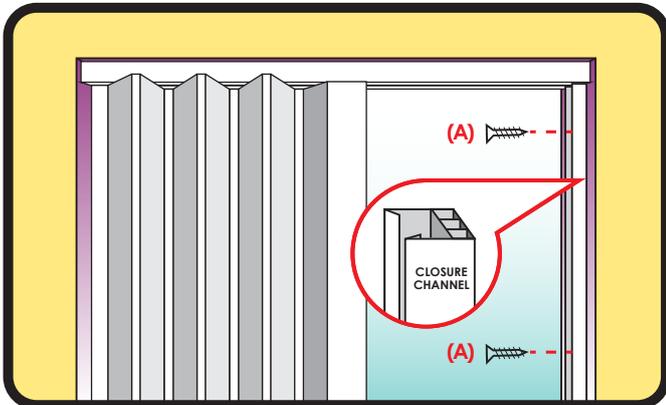



Align Closure Channel on opposite side and secure using screws provided (A).

STEP 7.

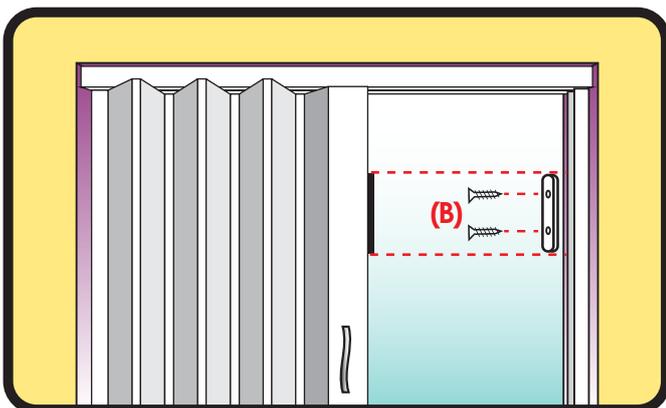

Align Magnetic Plates with Door Magnets and secure into Closure Channel using screws (B)

STEP 8.

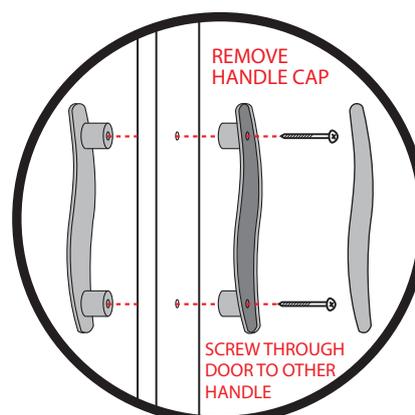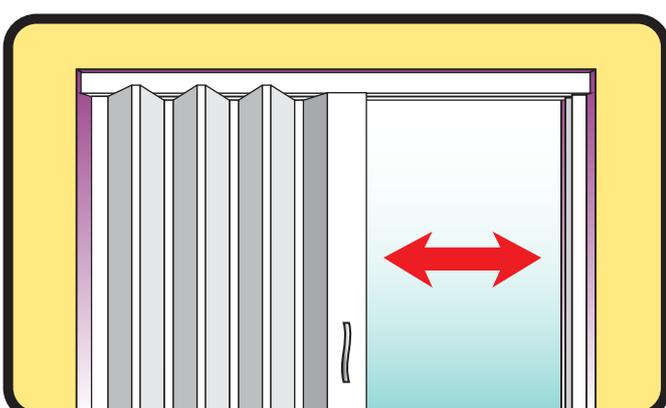

Fix Handle into place using Handle Screws.

Your Monaco Door is now ready to use.