



NOTE - THIS MIRROR SHOULD BE INSTALLED BY A PROFESSIONAL


- PRODUCT MAY VARY FROM INFORMATION PROVIDED ON THIS INSTALLATION GUIDE,
PLEASE CHECK YOUR MEASUREMENTS.

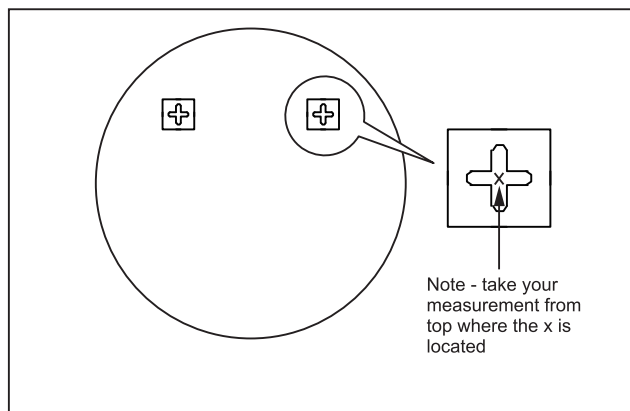


1. Take measurements from the back of the mirrors fixing points.

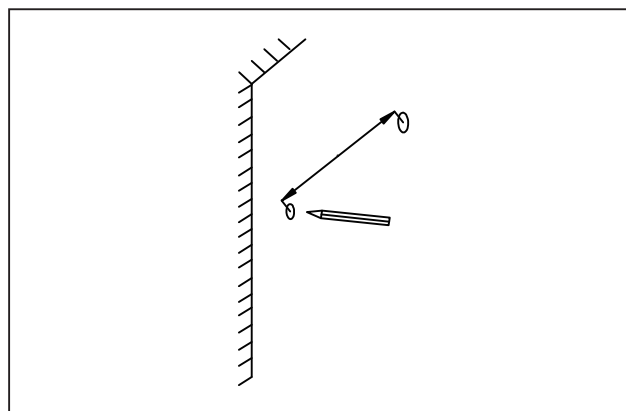


2. Mark out the fixing locations onto the wall.

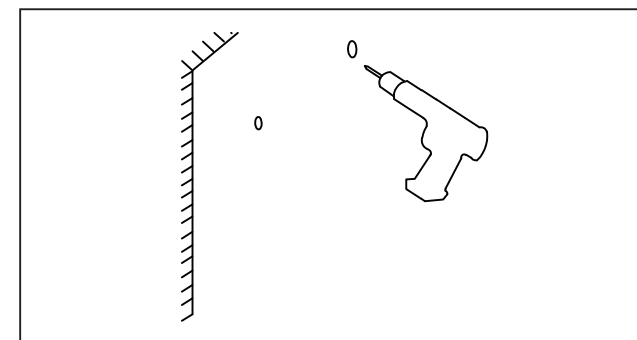


3. Drill 6mm diameter holes into the marked out location. Note - use appropriate drill bit (ie - masonry bit for tiles). Check wall plugs provided for accurate measurements.

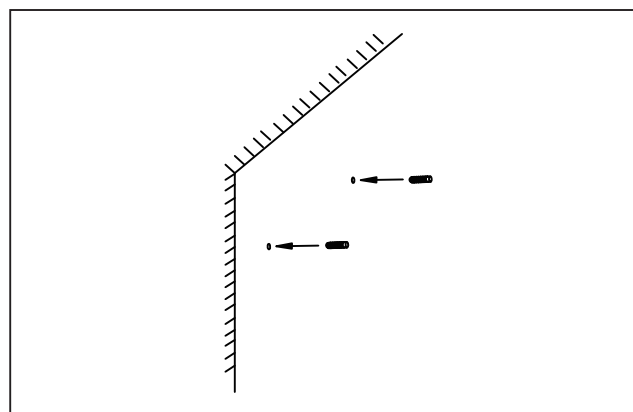

4. Insert the wall plugs provided.

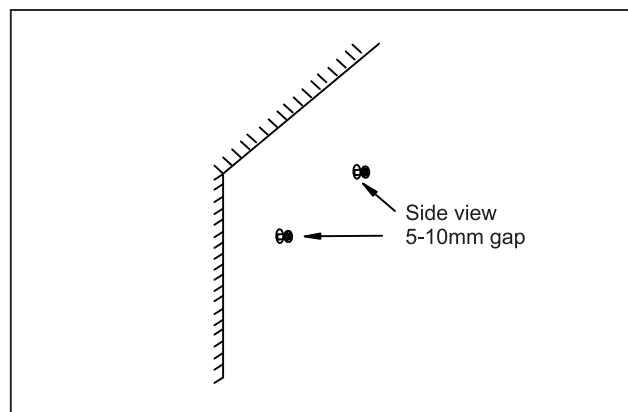

5. Install the screws into the wall plugs. Ensure they are exposed by approximately 5-10mm.

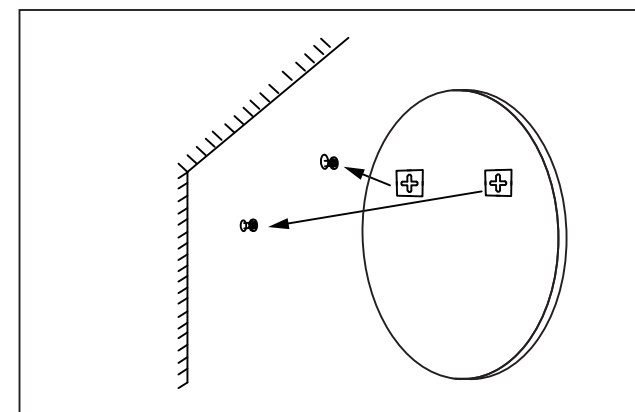

6. Fit the mirror onto the exposed screws.