

CHECK MEASURE


INSIDE WINDOW FRAME (REVEAL FIT) ONLY

Measure the inside of your window(s) frame across the width, height & depth as below.

STEP 1

Measure window inside width


Record the smallest measurement of the 3 (eg. Top, Middle or Bottom)

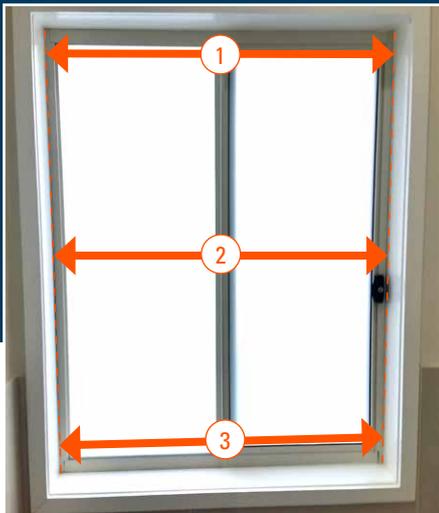

STEP 2

Measure window inside height

Record the smallest measurement of the 3 (eg. Left, Centre or Right)

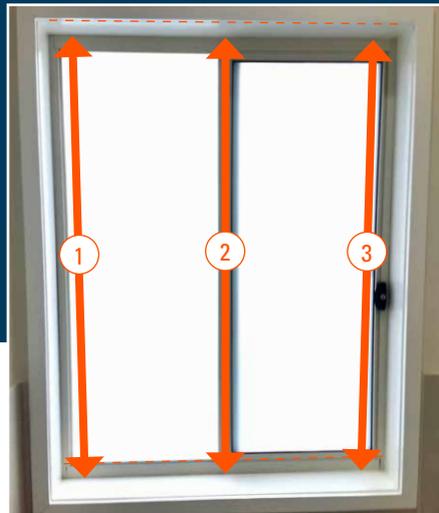

STEP 3


Measure window frame depth



NOTE: there needs to be **70mm depth minimum of complete clearance** from any obstacles, from the window frame edge.
Obstacles to look for: Mullions, Locks, Window Handles, Winders, Storm Bars etc



EXAMPLE Lock Handle

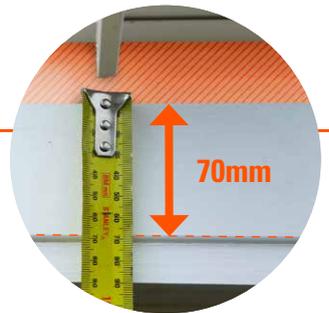

EXAMPLE Storm Bars