

PEAK[®] NO-DIG FENCING

Transform your yard in minutes



Installs in
minutes, no
digging required



Use around property
lines, gardens
and yards




Galvanised and
powder coated
for durability

SHEFFIELD




Fence Panel

870 mm W x 915 mm H

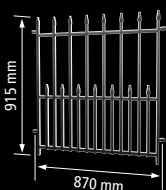


Fence Panel

1220 mm W x 915 mm H

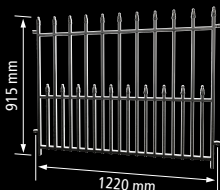

Gate

850 mm W x 915 mm H

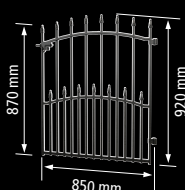


MANCHESTER




Fence Panel

870 mm W x 915 mm H

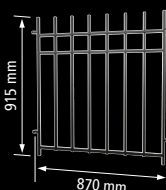


Fence Panel

1220 mm W x 915 mm H

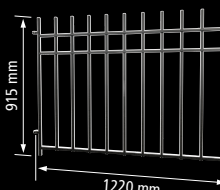

Gate

850 mm W x 915 mm H

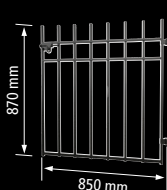

Post & Spikes

250 mm Spike

Recommended for all
posts except corners,
ends, and with gates.



Post




350 mm Spike

Recommended for use
on corners, ends, and
with gates.




EASY INSTALLATION

1

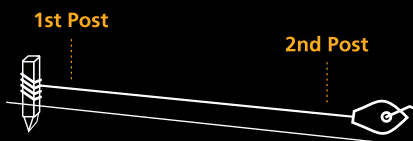

Determine where you will start the installation (typically at an end, corner, or gate). Then, use a string line to lay out the location of your fence.


2

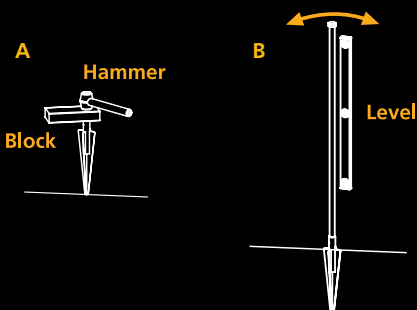

A: Position the first spike and hammer it into the ground until the top of the blades are flush with the surface.

B: Temporarily insert the post into the spike to ensure the spike is plumb.


3

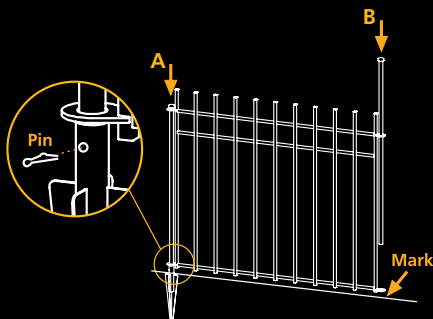

A: Insert the first post through the fence panel tabs and down into the spike. Then secure with pin (provided).

B: Insert the second post through the fence panel tabs and press the post into the soil to mark the location for the second spike.

4

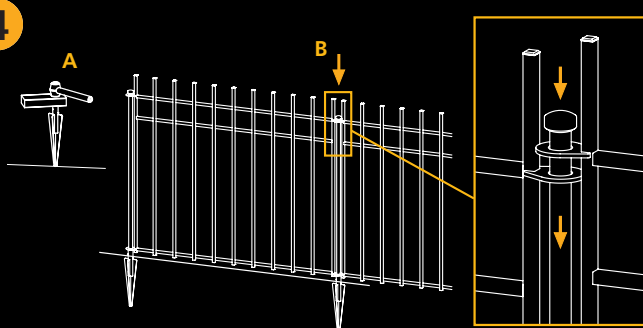

A: Hammer the second spike into the ground at the marked location.

B: Insert the second post through the fence panel tabs and down into the spike. Then secure with pin (provided). Repeat steps 3 and 4 for all remaining panels.