

AlfrescoPlus[™]

SINGLE / DOUBLE STORAGE MODULE AND SINGLE / DOUBLE SINK MODULE

ASSEMBLY INSTRUCTIONS



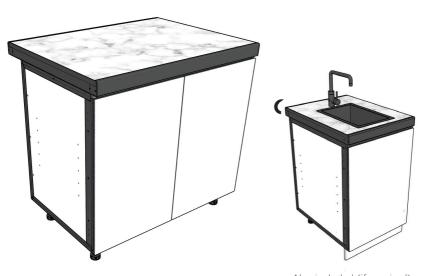



Scan the QR code to view the latest assembly videos and instruction manuals.



WARNING! - THIS IS A PERMANENT CONNECTION SYSTEM!

WHAT'S NEEDED?

Tools Required:

- Nylon mallot (Not Included)
- Philips head screwdriver with long shaft or battery drill with long bits (Not Included)
- Allen Keys x 2 (Included)

WHAT'S IN THE BOX?

Box 1 = Bench-top

Box 2 = Panels and Frames

Box 3 = Doors


PARTS INCLUDED:

WHITE PANELS AND FRAMES \times 6 PLINTH FEET \times 4 HARDWARE


• Screws and Bolts Pack x 1

Door Hinge Set
Door Hinge Set
X 2 (If Single Door)
X 4 (If Double Door)

Please note: Follow all instructions in the same sequence, either building the SINGLE/DOUBLE storage modules or the SINGLE/DOUBLE sink modules.

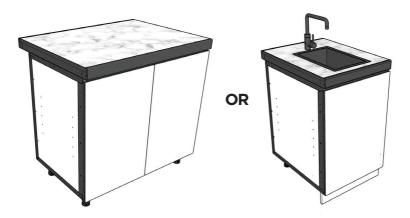

LAYOUT DIAGRAM

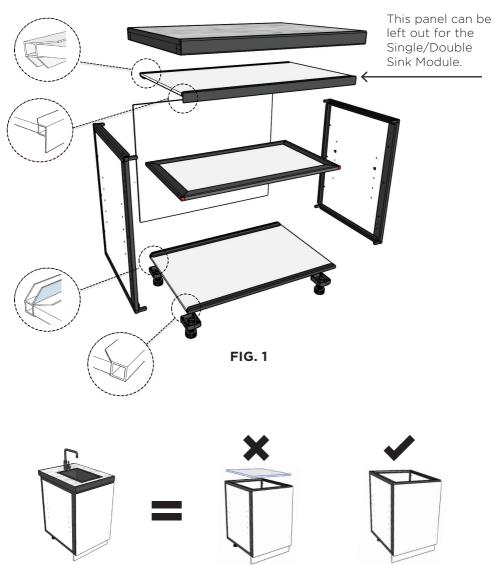

IF INSTALLING A SINK: Ensure that the top white panel is NOT installed into the frame. This panel is not provided with our standard sink module, however if you are converting a single or double solid top module into a sink top, then create asuitable cutout into the top of the cabinet by using a hole saw and jig saw if required, alternatively remove the top panel completely.

ASSEMBLING BACK PANEL

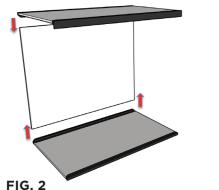




FIG. 3


ASSEMBLING SIDE WALL PANELS TO BACK PANEL





FIG. 4 FIG. 5

ASSEMBLING SHELF PANEL

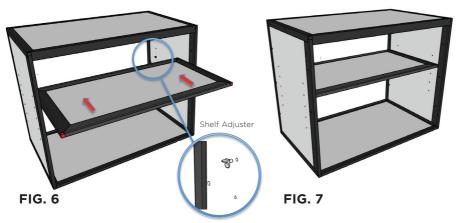

ASSEMBLING THE ADJUSTABLE PLINTH FEET


No pilot holes are used for plinth feet since the inside frame edge provides the guide. Place Plinth foot into corner of cabinet frame. Screw down with screws provided. Using a HAND SCREW DRIVER only gently screw in each of the screws. Do NOT use a battery screw driver, only a hand screw driver. Failing to use a hand screw driver may cause the screw to go too far through the PVC and damage the inner surface of the base. If easier, remove plinth shaft from baseplate then screw down base plate first. If desired move the front two plinth feet further back to create a deeper kick-plate position.






ATTACHING THE KICK PLATE

Please take note that the Kick plate provided is reversible, thereby giving you the choice between a black "shadow line" finish or stylish silver finish. The Kick plate Biscuit is used to connect onto more than one cabinet, thereby aligning the kick plate.

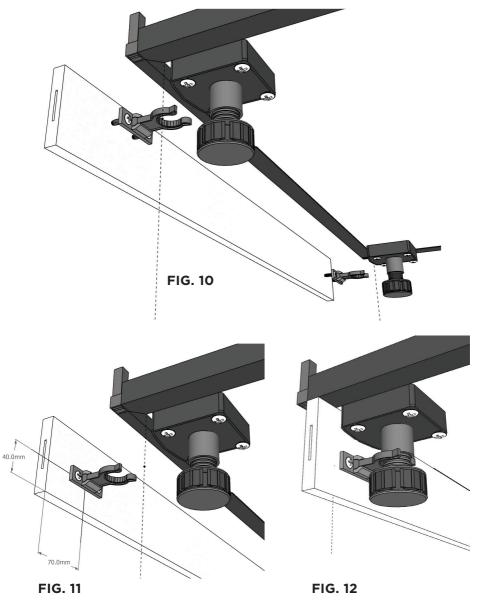

Choose the desired color face of kick plate. (Silver or Black). No pre drilled holes are possible due to this color choice. Self tapping screws are provided to attach the spring clip plate to the kick panel. The dimensions on Fig. 11 can be used as a guide only since the position of the plinth foot and the desired depth of the kick plate will vary depending on the choice of plinth foot installation position by the end user.

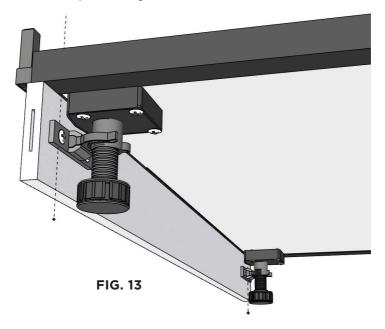

ASSEMBLING DOOR & HINGES

- To attach the hinge plate use a standard or power Phillips head screw driver.
 - The allocating holes are pre drilled into the frame.
- Attach all four-hinge plates when attaching two doors. Attach the two-left hinge plates when attaching a single door.



Illustration on attaching hinges to door panels by using the self-tapping screws provided.

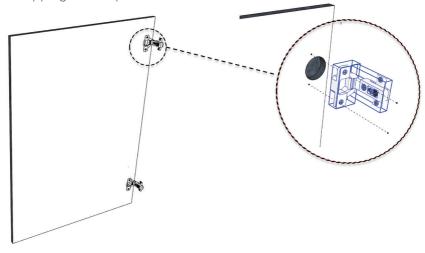


FIG. 15

DETAILED INSTRUCTIONS ON HOW TO CLIP ON THE DOORS USING CLIP-ON-HINGES



Clip On Hinge Instructions:


Clamp hinge on to the mounting plate as shown by direction arrow



Press down the hinge arm to lock the plate as shown



The door can be quickly removed by pushing the button



Unclipping the door from the mounting plate leaves all adjustments unaltered

Firstly align the front hinge section with the front section of the hingeplate, then press on the back of the hinge-plate, an audible "Click" should be heard if the door has been correctly hanged. Repeat the process to secure the bottom hinge and door.



The door should fully open and close as normal



FIG. 17

At this stage your progress should look like the above image.

STONE TOP PLACEMENT

The frame and stone top is pre-assembled for your ease of assembly.

NOTE: The Stone Top is deeper than the cabinet to allow for services.

IMPORTANT: Assemble and level your kitchen modules, fit your End Panels and then align your tops before fixing.

ESSENTIAL TIP: Ensure the frames and stone table are positioned on a stable flat surface to ensure alignment.

CAUTION: The stone table is very heavy, and a 2-person lift is required.

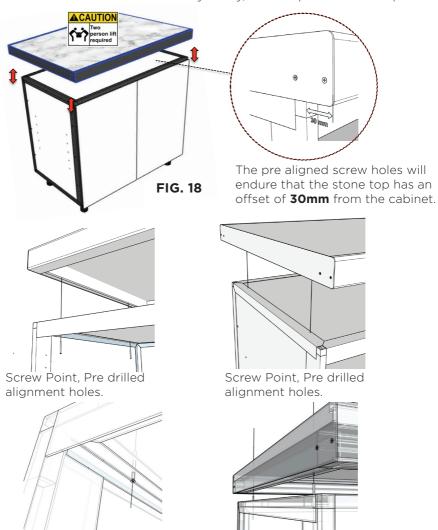




FIG. 19

HOW TO INSTALL THE SINK MODULE

Step 1: The top white panel is NOT required. If it has been installed, a suitable cutout in the top panel of the cabinet will need to be cut.

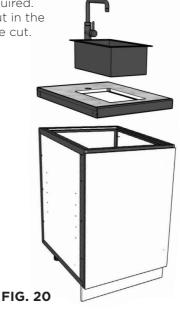




FIG. 21

This top white panel is provided in the single and double solid top module and is not required for the sink modules.

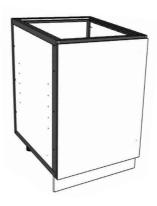


FIG. 22

This is how the module should look before the top is placed on.


Step 2: Install the stone top as per the steps provided



Step 4: Lower the sink into the pre cut hole in the stone. If a permanent installation is required, liquid silicone adhesive may be used under the metal flange of the sink.



Step 3: Align the sink with the pre cut hole in the stone top.

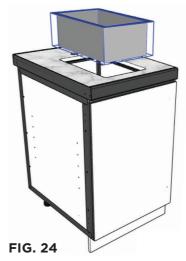


Step 5: Place the sink tap into the pre cut hole provided. Screw the base of the tap into place by screwing from the bottom of the sink. Your tap will then be securely in position. Please note a registered plumper is now required to plumb into your water




HOW TO INSTALL A DOOR HANDLE

Take note that the door handles can be placed vertically or horizontally as preferred by you.

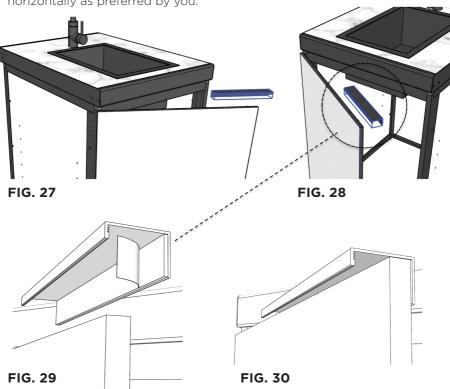

Remove the Double sided Tape from the inside of the handle. Ensure you align the edge of the handle to the edge of the door before touching the tape to the door panel. Carefully press the door handle to the door for a permanent adhesion.

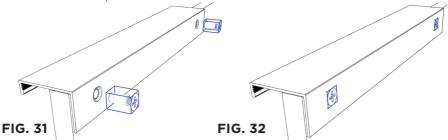

Additional screws are provided for a very secure connection, although you need to drill your own holes due to the handle having multiple possible positions as desired. These additional screw fixtures and not required under normal use.

For any queries or assistance call:

Customer Service Australia Only

1300 174 876 service.group@sitro.com.au

Hours of operation: Monday to Friday 8am - 5pm

Do not return to place of purchase

Keep your purchase receipt, this will be required to make any claims under the warranty.